

# COLORADO PXL CURVE 1

## DMX Chart



---

## TABLE OF CONTENTS

DMX Channel Assignments and Values .....	1
Control Chart.....	1
Strobe Chart.....	1
Color Macro Chart.....	1
Cells Macro Chart .....	3
Advanced .....	4
Standard.....	6
Basic High Resolution .....	7
Basic Raw .....	8
Basic .....	9
<b>Contact Us .....</b>	<b>10</b>

## DMX Channel Assignments and Values

### Control Chart

Value	Percent/Setting	Value	Percent/Setting
000 ⇔ 005	No function	083	PWM 2000 Hz
006 ⇔ 010	All motors reset	084	Reserved for future use
011	Reserved for future use	085	PWM 4000 Hz
012	Zoom reset	086	PWM 6000 Hz
013	Pan/tilt reset	087	PWM 15 kHz
014 ⇔ 019	Reserved for future use	088 ⇔ 099	Reserved for future use
020	Linear dimmer curve	100	CMY (subtractive) color mix
021	Square dimmer curve	101	RGBW (additive) color mix
022	I-Square dimmer curve	102 ⇔ 109	Reserved for future use
023	S-Curve dimmer curve	110	Full mode
024 ⇔ 032	Reserved for future use	111	White mode
033	Smooth dimmer	112 ⇔ 149	No function
034	Fast dimmer	150	No blackout on Pan/Tilt
035 ⇔ 059	No function	151	Blackout on Pan/Tilt
060	Pan normal	152 ⇔ 159	Reserved for future use
061	Pan reverse	160	No blackout on data loss
062	Tilt normal	161	Blackout on data loss
063	Tilt reverse	162 ⇔ 199	Reserved for future use
064 ⇔ 079	Reserved for future use	200	Reset defaults
080	PWM 600 Hz	201 ⇔ 250	Reserved for future use
081	Reserved for future use	251 ⇔ 255	No function
082	PWM 1200 Hz		

### Strobe Chart

Value	Percent/Setting	Value	Percent/Setting	Value	Percent/Setting
000 ⇔ 019	Off	110 ⇔ 124	Random strobe*	185 ⇔ 189	On
020 ⇔ 024	On	125 ⇔ 129	On	190 ⇔ 204	Random pulse strobe*
025 ⇔ 064	Strobe*	130 ⇔ 144	Random strobe 100–0%*	205 ⇔ 209	On
065 ⇔ 069	On	145 ⇔ 149	On	210 ⇔ 224	Strobe 0–100–0%*
070 ⇔ 084	Strobe 100–0%*	150 ⇔ 164	Random strobe 0–100%*	225 ⇔ 229	On
085 ⇔ 089	On	165 ⇔ 169	On	230 ⇔ 244	Pulse strobe*
090 ⇔ 104	Strobe 0–100%*	170 ⇔ 184	Pulse strobe	245 ⇔ 255	On
105 ⇔ 109	On				

\*All strobe value ranges go from fast to slow

### Color Macro Chart

Value	Setting	Red	Green	Blue	White	Value	Setting	Red	Green	Blue	White
000	No function	–	–	–	–	087	Green	000	255	000	000
001 ⇔ 002	3200K	243	211	000	055	088 ⇔ 124	Green to yellow	+	255	000	000
003 ⇔ 004	4000K	177	177	000	100	125	Yellow	255	255	000	000
005 ⇔ 006	2700K	255	175	000	050	126 ⇔ 162	Yellow to red	255	-	000	000
007 ⇔ 008	4200K	251	255	008	145	163	Red	255	000	000	000
009 ⇔ 010	5600K	109	146	000	210	164 ⇔ 201	Red to magenta	255	000	+	000
011 ⇔ 012	6500K	106	157	012	211	202	Magenta	255	000	255	000
013 ⇔ 014	7500K	066	127	011	255	203 ⇔ 238	Magenta to blue	-	000	255	000
015 ⇔ 048	Blue to cyan	000	+	255	000	239	Blue	000	000	255	000

# DMX CHART



V1.260319

Value	Setting	Red	Green	Blue	White	Value	Setting	Red	Green	Blue	White
049	Cyan	000	255	255	000	240 ⇔ 247	Color fade, fast to slow				
050 ⇔ 086	Cyan to green	000	255	-	000	248 ⇔ 255	Color snap, fast to slow				

**Cells Macro Chart**

Value	Setting	Value	Setting
000 ⇔ 015	No function	136 ⇔ 137	Macro 36
016 ⇔ 017	Macro 1	138 ⇔ 139	Macro 37
018 ⇔ 019	Macro 2	140 ⇔ 141	Macro 38
020 ⇔ 021	Macro 3	142 ⇔ 143	Macro 39
022 ⇔ 023	Macro 4	144 ⇔ 145	Macro 40
024 ⇔ 025	Macro 5	146 ⇔ 147	Macro 41
026 ⇔ 027	Macro 6	148 ⇔ 149	Macro 42
028 ⇔ 029	Macro 7	150 ⇔ 151	Macro 43
030 ⇔ 031	Macro 8	152 ⇔ 153	Macro 44
032 ⇔ 033	Macro 9	154 ⇔ 155	Macro 45
034 ⇔ 035	Macro 10	156 ⇔ 157	Macro 46
036 ⇔ 037	Macro 11	158 ⇔ 159	Macro 47
038 ⇔ 039	Macro 12	160 ⇔ 161	Macro 48
040 ⇔ 041	Macro 13	162 ⇔ 163	Macro 49
042 ⇔ 043	Macro 14	164 ⇔ 165	Macro 50
044 ⇔ 045	Macro 15	166 ⇔ 167	Macro 51
046 ⇔ 047	Macro 16	168 ⇔ 169	Macro 52
048 ⇔ 049	Macro 17	170 ⇔ 171	Macro 53
050 ⇔ 051	Macro 18	172 ⇔ 173	Macro 54
052 ⇔ 053	Macro 19	174 ⇔ 175	Macro 55
054 ⇔ 055	Macro 20	176 ⇔ 177	Macro 56
056 ⇔ 057	Macro 21	178 ⇔ 179	Macro 57
058 ⇔ 059	Macro 22	180 ⇔ 181	Macro 58
060 ⇔ 061	Macro 23	182 ⇔ 183	Macro 59
062 ⇔ 063	Macro 24	184 ⇔ 185	Macro 60
064 ⇔ 065	Macro 25	186 ⇔ 187	Macro 61
066 ⇔ 067	Macro 26	188 ⇔ 189	Macro 62
068 ⇔ 069	Macro 27	190 ⇔ 191	Macro 63
070 ⇔ 071	Macro 28	192 ⇔ 193	Macro 64
072 ⇔ 073	Macro 29	194 ⇔ 195	Macro 65
074 ⇔ 075	Macro 30	196 ⇔ 197	Macro 66
076 ⇔ 077	Macro 31	198 ⇔ 199	Macro 67
078 ⇔ 079	Macro 32	200 ⇔ 201	Macro 68
080 ⇔ 081	Macro 33	202 ⇔ 203	Macro 69
082 ⇔ 083	Macro 34	204 ⇔ 255	Macro 70 (main macro)
084 ⇔ 135	Macro 35 (main macro)		

# DMX CHART



V1.260319

## Advanced

Channel	Function	Value	Percent/Setting
1	Pan	000 ⇔ 255	0–100%
2	Fine pan	000 ⇔ 255	16-bit 0–100%
3	Tilt	000 ⇔ 255	0–100%
4	Fine tilt	000 ⇔ 255	16-bit 0–100%
5	Pan/Tilt speed	000 ⇔ 255	Fast to slow
6	Control	000 ⇔ 255	See the <a href="#">Control Chart</a>
7	Center dimmer	000 ⇔ 255	0–100%
8	Center fine dimmer	000 ⇔ 255	16-bit 0–100%
9	Center red (cyan)	000 ⇔ 255	0–100%
10	Center fine red (cyan)	000 ⇔ 255	16-bit 0–100%
11	Center green (magenta)	000 ⇔ 255	0–100%
12	Center fine green (magenta)	000 ⇔ 255	16-bit 0–100%
13	Center blue (yellow)	000 ⇔ 255	0–100%
14	Center fine blue (yellow)	000 ⇔ 255	16-bit 0–100%
15	Center white	000 ⇔ 255	0–100%
16	Center fine white	000 ⇔ 255	16-bit 0–100%
17	Center CTC	000 ⇔ 009	No function
		010 ⇔ 255	Color temperature correction, 2700–10000K
18	Zoom	000 ⇔ 255	0–100%
19	Fine zoom	000 ⇔ 255	16-bit 0–100%
20	Center strobe	000 ⇔ 255	See the <a href="#">Strobe Chart</a>
21	Center color macro	000 ⇔ 255	See the <a href="#">Color Macro Chart</a>
22	CW cell 1 dimmer	000 ⇔ 255	0–100%
23	CW cell 1 fine dimmer	000 ⇔ 255	16-bit 0–100%
24	WW cell 1 dimmer	000 ⇔ 255	0–100%
25	WW cell 1 fine dimmer	000 ⇔ 255	16-bit 0–100%
26	CW/WW cell 1 CTC	000 ⇔ 009	No function
		010 ⇔ 255	Color temperature correction presets
27	CW cell 2 dimmer	000 ⇔ 255	0–100%
28	CW cell 2 fine dimmer	000 ⇔ 255	16-bit 0–100%
29	WW cell 2 dimmer	000 ⇔ 255	0–100%
30	WW cell 2 fine dimmer	000 ⇔ 255	16-bit 0–100%
31	CW/WW cell 2 CTC	000 ⇔ 009	No function
		010 ⇔ 255	Color temperature correction presets
32	CW cell 3 dimmer	000 ⇔ 255	0–100%
33	CW cell 3 fine dimmer	000 ⇔ 255	16-bit 0–100%
34	WW cell 3 dimmer	000 ⇔ 255	0–100%
35	WW cell 3 fine dimmer	000 ⇔ 255	16-bit 0–100%
36	CW/WW cell 3 CTC	000 ⇔ 009	No function
		010 ⇔ 255	Color temperature correction presets
37	CW cell 4 dimmer	000 ⇔ 255	0–100%
38	CW cell 4 fine dimmer	000 ⇔ 255	16-bit 0–100%
39	WW cell 4 dimmer	000 ⇔ 255	0–100%
40	WW cell 4 fine dimmer	000 ⇔ 255	16-bit 0–100%
41	CW/WW cell 4 CTC	000 ⇔ 009	No function
		010 ⇔ 255	Color temperature correction presets
42	CW cell 5 dimmer	000 ⇔ 255	0–100%

Channel	Function	Value	Percent/Setting
43	CW cell 5 fine dimmer	000 ⇔ 255	16-bit 0–100%
44	WW cell 5 dimmer	000 ⇔ 255	0–100%
45	WW cell 5 fine dimmer	000 ⇔ 255	16-bit 0–100%
46	CW/WW cell 5 CTC	000 ⇔ 009	No function
		010 ⇔ 255	Color temperature correction presets
47	CW cell 6 dimmer	000 ⇔ 255	0–100%
48	CW cell 6 fine dimmer	000 ⇔ 255	16-bit 0–100%
49	WW cell 6 dimmer	000 ⇔ 255	0–100%
50	WW cell 6 fine dimmer	000 ⇔ 255	16-bit 0–100%
51	CW/WW cell 6 CTC	000 ⇔ 009	No function
		010 ⇔ 255	Color temperature correction presets
52	CW cell 7 dimmer	000 ⇔ 255	0–100%
53	CW cell 7 fine dimmer	000 ⇔ 255	16-bit 0–100%
54	WW cell 7 dimmer	000 ⇔ 255	0–100%
55	WW cell 7 fine dimmer	000 ⇔ 255	16-bit 0–100%
56	CW/WW cell 7 CTC	000 ⇔ 009	No function
		010 ⇔ 255	Color temperature correction presets
57	CW cell 8 dimmer	000 ⇔ 255	0–100%
58	CW cell 8 fine dimmer	000 ⇔ 255	16-bit 0–100%
59	WW cell 8 dimmer	000 ⇔ 255	0–100%
60	WW cell 8 fine dimmer	000 ⇔ 255	16-bit 0–100%
61	CW/WW cell 8 CTC	000 ⇔ 009	No function
		010 ⇔ 255	Color temperature correction presets
62	CW cell strobe	000 ⇔ 255	See the <a href="#">Strobe Chart</a>
63	CW cell pattern	000	No function
		001 ⇔ 215	Pattern 1–215
		216 ⇔ 255	Pattern 216
64	CW cell macro	000 ⇔ 255	See the <a href="#">Cells Macro Chart</a>
65	CW cell macro speed	000 ⇔ 127	Fast to slow
		128	Stop
		129 ⇔ 255	Slow to fast
66	CW cell macro delay	000 ⇔ 255	Fast to slow
67	WW cell strobe	000 ⇔ 255	See the <a href="#">Strobe Chart</a>
68	WW strobe cells pattern	000	No function
		001 ⇔ 215	Pattern 1–215
		216 ⇔ 255	Pattern 216
69	WW strobe cells macro	000 ⇔ 255	See the <a href="#">Cells Macro Chart</a>
70	WW strobe cells macro speed	000 ⇔ 127	Fast to slow
		128	Stop
		129 ⇔ 255	Slow to fast
71	WW strobe cells macro delay	000 ⇔ 255	Fast to slow

# DMX CHART



V1.260319

## Standard

Channel	Function	Value	Percent/Setting
1	Pan	000 ⇔ 255	0–100%
2	Fine pan	000 ⇔ 255	16-bit 0–100%
3	Tilt	000 ⇔ 255	0–100%
4	Fine tilt	000 ⇔ 255	16-bit 0–100%
5	Pan/Tilt speed	000 ⇔ 255	Fast to slow
6	Control	000 ⇔ 255	See the <a href="#">Control Chart</a>
7	Center dimmer	000 ⇔ 255	0–100%
8	Center fine dimmer	000 ⇔ 255	16-bit 0–100%
9	Center red	000 ⇔ 255	0–100%
10	Center green	000 ⇔ 255	0–100%
11	Center blue	000 ⇔ 255	0–100%
12	Center white	000 ⇔ 255	0–100%
13	Center CTC	000 ⇔ 009	No function
		010 ⇔ 255	Color temperature correction, 2700–10000K
14	Zoom	000 ⇔ 255	0–100%
15	Fine zoom	000 ⇔ 255	16-bit 0–100%
16	Center strobe	000 ⇔ 255	See the <a href="#">Strobe Chart</a>
17	Center color macro	000 ⇔ 255	See the <a href="#">Color Macro Chart</a>
18	CW cell 1 dimmer	000 ⇔ 255	0–100%
19	WW cell 1 dimmer	000 ⇔ 255	0–100%
20	CW cell 2 dimmer	000 ⇔ 255	0–100%
21	WW cell 2 dimmer	000 ⇔ 255	0–100%
22	CW cell 3 dimmer	000 ⇔ 255	0–100%
23	WW cell 3 dimmer	000 ⇔ 255	0–100%
24	CW cell 4 dimmer	000 ⇔ 255	0–100%
25	WW cell 4 dimmer	000 ⇔ 255	0–100%
26	CW cell 5 dimmer	000 ⇔ 255	0–100%
27	WW cell 5 dimmer	000 ⇔ 255	0–100%
28	CW cell 6 dimmer	000 ⇔ 255	0–100%
29	WW cell 6 dimmer	000 ⇔ 255	0–100%
30	CW cell 7 dimmer	000 ⇔ 255	0–100%
31	WW cell 7 dimmer	000 ⇔ 255	0–100%
32	CW cell 8 dimmer	000 ⇔ 255	0–100%
33	WW cell 8 dimmer	000 ⇔ 255	0–100%
34	CW/WW cells CTC	000 ⇔ 009	No function
		010 ⇔ 255	Color temperature correction presets
35	CW/WW cells strobe	000 ⇔ 255	See the <a href="#">Strobe Chart</a>
36	CW/WW cells pattern	000	No function
		001 ⇔ 215	Pattern 1–215
		216 ⇔ 255	Pattern 216
37	CW/WW cells macro	000 ⇔ 255	See the <a href="#">Cells Macro Chart</a>
38	CW/WW cells macro speed	000 ⇔ 127	Fast to slow
		128	Stop
		129 ⇔ 255	Slow to fast
39	CW/WW cells macro delay	000 ⇔ 255	Fast to slow

**Basic High Resolution**

Channel	Function	Value	Percent/Setting
1	Pan	000 ⇔ 255	0–100%
2	Fine pan	000 ⇔ 255	16-bit 0–100%
3	Tilt	000 ⇔ 255	0–100%
4	Fine tilt	000 ⇔ 255	16-bit 0–100%
5	Pan/Tilt speed	000 ⇔ 255	Fast to slow
6	Control	000 ⇔ 255	See the <a href="#">Control Chart</a>
7	Center dimmer	000 ⇔ 255	0–100%
8	Center fine dimmer	000 ⇔ 255	16-bit 0–100%
9	Center red	000 ⇔ 255	0–100%
10	Center fine red	000 ⇔ 255	16-bit 0–100%
11	Center green	000 ⇔ 255	0–100%
12	Center fine green	000 ⇔ 255	16-bit 0–100%
13	Center blue	000 ⇔ 255	0–100%
14	Center fine blue	000 ⇔ 255	16-bit 0–100%
15	Center white	000 ⇔ 255	0–100%
16	Center fine white	000 ⇔ 255	16-bit 0–100%
17	Center CTC	000 ⇔ 009	No function
		010 ⇔ 255	Color temperature correction, 2700–10000K
18	Center fine CTC	000 ⇔ 255	Fine color temperature correction, -29.675–0K
19	Zoom	000 ⇔ 255	0–100%
20	Fine zoom	000 ⇔ 255	16-bit 0–100%
21	Center strobe	000 ⇔ 255	See the <a href="#">Strobe Chart</a>
22	Center color macro	000 ⇔ 255	See the <a href="#">Color Macro Chart</a>
23	CW/WW cells dimmer	000 ⇔ 255	0–100%
24	CW/WW cells fine dimmer	000 ⇔ 255	16-bit 0–100%
25	CW/WW cells CTC	000 ⇔ 009	No function
		010 ⇔ 255	Color temperature correction presets
26	CW/WW cells fine CTC	000 ⇔ 255	Fine color temperature correction, -29.675–0K
27	CW/WW cells strobe	000 ⇔ 255	See the <a href="#">Strobe Chart</a>
28	CW/WW cells pattern	000	No function
		001 ⇔ 215	Pattern 1–215
		216 ⇔ 255	Pattern 216
29	CW/WW cells macro	000 ⇔ 255	See the <a href="#">Cells Macro Chart</a>
30	CW/WW cells macro speed	000 ⇔ 127	Fast to slow
		128	Stop
		129 ⇔ 255	Slow to fast
31	CW/WW cells macro delay	000 ⇔ 255	Fast to slow

# DMX CHART



V1.260319

## Basic Raw

Channel	Function	Value	Percent/Setting
1	Pan	000 ⇔ 255	0–100%
2	Fine pan	000 ⇔ 255	16-bit 0–100%
3	Tilt	000 ⇔ 255	0–100%
4	Fine tilt	000 ⇔ 255	16-bit 0–100%
5	Pan/Tilt speed	000 ⇔ 255	Fast to slow
6	Control	000 ⇔ 255	See the <a href="#">Control Chart</a>
7	Center dimmer	000 ⇔ 255	0–100%
8	Center fine dimmer	000 ⇔ 255	16-bit 0–100%
9	Center red	000 ⇔ 255	0–100%
10	Center fine red	000 ⇔ 255	16-bit 0–100%
11	Center green	000 ⇔ 255	0–100%
12	Center fine green	000 ⇔ 255	16-bit 0–100%
13	Center blue	000 ⇔ 255	0–100%
14	Center fine blue	000 ⇔ 255	16-bit 0–100%
15	Center white	000 ⇔ 255	0–100%
16	Center fine white	000 ⇔ 255	16-bit 0–100%
17	Center CTC	000 ⇔ 009 010 ⇔ 255	No function Color temperature correction, 2700–10000K
18	Zoom	000 ⇔ 255	0–100%
19	Fine zoom	000 ⇔ 255	16-bit 0–100%
20	Center strobe	000 ⇔ 255	See the <a href="#">Strobe Chart</a>
21	Center color macro	000 ⇔ 255	See the <a href="#">Color Macro Chart</a>
22	CW cell 1 dimmer	000 ⇔ 255	0–100%
23	WW cell 1 dimmer	000 ⇔ 255	0–100%
24	CW cell 2 dimmer	000 ⇔ 255	0–100%
25	WW cell 2 dimmer	000 ⇔ 255	0–100%
26	CW cell 3 dimmer	000 ⇔ 255	0–100%
27	WW cell 3 dimmer	000 ⇔ 255	0–100%
28	CW cell 4 dimmer	000 ⇔ 255	0–100%
29	WW cell 4 dimmer	000 ⇔ 255	0–100%
30	CW cell 5 dimmer	000 ⇔ 255	0–100%
31	WW cell 5 dimmer	000 ⇔ 255	0–100%
32	CW cell 6 dimmer	000 ⇔ 255	0–100%
33	WW cell 6 dimmer	000 ⇔ 255	0–100%
34	CW cell 7 dimmer	000 ⇔ 255	0–100%
35	WW cell 7 dimmer	000 ⇔ 255	0–100%
36	CW cell 8 dimmer	000 ⇔ 255	0–100%
37	WW cell 8 dimmer	000 ⇔ 255	0–100%

Basic

Channel	Function	Value	Percent/Setting
1	Pan	000 ⇔ 255	0–100%
2	Fine pan	000 ⇔ 255	16-bit 0–100%
3	Tilt	000 ⇔ 255	0–100%
4	Fine tilt	000 ⇔ 255	16-bit 0–100%
5	Pan/Tilt speed	000 ⇔ 255	Fast to slow
6	Control	000 ⇔ 255	See the <a href="#">Control Chart</a>
7	Center dimmer	000 ⇔ 255	0–100%
8	Center fine dimmer	000 ⇔ 255	16-bit 0–100%
9	Center red	000 ⇔ 255	0–100%
10	Center green	000 ⇔ 255	0–100%
11	Center blue	000 ⇔ 255	0–100%
12	Center white	000 ⇔ 255	0–100%
13	Center CTC	000 ⇔ 009	No function
		010 ⇔ 255	Color temperature correction, 2700–10000K
14	Zoom	000 ⇔ 255	0–100%
15	Fine zoom	000 ⇔ 255	16-bit 0–100%
16	Center strobe	000 ⇔ 255	See the <a href="#">Strobe Chart</a>
17	Center color macro	000 ⇔ 255	See the <a href="#">Color Macro Chart</a>
18	CW/WW cells dimmer	000 ⇔ 255	0–100%
19	CW/WW cells CTC	000 ⇔ 009	No function
		010 ⇔ 255	Color temperature correction presets
20	CW/WW cells strobe	000 ⇔ 255	See the <a href="#">Strobe Chart</a>
21	CW/WW cells pattern	000	No function
		001 ⇔ 215	Pattern 1–215
		216 ⇔ 255	Pattern 216
22	CW/WW cells macro	000 ⇔ 255	See the <a href="#">Cells Macro Chart</a>
23	CW/WW cells macro speed	000 ⇔ 127	Fast to slow
		128	Stop
		129 ⇔ 255	Slow to fast
24	CW/WW cells macro delay	000 ⇔ 255	Fast to slow

## Contact Us

General Information	Technical Support
<b>Chauvet World Headquarters</b>	
Address: 3360 Davie Rd., Suite 509 Davie, FL 33314 Voice: (954) 577-4455 Fax: (954) 929-5560 Toll Free: (800) 762-1084	Voice: (844) 393-7575 Fax: (954) 756-8015 Email: <a href="mailto:chauvetcs@chauvetlighting.com">chauvetcs@chauvetlighting.com</a> Website: <a href="http://www.chauvetprofessional.com">www.chauvetprofessional.com</a>
<b>Chauvet U.K.</b>	
Address: Pod 1 EVO Park Little Oak Drive, Sherwood Park Nottinghamshire, NG15 0EB UK Voice: +44 (0) 1773 511115 Fax: +44 (0) 1773 511110	Email: <a href="mailto:UKtech@chauvetlighting.eu">UKtech@chauvetlighting.eu</a> Website: <a href="http://www.chauvetprofessional.eu">www.chauvetprofessional.eu</a>
<b>Chauvet Benelux</b>	
Address: Vaartlaan 9 9800 Deinze Belgium Voice: +32 9 388 93 97	Email: <a href="mailto:BNLtech@chauvetlighting.eu">BNLtech@chauvetlighting.eu</a> Website: <a href="http://www.chauvetprofessional.eu">www.chauvetprofessional.eu</a>
<b>Chauvet France</b>	
Address: 3, Rue Ampère 91380 Chilly-Mazarin France Voice: +33 1 78 85 33 59	Email: <a href="mailto:FRtech@chauvetlighting.fr">FRtech@chauvetlighting.fr</a> Website: <a href="http://www.chauvetprofessional.eu">www.chauvetprofessional.eu</a>
<b>Chauvet Germany</b>	
Address: Bruno-Bürgel-Str. 11 28759 Bremen Germany Voice: +49 421 62 60 20	Email: <a href="mailto:DEtech@chauvetlighting.de">DEtech@chauvetlighting.de</a> Website: <a href="http://www.chauvetprofessional.eu">www.chauvetprofessional.eu</a>
<b>Chauvet Mexico</b>	
Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2) Zona Industrial Lerma Lerma, Edo. de México, CP 52000 Voice: +52 (728) 690-2010	Email: <a href="mailto:servicio@chauvet.com.mx">servicio@chauvet.com.mx</a> Website: <a href="http://www.chauvetprofessional.mx">www.chauvetprofessional.mx</a>

Visit the applicable website above to verify our contact information and instructions to request support. Outside the U.S., U. K., Ireland, Mexico, France, Germany, or Benelux, contact the dealer of record.



RoHS

