

DMX Channel Assignments and Values

Color Macro Chart

| DMX Value | Display Readout | DMX Value | Display Readout |
|-----------|--------------------|-----------|-------------------|
| 000 ⇔ 005 | -- | 131 ⇔ 138 | C6020–Lt Lavender |
| 006 ⇔ 013 | C3050–Md Yellow | 139 ⇔ 146 | C5030–Lt Blue |
| 014 ⇔ 021 | C3040–Lt Yellow | 147 ⇔ 154 | C5020–VLt Blue |
| 022 ⇔ 028 | C3240–Amb Yellow | 155 ⇔ 162 | C5430–Lt Blue2 |
| 029 ⇔ 035 | C2340–VLt Amber | 163 ⇔ 170 | C5070–Blue |
| 036 ⇔ 043 | C2040–Lt Amber | 171 ⇔ 178 | C5050–Md Blue |
| 044 ⇔ 051 | C2050–Md Amber | 179 ⇔ 186 | C5060–Dk Blue |
| 052 ⇔ 059 | C2060–Dk Amber | 187 ⇔ 194 | C5690–Indigo |
| 060 ⇔ 067 | C1050–Lt Red | 195 ⇔ 202 | C5080–VDk Blue |
| 068 ⇔ 075 | C1080–Md Red | 203 ⇔ 210 | C5081–VDk Blue2 |
| 076 ⇔ 083 | C1020–NC Pink | 211 ⇔ 218 | C4370–Yel Green |
| 084 ⇔ 091 | C1030–Md Pink | 219 ⇔ 226 | C4070–Green |
| 092 ⇔ 099 | C1630–Dk Pink | 227 ⇔ 234 | C4550–Turquoise |
| 100 ⇔ 107 | C1250–Md Red Amber | 235 ⇔ 242 | C4560–Aqua |
| 108 ⇔ 115 | C1060–Dk Red Amber | 243 ⇔ 250 | C4570–Blue Green |
| 116 ⇔ 121 | C1650–Magenta | 251 ⇔ 255 | -- |
| 122 ⇔ 130 | C6170–Dk Magenta | | |



The colors above are simulated renditions of the color output produced compared with other similar incandescent products. Chauvet makes no guarantee of the color output accuracy.

Color Temperature Chart

| DMX Value | Temperature | DMX Value | Temperature |
|-----------|-------------|-----------|-------------|
| 000 ⇔ 005 | No function | 126 | 4500K |
| 006 | 2800K | 127 ⇔ 150 | 4501–4599K |
| 007 ⇔ 025 | 2801–2899K | 151 | 5000K |
| 026 | 3000K | 152 ⇔ 175 | 5001–5099K |
| 027 ⇔ 050 | 3001–3099K | 176 | 5600K |
| 051 | 3200K | 177 ⇔ 200 | 5601–5699K |
| 052 ⇔ 075 | 3201–3299K | 201 | 6000K |
| 076 | 3500K | 202 ⇔ 225 | 6001–6499K |
| 077 ⇔ 100 | 3501–3599K | 226 | 6500K |
| 101 | 4000K | | |
| 102 ⇔ 125 | 4001–4099K | | |



The color temperatures above are simulated renditions of the color output produced compared with a tungsten lamp at the specified color temperature. Chauvet makes no guarantee of the color output accuracy.

Control Chart

| Value | Percent/Setting | Value | Percent/Setting |
|-----------|-----------------------|-----------|---------------------------|
| 000 ⇔ 007 | No function | 144 ⇔ 151 | X-Fade speed 2 |
| 008 ⇔ 015 | Reset dimmer | 152 ⇔ 159 | X-Fade speed 3 |
| 016 ⇔ 023 | Red shift on | 160 ⇔ 167 | X-Fade speed 4 |
| 024 ⇔ 031 | Red shift off | 168 ⇔ 170 | PWM frequency 600 Hz |
| 032 ⇔ 039 | S-curve dimmer | 171 ⇔ 173 | PWM frequency 1200 Hz |
| 040 ⇔ 047 | Linear dimmer | 174 ⇔ 176 | PWM frequency 2000 Hz |
| 048 ⇔ 055 | Square dimmer | 177 ⇔ 179 | PWM frequency 4000 Hz |
| 056 ⇔ 063 | Inverse square dimmer | 180 ⇔ 183 | PWM frequency 6000 Hz |
| 064 ⇔ 071 | Dimmer speed mode off | 184 ⇔ 186 | PWM frequency 25000 Hz |
| 072 ⇔ 079 | Dimmer mode 1 (fast) | 187 ⇔ 189 | Color calibration off |
| 080 ⇔ 087 | Dimmer mode 2 | 190 ⇔ 192 | User-calibrated colors |
| 088 ⇔ 095 | Dimmer mode 3 (slow) | 193 ⇔ 195 | Factory color calibration |
| 096 ⇔ 103 | Fan mode auto | 196 ⇔ 198 | Pan reset |
| 104 ⇔ 111 | Fan mode on | 199 ⇔ 201 | Low power mode on |
| 112 ⇔ 119 | Fan mode off | 202 ⇔ 204 | Low power mode off |
| 120 ⇔ 127 | Fan mode silent | 205 ⇔ 243 | Reserved for future use |
| 128 ⇔ 135 | X-Fade speed off | 244 ⇔ 249 | Dimmer mode override |
| 136 ⇔ 143 | X-Fade speed 1 | 250 ⇔ 255 | Reserved for future use |

Strobe Chart

| Value | Percent/Setting | Value | Percent/Setting | Value | Percent/Setting |
|-----------|-----------------|-----------|-----------------------|-----------|----------------------|
| 000 ⇔ 019 | On | 110 ⇔ 124 | Random strobe* | 185 ⇔ 189 | On |
| 020 ⇔ 024 | Off | 125 ⇔ 129 | On | 190 ⇔ 204 | Random pulse strobe* |
| 025 ⇔ 064 | Strobe* | 130 ⇔ 144 | Random strobe 100–0%* | 205 ⇔ 209 | On |
| 065 ⇔ 069 | On | 145 ⇔ 149 | On | 210 ⇔ 224 | Strobe 0–100–0%* |
| 070 ⇔ 084 | Strobe 100–0%* | 150 ⇔ 164 | Random strobe 0–100%* | 225 ⇔ 229 | On |
| 085 ⇔ 089 | On | 165 ⇔ 169 | On | 230 ⇔ 244 | Pulse strobe* |
| 090 ⇔ 104 | Strobe 0–100%* | 170 ⇔ 184 | Pulse strobe* | 245 ⇔ 255 | On |
| 105 ⇔ 109 | On | | | | |

*All strobe value ranges go from fast to slow

DMX CHART

STRIKE Array Ultra
V1.0



92 Ch

| Channel | Function | Value | Percent/Setting |
|---------|-------------------|-----------|-----------------|
| 1 | Pan | 000 ⇔ 255 | 0–100% |
| 2 | Fine pan | 000 ⇔ 255 | 0–100% |
| 3 | Pan speed | 000 ⇔ 255 | 0–100% |
| 4 | Pod dimmer | 000 ⇔ 255 | 0–100% |
| 5 | Fine pod dimmer | 000 ⇔ 255 | 0–100% |
| 6 | Ring dimmer | 000 ⇔ 255 | 0–100% |
| 7 | Fine ring dimmer | 000 ⇔ 255 | 0–100% |
| 8 | Red | 000 ⇔ 255 | 0–100% |
| 9 | Fine red | 000 ⇔ 255 | 0–100% |
| 10 | Green | 000 ⇔ 255 | 0–100% |
| 11 | Fine green | 000 ⇔ 255 | 0–100% |
| 12 | Blue | 000 ⇔ 255 | 0–100% |
| 13 | Fine blue | 000 ⇔ 255 | 0–100% |
| 14 | Amber | 000 ⇔ 255 | 0–100% |
| 15 | Fine amber | 000 ⇔ 255 | 0–100% |
| 16 | White | 000 ⇔ 255 | 0–100% |
| 17 | Fine white | 000 ⇔ 255 | 0–100% |
| 18 | Ring red 1 | 000 ⇔ 255 | 0–100% |
| 19 | Fine ring red 1 | 000 ⇔ 255 | 0–100% |
| 20 | Ring green 1 | 000 ⇔ 255 | 0–100% |
| 21 | Fine ring green 1 | 000 ⇔ 255 | 0–100% |
| 22 | Ring blue 1 | 000 ⇔ 255 | 0–100% |
| 23 | Fine ring blue 1 | 000 ⇔ 255 | 0–100% |
| 24 | Ring red 2 | 000 ⇔ 255 | 0–100% |
| 25 | Fine ring red 2 | 000 ⇔ 255 | 0–100% |
| 26 | Ring green 2 | 000 ⇔ 255 | 0–100% |
| 27 | Fine ring green 2 | 000 ⇔ 255 | 0–100% |
| 28 | Ring blue 2 | 000 ⇔ 255 | 0–100% |
| 29 | Fine ring blue 2 | 000 ⇔ 255 | 0–100% |
| 30 | Ring red 3 | 000 ⇔ 255 | 0–100% |
| 31 | Fine ring red 3 | 000 ⇔ 255 | 0–100% |
| 32 | Ring green 3 | 000 ⇔ 255 | 0–100% |
| 33 | Fine ring green 3 | 000 ⇔ 255 | 0–100% |
| 34 | Ring blue 3 | 000 ⇔ 255 | 0–100% |
| 35 | Fine ring blue 3 | 000 ⇔ 255 | 0–100% |
| 36 | Ring red 4 | 000 ⇔ 255 | 0–100% |
| 37 | Fine ring red 4 | 000 ⇔ 255 | 0–100% |
| 38 | Ring green 4 | 000 ⇔ 255 | 0–100% |
| 39 | Fine ring green 4 | 000 ⇔ 255 | 0–100% |
| 40 | Ring blue 4 | 000 ⇔ 255 | 0–100% |
| 41 | Fine ring blue 4 | 000 ⇔ 255 | 0–100% |
| 42 | Ring red 5 | 000 ⇔ 255 | 0–100% |
| 43 | Fine ring red 5 | 000 ⇔ 255 | 0–100% |
| 44 | Ring green 5 | 000 ⇔ 255 | 0–100% |
| 45 | Fine ring green 5 | 000 ⇔ 255 | 0–100% |
| 46 | Ring blue 5 | 000 ⇔ 255 | 0–100% |
| 47 | Fine ring blue 5 | 000 ⇔ 255 | 0–100% |

| Channel | Function | Value | Percent/Setting |
|---------|------------------------------|-----------|---------------------------------------|
| 48 | Ring red 6 | 000 ⇄ 255 | 0–100% |
| 49 | Fine ring red 6 | 000 ⇄ 255 | 0–100% |
| 50 | Ring green 6 | 000 ⇄ 255 | 0–100% |
| 51 | Fine ring green 6 | 000 ⇄ 255 | 0–100% |
| 52 | Ring blue 6 | 000 ⇄ 255 | 0–100% |
| 53 | Fine ring blue 6 | 000 ⇄ 255 | 0–100% |
| 54 | Ring red 7 | 000 ⇄ 255 | 0–100% |
| 55 | Fine ring red 7 | 000 ⇄ 255 | 0–100% |
| 56 | Ring green 7 | 000 ⇄ 255 | 0–100% |
| 57 | Fine ring green 7 | 000 ⇄ 255 | 0–100% |
| 58 | Ring blue 7 | 000 ⇄ 255 | 0–100% |
| 59 | Fine ring blue 7 | 000 ⇄ 255 | 0–100% |
| 60 | Ring red 8 | 000 ⇄ 255 | 0–100% |
| 61 | Fine ring red 8 | 000 ⇄ 255 | 0–100% |
| 62 | Ring green 8 | 000 ⇄ 255 | 0–100% |
| 63 | Fine ring green 8 | 000 ⇄ 255 | 0–100% |
| 64 | Ring blue 8 | 000 ⇄ 255 | 0–100% |
| 65 | Fine ring blue 8 | 000 ⇄ 255 | 0–100% |
| 66 | Ring red 9 | 000 ⇄ 255 | 0–100% |
| 67 | Fine ring red 9 | 000 ⇄ 255 | 0–100% |
| 68 | Ring green 9 | 000 ⇄ 255 | 0–100% |
| 69 | Fine ring green 9 | 000 ⇄ 255 | 0–100% |
| 70 | Ring blue 9 | 000 ⇄ 255 | 0–100% |
| 71 | Fine ring blue 9 | 000 ⇄ 255 | 0–100% |
| 72 | Ring red 10 | 000 ⇄ 255 | 0–100% |
| 73 | Fine ring red 10 | 000 ⇄ 255 | 0–100% |
| 74 | Ring green 10 | 000 ⇄ 255 | 0–100% |
| 75 | Fine ring green 10 | 000 ⇄ 255 | 0–100% |
| 76 | Ring blue 10 | 000 ⇄ 255 | 0–100% |
| 77 | Fine ring blue 10 | 000 ⇄ 255 | 0–100% |
| 78 | Ring red 11 | 000 ⇄ 255 | 0–100% |
| 79 | Fine ring red 11 | 000 ⇄ 255 | 0–100% |
| 80 | Ring green 11 | 000 ⇄ 255 | 0–100% |
| 81 | Fine ring green 11 | 000 ⇄ 255 | 0–100% |
| 82 | Ring blue 11 | 000 ⇄ 255 | 0–100% |
| 83 | Fine ring blue 11 | 000 ⇄ 255 | 0–100% |
| 84 | Ring red 12 | 000 ⇄ 255 | 0–100% |
| 85 | Fine ring red 12 | 000 ⇄ 255 | 0–100% |
| 86 | Ring green 12 | 000 ⇄ 255 | 0–100% |
| 87 | Fine ring green 12 | 000 ⇄ 255 | 0–100% |
| 88 | Ring blue 12 | 000 ⇄ 255 | 0–100% |
| 89 | Fine ring blue 12 | 000 ⇄ 255 | 0–100% |
| 90 | Pod strobe | 000 ⇄ 255 | See the Strobe Chart |
| 91 | Ring strobe | 000 ⇄ 255 | See the Strobe Chart |
| 92 | Control (hold for 3 seconds) | 000 ⇄ 255 | See the Control Chart |

DMX CHART

STRIKE Array Ultra
V1.0



49 Ch

| Channel | Function | Value | Percent/Setting |
|---------|------------------------------|-----------|---------------------------------------|
| 1 | Pan | 000 ⇔ 255 | 0–100% |
| 2 | Fine pan | 000 ⇔ 255 | 0–100% |
| 3 | Pan speed | 000 ⇔ 255 | 0–100% |
| 4 | Pod dimmer | 000 ⇔ 255 | 0–100% |
| 5 | Ring dimmer | 000 ⇔ 255 | 0–100% |
| 6 | Red | 000 ⇔ 255 | 0–100% |
| 7 | Green | 000 ⇔ 255 | 0–100% |
| 8 | Blue | 000 ⇔ 255 | 0–100% |
| 9 | Amber | 000 ⇔ 255 | 0–100% |
| 10 | White | 000 ⇔ 255 | 0–100% |
| 11 | Ring red 1 | 000 ⇔ 255 | 0–100% |
| 12 | Ring green 1 | 000 ⇔ 255 | 0–100% |
| 13 | Ring blue 1 | 000 ⇔ 255 | 0–100% |
| 14 | Ring red 2 | 000 ⇔ 255 | 0–100% |
| 15 | Ring green 2 | 000 ⇔ 255 | 0–100% |
| 16 | Ring blue 2 | 000 ⇔ 255 | 0–100% |
| 17 | Ring red 3 | 000 ⇔ 255 | 0–100% |
| 18 | Ring green 3 | 000 ⇔ 255 | 0–100% |
| 19 | Ring blue 3 | 000 ⇔ 255 | 0–100% |
| 20 | Ring red 4 | 000 ⇔ 255 | 0–100% |
| 21 | Ring green 4 | 000 ⇔ 255 | 0–100% |
| 22 | Ring blue 4 | 000 ⇔ 255 | 0–100% |
| 23 | Ring red 5 | 000 ⇔ 255 | 0–100% |
| 24 | Ring green 5 | 000 ⇔ 255 | 0–100% |
| 25 | Ring blue 5 | 000 ⇔ 255 | 0–100% |
| 26 | Ring red 6 | 000 ⇔ 255 | 0–100% |
| 27 | Ring green 6 | 000 ⇔ 255 | 0–100% |
| 28 | Ring blue 6 | 000 ⇔ 255 | 0–100% |
| 29 | Ring red 7 | 000 ⇔ 255 | 0–100% |
| 30 | Ring green 7 | 000 ⇔ 255 | 0–100% |
| 31 | Ring blue 7 | 000 ⇔ 255 | 0–100% |
| 32 | Ring red 8 | 000 ⇔ 255 | 0–100% |
| 33 | Ring green 8 | 000 ⇔ 255 | 0–100% |
| 34 | Ring blue 8 | 000 ⇔ 255 | 0–100% |
| 35 | Ring red 9 | 000 ⇔ 255 | 0–100% |
| 36 | Ring green 9 | 000 ⇔ 255 | 0–100% |
| 37 | Ring blue 9 | 000 ⇔ 255 | 0–100% |
| 38 | Ring red 10 | 000 ⇔ 255 | 0–100% |
| 39 | Ring green 10 | 000 ⇔ 255 | 0–100% |
| 40 | Ring blue 10 | 000 ⇔ 255 | 0–100% |
| 41 | Ring red 11 | 000 ⇔ 255 | 0–100% |
| 42 | Ring green 11 | 000 ⇔ 255 | 0–100% |
| 43 | Ring blue 11 | 000 ⇔ 255 | 0–100% |
| 44 | Ring red 12 | 000 ⇔ 255 | 0–100% |
| 45 | Ring green 12 | 000 ⇔ 255 | 0–100% |
| 46 | Ring blue 12 | 000 ⇔ 255 | 0–100% |
| 47 | Pod strobe | 000 ⇔ 255 | See the Strobe Chart |
| 48 | Ring strobe | 000 ⇔ 255 | See the Strobe Chart |
| 49 | Control (hold for 3 seconds) | 000 ⇔ 255 | See the Control Chart |

28 Ch

| Channel | Function | Value | Percent/Setting |
|---------|------------------------------|-----------|---|
| 1 | Pan | 000 ⇄ 255 | 0–100% |
| 2 | Fine pan | 000 ⇄ 255 | 0–100% |
| 3 | Pan speed | 000 ⇄ 255 | 0–100% |
| 4 | Pod dimmer | 000 ⇄ 255 | 0–100% |
| 5 | Fine pod dimmer | 000 ⇄ 255 | 0–100% |
| 6 | Ring dimmer | 000 ⇄ 255 | 0–100% |
| 7 | Fine ring dimmer | 000 ⇄ 255 | 0–100% |
| 8 | Red | 000 ⇄ 255 | 0–100% |
| 9 | Fine red | 000 ⇄ 255 | 0–100% |
| 10 | Green | 000 ⇄ 255 | 0–100% |
| 11 | Fine green | 000 ⇄ 255 | 0–100% |
| 12 | Blue | 000 ⇄ 255 | 0–100% |
| 13 | Fine blue | 000 ⇄ 255 | 0–100% |
| 14 | Amber | 000 ⇄ 255 | 0–100% |
| 15 | Fine amber | 000 ⇄ 255 | 0–100% |
| 16 | White | 000 ⇄ 255 | 0–100% |
| 17 | Fine white | 000 ⇄ 255 | 0–100% |
| 18 | Ring red | 000 ⇄ 255 | 0–100% |
| 19 | Fine ring red | 000 ⇄ 255 | 0–100% |
| 20 | Ring green | 000 ⇄ 255 | 0–100% |
| 21 | Fine ring green | 000 ⇄ 255 | 0–100% |
| 22 | Ring blue | 000 ⇄ 255 | 0–100% |
| 23 | Fine ring blue | 000 ⇄ 255 | 0–100% |
| 24 | Pod strobe | 000 ⇄ 255 | See the Strobe Chart |
| 25 | Ring strobe | 000 ⇄ 255 | See the Strobe Chart |
| 26 | Color macro | 000 ⇄ 255 | See the Color Macro Chart |
| 27 | Color temperature | 000 ⇄ 255 | See the Color Temperature Chart |
| 28 | Control (hold for 3 seconds) | 000 ⇄ 255 | See the Control Chart |

26 Ch

| Channel | Function | Value | Percent/Setting |
|---------|------------------|-----------|-----------------|
| 1 | Pan | 000 ⇄ 255 | 0–100% |
| 2 | Fine pan | 000 ⇄ 255 | 0–100% |
| 3 | Pan speed | 000 ⇄ 255 | 0–100% |
| 4 | Pod dimmer | 000 ⇄ 255 | 0–100% |
| 5 | Fine pod dimmer | 000 ⇄ 255 | 0–100% |
| 6 | Ring dimmer | 000 ⇄ 255 | 0–100% |
| 7 | Fine ring dimmer | 000 ⇄ 255 | 0–100% |
| 8 | Red | 000 ⇄ 255 | 0–100% |
| 9 | Fine red | 000 ⇄ 255 | 0–100% |
| 10 | Green | 000 ⇄ 255 | 0–100% |
| 11 | Fine green | 000 ⇄ 255 | 0–100% |
| 12 | Blue | 000 ⇄ 255 | 0–100% |
| 13 | Fine blue | 000 ⇄ 255 | 0–100% |
| 14 | Amber | 000 ⇄ 255 | 0–100% |
| 15 | Fine amber | 000 ⇄ 255 | 0–100% |

DMX CHART

STRIKE Array Ultra
V1.0



| Channel | Function | Value | Percent/Setting |
|---------|------------------------------|-----------|---------------------------------------|
| 16 | White | 000 ⇔ 255 | 0–100% |
| 17 | Fine white | 000 ⇔ 255 | 0–100% |
| 18 | Ring red | 000 ⇔ 255 | 0–100% |
| 19 | Fine ring red | 000 ⇔ 255 | 0–100% |
| 20 | Ring green | 000 ⇔ 255 | 0–100% |
| 21 | Fine ring green | 000 ⇔ 255 | 0–100% |
| 22 | Ring blue | 000 ⇔ 255 | 0–100% |
| 23 | Fine ring blue | 000 ⇔ 255 | 0–100% |
| 24 | Pod strobe | 000 ⇔ 255 | See the Strobe Chart |
| 25 | Ring strobe | 000 ⇔ 255 | See the Strobe Chart |
| 26 | Control (hold for 3 seconds) | 000 ⇔ 255 | See the Control Chart |

20 Ch-2

| Channel | Function | Value | Percent/Setting |
|---------|------------------------------|-----------|--|
| 1 | Pan | 000 ⇔ 255 | 0–100% |
| 2 | Fine pan | 000 ⇔ 255 | 0–100% |
| 3 | Pan speed | 000 ⇔ 255 | 0–100% |
| 4 | Pod dimmer | 000 ⇔ 255 | 0–100% |
| 5 | Ring dimmer | 000 ⇔ 255 | 0–100% |
| 6 | Red | 000 ⇔ 255 | 0–100% |
| 7 | Green | 000 ⇔ 255 | 0–100% |
| 8 | Blue | 000 ⇔ 255 | 0–100% |
| 9 | Amber | 000 ⇔ 255 | 0–100% |
| 10 | White | 000 ⇔ 255 | 0–100% |
| 11 | Ring red | 000 ⇔ 255 | 0–100% |
| 12 | Ring green | 000 ⇔ 255 | 0–100% |
| 13 | Ring blue | 000 ⇔ 255 | 0–100% |
| 14 | Pod strobe | 000 ⇔ 255 | See the Strobe Chart |
| 15 | Ring strobe | 000 ⇔ 255 | See the Strobe Chart |
| 16 | Color macro | 000 ⇔ 255 | See the Color Macro Chart |
| 17 | Color temperature | 000 ⇔ 255 | See the DMX Channel Assignments and Values |
| 18 | Auto programs | 000 ⇔ 010 | No function |
| | | 011 ⇔ 040 | Automatic program 1 |
| | | 041 ⇔ 080 | Automatic program 2 |
| | | 081 ⇔ 120 | Automatic program 3 |
| | | 121 ⇔ 160 | Automatic program 4 |
| | | 161 ⇔ 200 | Automatic program 5 |
| 18 | | 201 ⇔ 255 | Automatic program 6 |
| 19 | Auto speed | 000 ⇔ 255 | Auto speed, slow to fast |
| 20 | Control (hold for 3 seconds) | 000 ⇔ 255 | See the Control Chart |

20 Ch-1

| Channel | Function | Value | Percent/Setting |
|---------|------------------------------|-----------|---|
| 1 | Pan | 000 ⇄ 255 | 0–100% |
| 2 | Fine pan | 000 ⇄ 255 | 0–100% |
| 3 | Pan speed | 000 ⇄ 255 | 0–100% |
| 4 | Pod dimmer | 000 ⇄ 255 | 0–100% |
| 5 | Fine pod dimmer | 000 ⇄ 255 | 0–100% |
| 6 | Ring dimmer | 000 ⇄ 255 | 0–100% |
| 7 | Fine ring dimmer | 000 ⇄ 255 | 0–100% |
| 8 | Red | 000 ⇄ 255 | 0–100% |
| 9 | Green | 000 ⇄ 255 | 0–100% |
| 10 | Blue | 000 ⇄ 255 | 0–100% |
| 11 | Amber | 000 ⇄ 255 | 0–100% |
| 12 | White | 000 ⇄ 255 | 0–100% |
| 13 | Ring red | 001 ⇄ 255 | 0–100% |
| 14 | Ring green | 011 ⇄ 060 | 0–100% |
| 15 | Ring blue | 111 ⇄ 160 | 0–100% |
| 16 | Pod strobe | 000 ⇄ 255 | See the Strobe Chart |
| 17 | Ring strobe | 000 ⇄ 255 | See the Strobe Chart |
| 18 | Color macro | 000 ⇄ 255 | See the Color Macro Chart |
| 19 | Color temperature | 000 ⇄ 255 | See the Color Temperature Chart |
| 20 | Control (hold for 3 seconds) | 000 ⇄ 255 | See the Control Chart |

16 Ch

| Channel | Function | Value | Percent/Setting |
|---------|------------------------------|-----------|---------------------------------------|
| 1 | Pan | 000 ⇄ 255 | 0–100% |
| 2 | Fine pan | 000 ⇄ 255 | 0–100% |
| 3 | Pan speed | 000 ⇄ 255 | 0–100% |
| 4 | Pod dimmer | 000 ⇄ 255 | 0–100% |
| 5 | Ring dimmer | 000 ⇄ 255 | 0–100% |
| 6 | Red | 000 ⇄ 255 | 0–100% |
| 7 | Green | 000 ⇄ 255 | 0–100% |
| 8 | Blue | 000 ⇄ 255 | 0–100% |
| 9 | Amber | 000 ⇄ 255 | 0–100% |
| 10 | White | 000 ⇄ 255 | 0–100% |
| 11 | Ring red | 001 ⇄ 255 | 0–100% |
| 12 | Ring green | 011 ⇄ 060 | 0–100% |
| 13 | Ring blue | 111 ⇄ 160 | 0–100% |
| 14 | Pod strobe | 000 ⇄ 255 | See the Strobe Chart |
| 15 | Ring strobe | 000 ⇄ 255 | See the Strobe Chart |
| 16 | Control (hold for 3 seconds) | 000 ⇄ 255 | See the Control Chart |

DMX CHART

STRIKE Array Ultra
V1.0



14 Ch

| Channel | Function | Value | Percent/Setting |
|---------|------------------------------|-----------|---------------------------------------|
| 1 | Pan | 000 ⇔ 255 | 0–100% |
| 2 | Fine pan | 000 ⇔ 255 | 0–100% |
| 3 | Pan speed | 000 ⇔ 255 | 0–100% |
| 4 | Red | 000 ⇔ 255 | 0–100% |
| 5 | Green | 000 ⇔ 255 | 0–100% |
| 6 | Blue | 000 ⇔ 255 | 0–100% |
| 7 | Amber | 000 ⇔ 255 | 0–100% |
| 8 | White | 000 ⇔ 255 | 0–100% |
| 9 | Ring red | 001 ⇔ 255 | 0–100% |
| 10 | Ring green | 011 ⇔ 060 | 0–100% |
| 11 | Ring blue | 111 ⇔ 160 | 0–100% |
| 12 | Pod strobe | 000 ⇔ 255 | See the Strobe Chart |
| 13 | Ring strobe | 000 ⇔ 255 | See the Strobe Chart |
| 14 | Control (hold for 3 seconds) | 000 ⇔ 255 | See the Control Chart |

8 Ch

| Channel | Function | Value | Percent/Setting |
|---------|------------------------------|-----------|---|
| 1 | Pan | 000 ⇔ 255 | 0–100% |
| 2 | Fine pan | 000 ⇔ 255 | 0–100% |
| 3 | Pan speed | 000 ⇔ 255 | 0–100% |
| 4 | Pod dimmer | 000 ⇔ 255 | 0–100% |
| 5 | Global strobe | 000 ⇔ 255 | See the Strobe Chart |
| 6 | Color macro | 000 ⇔ 255 | See the Color Macro Chart |
| 7 | Color temperature | 000 ⇔ 255 | See the Color Temperature Chart |
| 8 | Control (hold for 3 seconds) | 000 ⇔ 255 | See the Control Chart |

6 Ch

| Channel | Function | Value | Percent/Setting |
|---------|------------------------------|-----------|---------------------------------------|
| 1 | Pan | 000 ⇔ 255 | 0–100% |
| 2 | Fine pan | 000 ⇔ 255 | 0–100% |
| 3 | Pan speed | 000 ⇔ 255 | 0–100% |
| 4 | Pod dimmer | 000 ⇔ 255 | 0–100% |
| 5 | Global strobe | 000 ⇔ 255 | See the Strobe Chart |
| 6 | Control (hold for 3 seconds) | 000 ⇔ 255 | See the Control Chart |

HSV

| Channel | Function | Value | Percent/Setting |
|---------|------------------------------|-----------|---------------------------------------|
| 1 | Hue | 000 ⇔ 255 | 0–100% |
| 2 | Saturation | 000 ⇔ 255 | 0–100% |
| 3 | Value | 000 ⇔ 255 | 0–100% |
| 4 | Hue | 000 ⇔ 255 | 0–100% |
| 5 | Saturation | 000 ⇔ 255 | 0–100% |
| 6 | Value | 000 ⇔ 255 | 0–100% |
| 7 | Global strobe | 000 ⇔ 255 | See the Strobe Chart |
| 8 | Control (hold for 3 seconds) | 000 ⇔ 255 | See the Control Chart |