

COLORADO *BATTEN* Q15

User Manual



Model ID: COLORADOBATTENQ15

Edition Notes

The COLORado Batten Q15 User Manual includes a description, safety precautions, installation, programming, operation, and maintenance instructions for the COLORado Batten Q15 as of the release date of this edition.

Trademarks

Chauvet, Chauvet Professional, the Chauvet logo, COLORado, and COLORado are registered trademarks or trademarks of Chauvet & Sons, LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

Copyright Notice

The works of authorship contained in this manual, including, but not limited to, all designs, text, and images are owned by Chauvet.

© Copyright 2026 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

Manual Use

Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

Document Printing

For best results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If using A4 paper (210 x 297 mm), configure the printer to scale the content accordingly.

Intended Audience

Any person installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage, or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident, or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision. However, Chauvet has no obligation to make, and does not commit to make, any such revisions.

Document Revision

Go to www.chauvetprofessional.com for the latest version.

Revision	Date	Description
4	06/2026	Manual reformatting, added torque and vacuum test measurements.

TABLE OF CONTENTS

1. Before You Begin	1
What Is Included	1
Claims	1
Text Conventions	1
Symbols	1
Safety Notes.....	2
FCC Statement of Compliance	3
RF Exposure Warning for North America and Australia.....	3
Expected LED Lifespan.....	3
2. Introduction	4
Features.....	4
Product Overview.....	4
Product Dimensions	5
3. Setup	6
AC Power	6
AC Plug	6
Power Linking.....	6
DMX Linking.....	7
DMX Personalities.....	7
Remote Device Management.....	7
Master/Slave Connectivity.....	7
Filter Installation	7
Mounting	8
Orientation.....	8
Rigging	8
Procedure.....	8
Base Plate	9
Attaching the Base Plate.....	9
Mounting Diagram (with Base Plate)	10
Series Attachment Instructions	11
Mounting Products Attached in Series	12
4. Operation	13
Control Panel Description	13
Control Options	13
Programming.....	13
Passcode	13
Menu Map	13
DMX Configuration.....	15
DMX Personalities.....	15
Starting Address.....	15
DMX Channel Assignments and Values	15
15 HSIC.....	15
15 Advanced / 15 Basic / 15 Simple / 15 Pixel.....	19
1 HSIC.....	21
1 Advanced / 1 Basic / 1 Simple	22

Standalone Configuration.....	23
Static Colors.....	23
Preset Colors.....	23
Preset Color Temperatures.....	23
Custom Color Mixing.....	23
Automatic Programs.....	23
Run Program.....	23
Customize Program.....	23
Settings Configuration.....	23
Output Setting.....	23
Master/Slave.....	23
Dimmer Mode.....	24
Pulse Width Modulation.....	24
Cell Order.....	24
DMX Error/Loss.....	24
Display Timeout.....	24
Display Passcode.....	24
Product Information.....	24
Factory Reset.....	24
5. Maintenance.....	25
Product Maintenance.....	25
Torque Measurements.....	25
Vacuum Test Measurements.....	25
6. Technical Specifications.....	26
Contact Us.....	27
Warranty & Returns.....	27

Before You Begin

1. Before You Begin

What Is Included

- COLORado Batten Q15
- Seetronic Powerkon IP65 power cable
- 2 Omega Brackets
- Base Plate
- 2 Retaining Pins
- Glare Shield
- Filter
- Quick Reference Guide

Claims

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate a claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

Text Conventions

Convention	Meaning
1–512	A range of values
50/60	A set of values of which only one can be chosen
Settings	A menu option not to be modified
<ENTER>	A key to be pressed on the product's control panel

Symbols

Symbol	Meaning
	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.



Any reference to data or power connections in this manual assumes the use of Seetronic IP-rated cables.



The term “DMX” used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.

Connection of the control signal: DMX line

- The product has XLR sockets for DMX input and output.
- **Notice:** This control circuit is isolated and belongs to the Class 2 data port.

The control circuit has a cumulative leakage current of less than 3.5 mA.

Safety Notes

Read all the following safety notes before working with this product. These notes contain important information about the installation, usage, and maintenance of this product.



This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained, certified technicians. Do not open the housing or attempt any repairs.



All applicable local codes and regulations apply to proper installation of this product.

- The luminaire is intended for professional use only.
- The luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 7.5 ft (2.3 m) is not expected.
- If the external flexible cable or cord of this luminaire is damaged, it shall be replaced by a special cord or cord exclusively available from the manufacturer or its service agent.
- The light source contained in this luminaire shall only be replaced by the manufacturer or its service agent or a similar qualified person.
- **CAUTION:**
 - This product's housing may be hot when operating. Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
 - When transferring the product from extreme temperature environments, (e.g., cold truck to warm humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow the product to fully acclimate to the surrounding environment before connecting it to power.
 - Flashing light is known to trigger epileptic seizures. User must comply with local laws regarding notification of strobe use.
- **ALWAYS:**
 - Disconnect from power before cleaning the product.
 - When using an IP65-rated product in an outdoor environment, use IP65- (or higher) rated power and data cable.
 - Replace and secure IP-rated protective covers to all power, data, or other ports when not in use.
 - Use a safety cable when mounting this product overhead.
 - Connect this product to a grounded and protected circuit.
- **DO NOT:**
 - Open this product. It contains no user-serviceable parts.
 - Look at the light source when the product is on.
 - Leave any flammable material within 50 cm of this product while operating or connected to power.
 - Connect this product to a dimmer or rheostat.
 - Operate this product if the housing, lenses, or cables appear damaged.
 - Submerge this product (adhere to standards for the published IP rating). Regular outdoor operation is fine.
 - Permanently install outdoors in locations with extreme environmental conditions. This includes, but is not limited to:
 - Exposure to a marine/saline environment (within 3 miles of a saltwater body of water).
 - Locations where normal temperatures exceed the temperature ranges in this manual.
 - Locations that are prone to flooding or being buried in snow.
 - Other areas where the product will be subject to extreme radiation or caustic substances.
- ONLY use the hanging/mounting bracket to carry this product.
- The maximum ambient temperature is 113 °F (45 °C). Do not operate this product at higher temperatures.
- The minimum startup temperature is -4°F (-20°C). Do not start the product at lower temperatures.
- The minimum ambient temperature is -22°F (-30°C). Do not operate the product at lower temperatures.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.
- In the event of a serious operating problem, stop using immediately.



If this Chauvet product requires service, contact Chauvet Technical Support.

FCC Statement of Compliance

This device complies with Part 15 Part B of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Warning for North America and Australia

Warning! This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and the user. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Expected LED Lifespan


Over time, use and heat will gradually reduce LED brightness. Clustered LEDs produce more heat than single LEDs, contributing to shorter lifespans if always used at full intensity. The average LED lifespan is 40,000 to 50,000 hours. To extend LED lifespan, maintain proper ventilation around the product, and limit the overall intensity.

2. Introduction

Features


- Quad-Color RGBW LED Batten for touring, rental, and production, indoors or out
- All environment operation with IP rated power and DMX connections
- Unique end-cap and back plate mounting options
- Color temperature presets, from 3200 K to 10000 K
- Selectable, smooth dimming curves for programming versatility
- Built for touring, live event, television, and theatrical productions
- Large, easy to navigate display with password protection

Product Overview

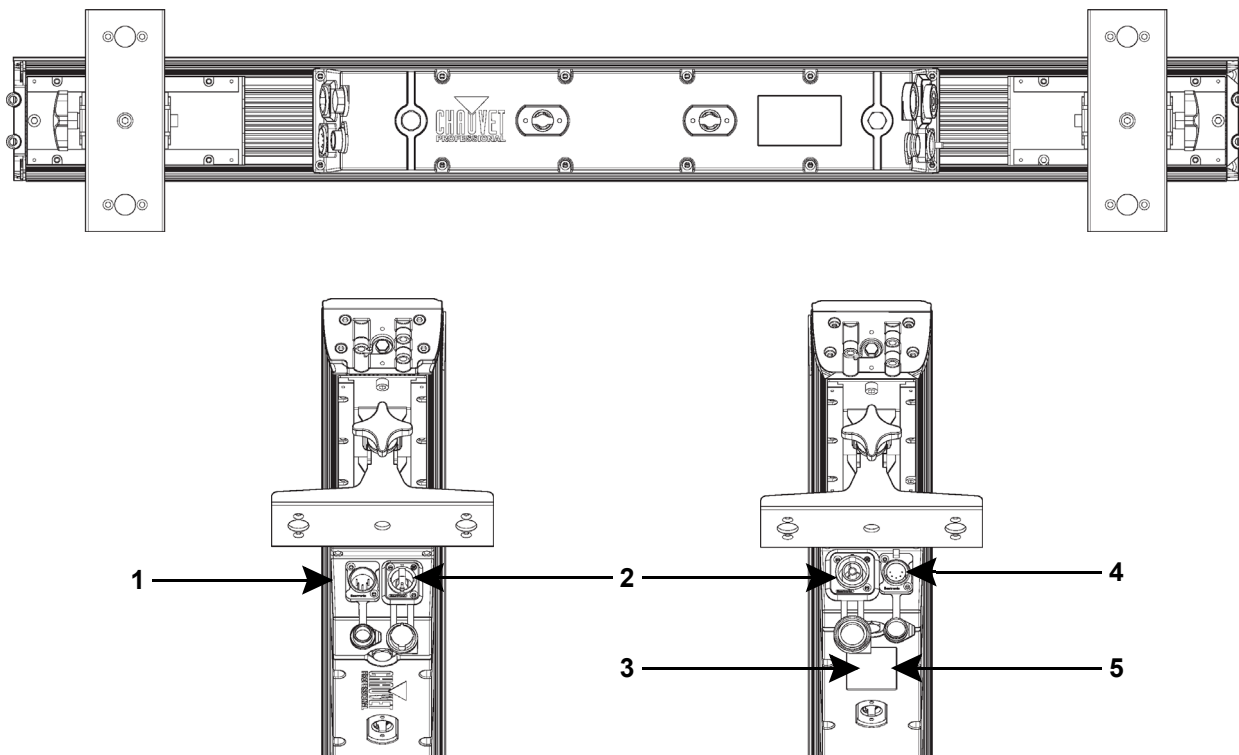

#	Name
1	DMX in
2	Power in/out
3	Menu display
4	DMX out
5	Menu buttons

Product Dimensions

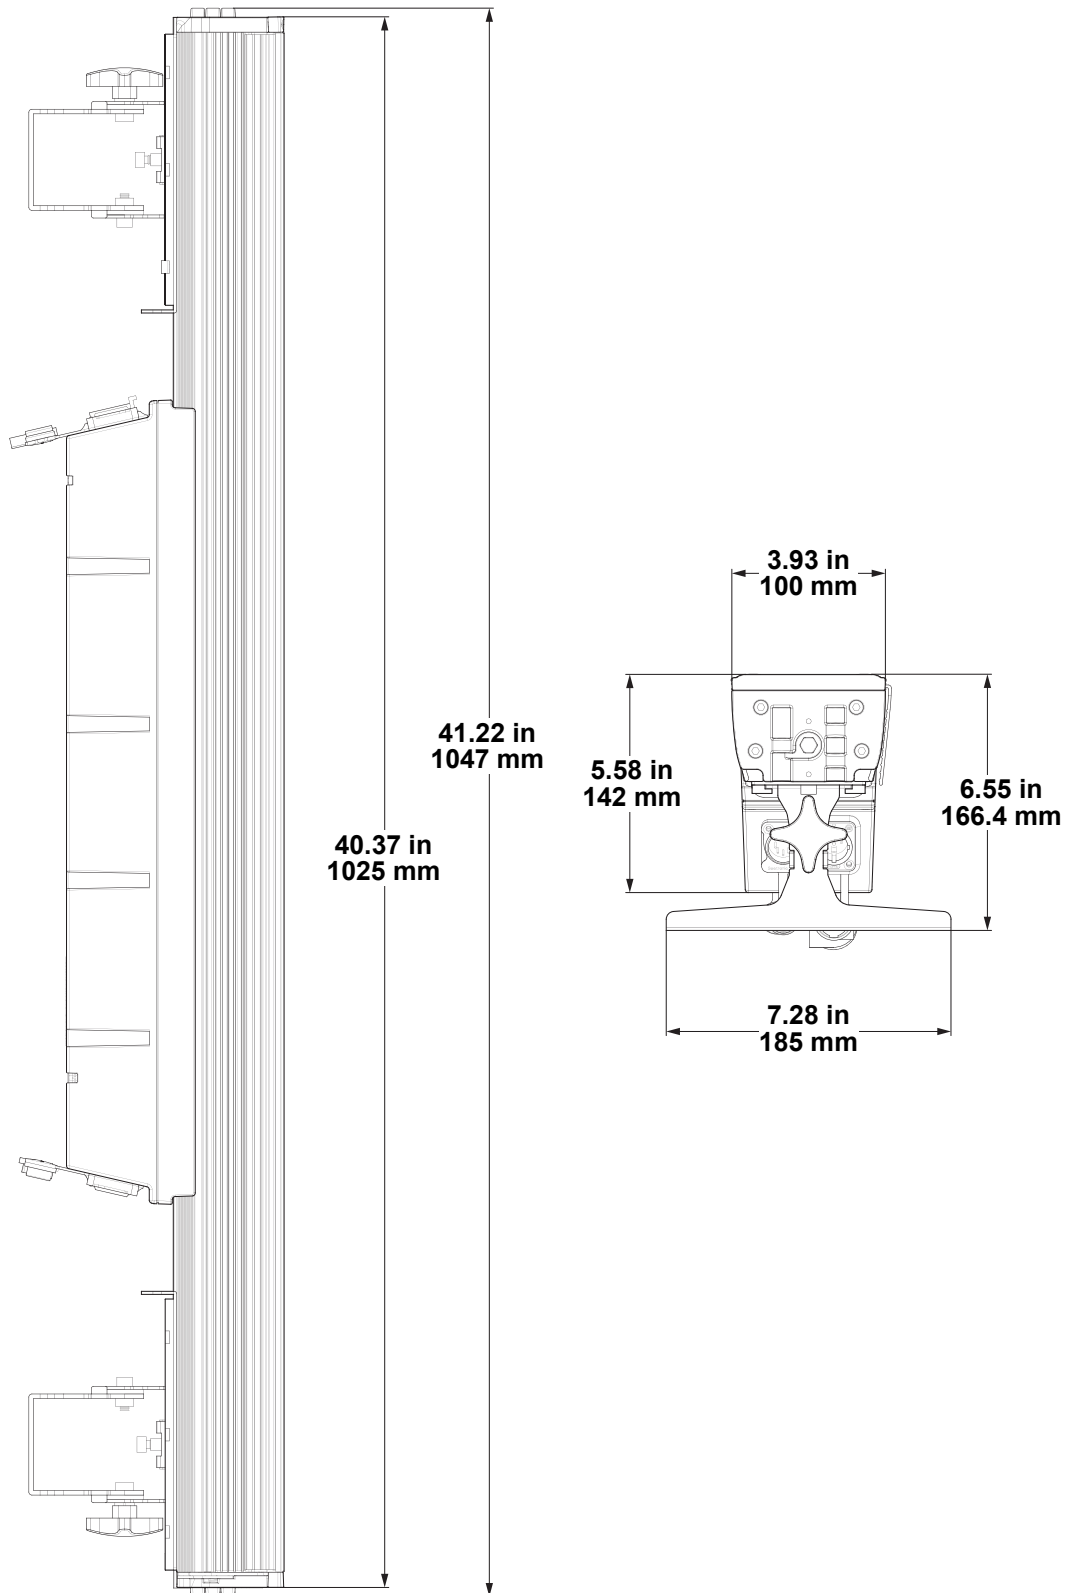

3. Setup

AC Power

The COLORado Batten Q15 has an auto-ranging power supply and it can work with an input voltage range of 100 to 240 VAC, 50/60 Hz.

To determine the product's power requirements (circuit breaker, power outlet, and wiring), use the current value listed on the label affixed to the product's back panel, or refer to the product's specifications chart.

The listed current rating indicates the product's average current draw under normal conditions.



- **Always connect the product to a protected circuit (a circuit breaker or fuse). Ensure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.**
- **To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.**



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

AC Plug

The COLORado Batten Q15 comes with a power input cable terminated with a Seetronic Powerkon A connector on one end and an Edison plug on the other end (U.S. market). If the power cable which came with the product has no plug, or if it is necessary to change the plug, use the table below to wire a plug.

Connection	Wire (U.S.)	Wire (Europe)	Screw Color
AC Live	Black	Brown	Yellow or Brass
AC Neutral	White	Blue	Silver
AC Ground	Green/Yellow	Green/Yellow	Green

Power Linking

It is possible to power link COLORado Batten Q15 products. See the table below for the current draw at each voltage and frequency:

	100 V, 60 Hz	120 V, 60 Hz	208 V, 60 Hz	230 V, 50 Hz	240 V, 50 Hz
Current Draw	1.958 A	1.606 A	0.951 A	0.860 A	0.826 A
Resting	0.080 A	0.102 A	0.125 A	0.117 A	0.117 A

Never exceed 12 A on a single circuit. Power-linking cables can be purchased separately.

DMX Linking

The COLORado Batten Q15 can be linked to a DMX controller using a 5-pin DMX connection. If using other DMX-compatible products with this product, it's possible to control each individually with a single DMX controller.

DMX Personalities

The COLORado Batten Q15 uses a 5-pin DMX data connection for its 9 DMX personalities, ranging from 4 channels (**1 Simple**) to 76 (**15 HSIC**).

- Refer to the [Operation](#) chapter to learn how to configure the COLORado Batten Q15 to work in these personalities.
- The [DMX Channel Assignments and Values](#) section provides detailed information regarding the DMX personalities.



For information about DMX standards, Master/Slave connectivity, or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: www.chauvetprofessional.com.

Remote Device Management

Remote Device Management, or RDM, is a standard for allowing DMX-enabled devices to communicate bi-directionally along existing DMX cabling. Check the DMX controller's User Manual or with the manufacturer as not all DMX controllers have this capability. The COLORado Batten Q15 supports RDM protocol that allows feedback to make changes to menu map options.

Master/Slave Connectivity

The Master/Slave mode allows an COLORado Batten Q15 (the master) to control one or more COLORado Batten Q15 products (the slaves) without a DMX controller. One COLORado Batten Q15 becomes the master when running an auto program or in Static mode.

Each slave's control panel must be configured to operate in Slave mode. During Master/Slave operation, the slaves will operate in unison with the master.



DO NOT connect a DMX controller to products operating in Master/Slave mode. The DMX controller signals may interfere with the signals from the master.




- The [Operation](#) section of this manual provides detailed instructions on how to configure the master and slaves.
- For more information about DMX standards or the DMX cables needed to link this product to a DMX controller, download the DMX primer from the Chauvet website: www.chauvetprofessional.com.

Filter Installation

The COLORado Batten Q15 includes a filter and a glare shield. Follow the procedure below to install or remove the filter or glare shield.

1. Locate the end of the product on the side which has the power and DMX input ports.
2. Squeeze the filter locking tabs in. The latch bar will pop up.
3. Slide the filter and/or glare shield in or out.
4. Press down on the latch bar until it clicks into place.

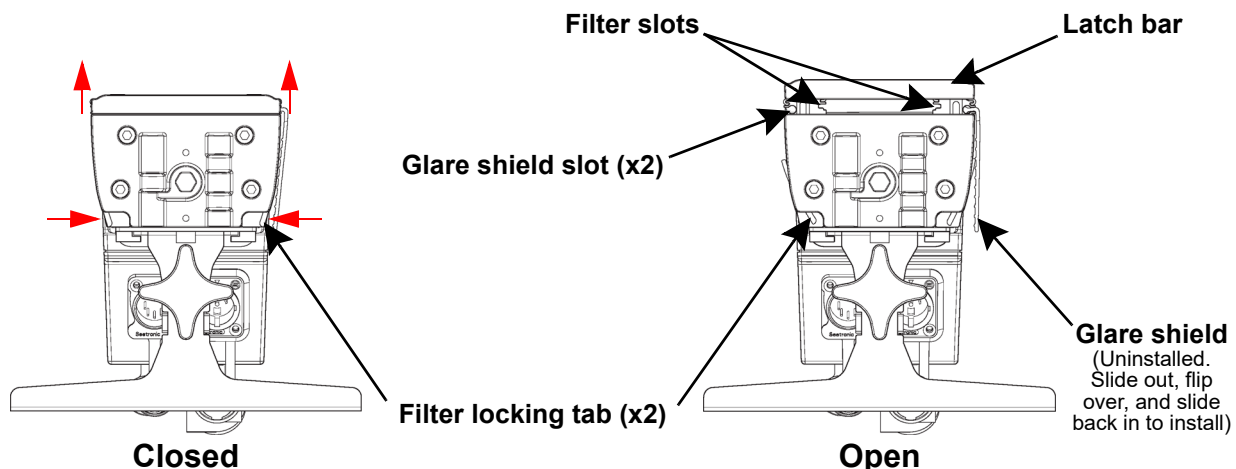

Mounting

Before mounting the product, read and follow the safety recommendations indicated in the [Safety Notes](#).

Orientation

Always mount this product in a safe position, making sure there is adequate room for ventilation, configuration, and maintenance.

Rigging

Chauvet recommends using the following general guidelines when mounting this product.


- Before deciding on a location for the product, make sure there is easy access to the product for maintenance and programming purposes.
- Make sure that the structure and attachment points can support the weight before hanging the product (see the [Technical Specifications](#) for weight information).
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity.
- When power linking multiple products, mount the products close enough for power-linking cables to reach.
- The bracket adjustment knobs allow for directional adjustment when aiming the product to the desired angle. Only loosen or tighten the bracket knobs manually. Using tools could damage the knobs.

Procedure


The COLORado Batten Q15 comes with 2 Omega brackets. The user can directly attach a mounting clamp (sold separately) to these Omega brackets. Make sure the clamp is capable of supporting the weight of this product. For the Chauvet Professional line of mounting clamps, go to <http://www.trusst.com/products>.

Mounting Diagram

2 mounting points

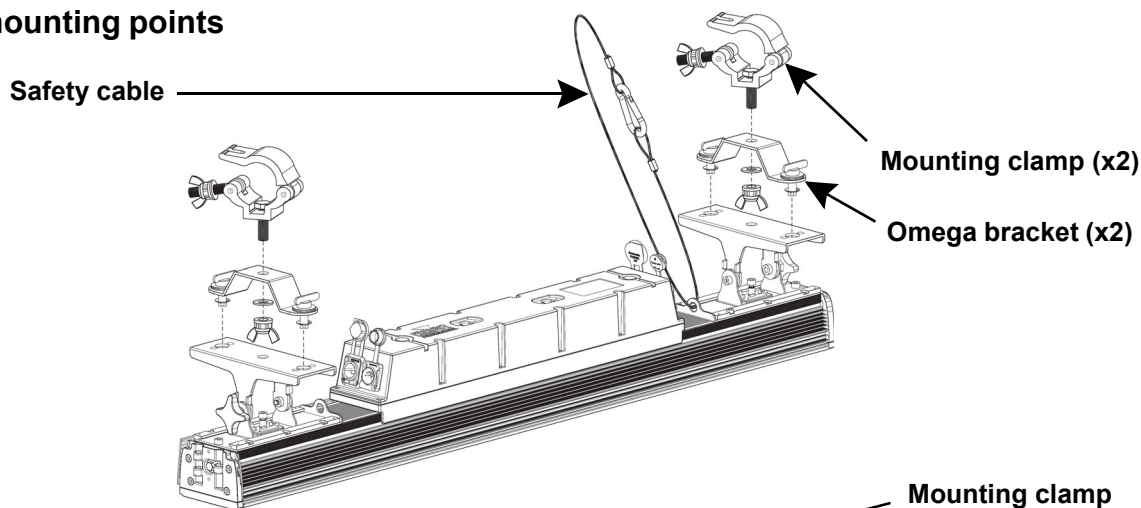

1 mounting point

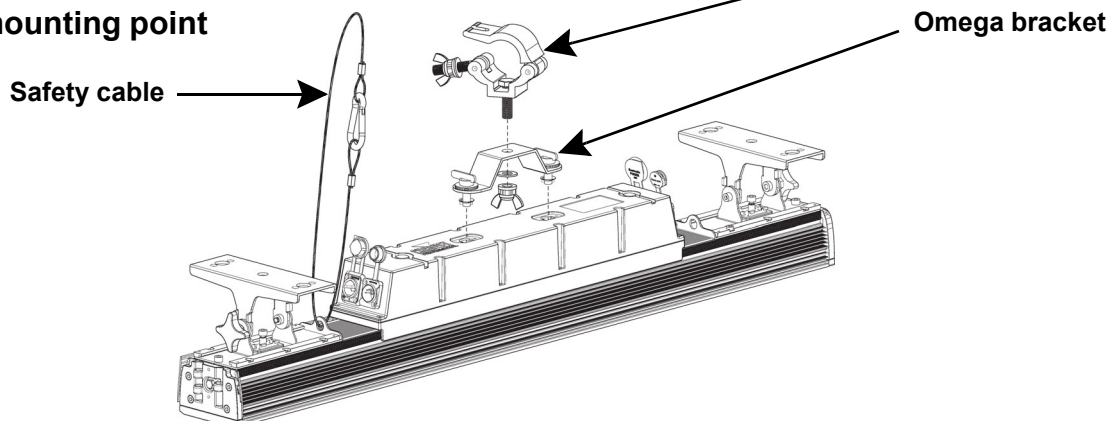

Base Plate

Each COLORado Batten Q15 comes with a base plate and 2 retaining pins, which can be used for floor mounting or vertical hanging.




The retaining pins each have a safety cable for added security.

Attaching the Base Plate


To attach the base plate to either end of the COLORado Batten Q15:

1. Align the base plate so the loops on the end of the product and the loops on the base plate line up and fit into each other.
2. Tighten the captive screws on the base plate.
3. Press and hold the latch button down on the first retaining pin, and insert it through one of the sets of loops on the product and base plate. Release the latch button, then repeat with the other pin.

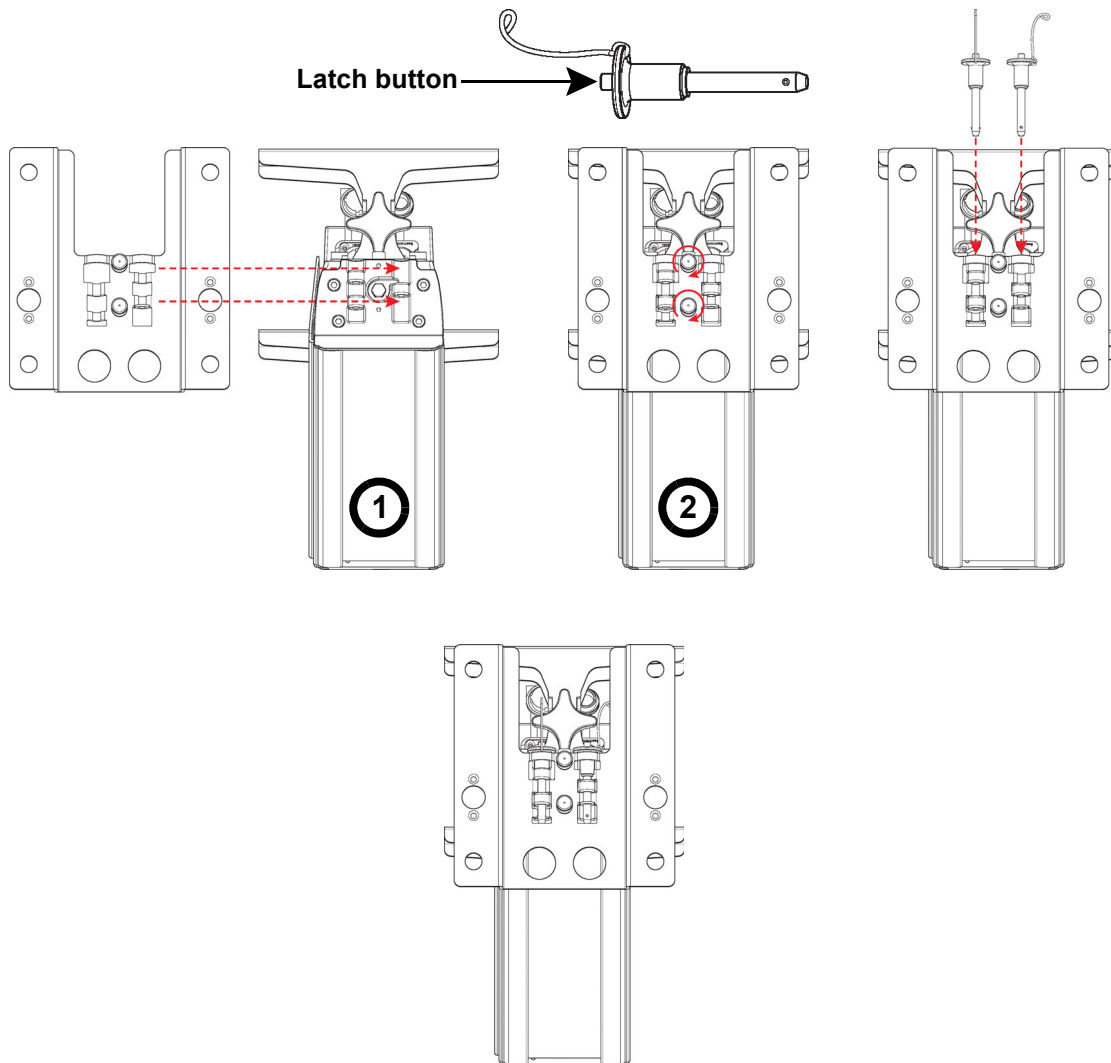

Mounting Diagram (with Base Plate)

Before mounting this product, read the [Safety Notes](#). Make sure the mounting clamp is capable of supporting the weight of the product. For our Chauvet line of mounting clamps, go to <http://trusst.com/productcategory/truss-clamps/>.

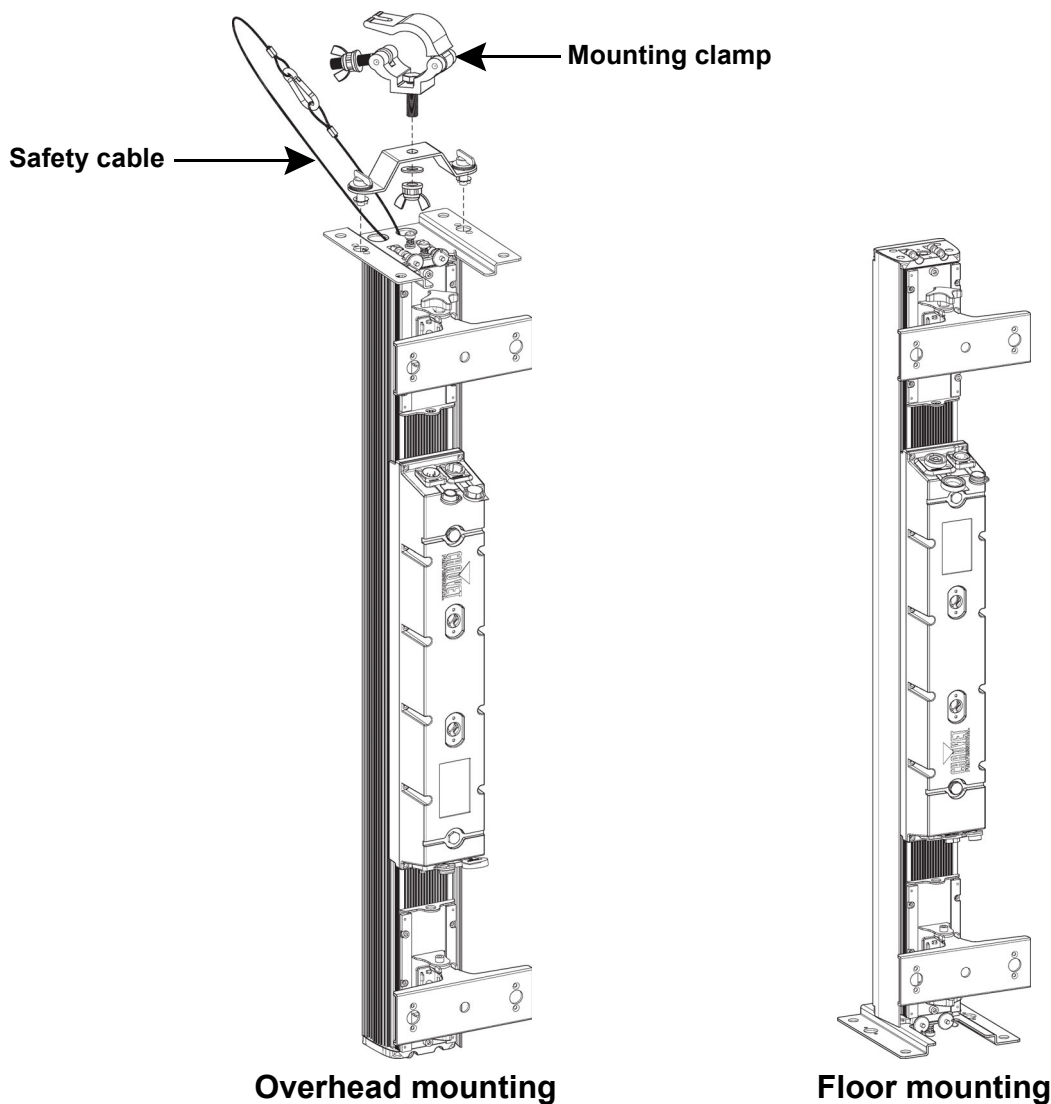

To properly floor-mount this product, the base plate must be bolted to a stable surface, such as the stage floor, or a large base plate.

Series Attachment Instructions


2 COLORado Batten Q15 products can be attached together with the included retaining pins to mount them both from one mounting point. Do not connect any more than 2 COLORado Batten Q15 products in a row when hanging vertically.



The retaining pins each have a safety cable for added security.

To attach 2 products in series:


1. Align them end to end so the loops on either end of the product line up with each other.
2. Press and hold the latch button down on the first retaining pin, and insert it through one of the sets of loops on both products. Release the latch button, then repeat with the other pin.

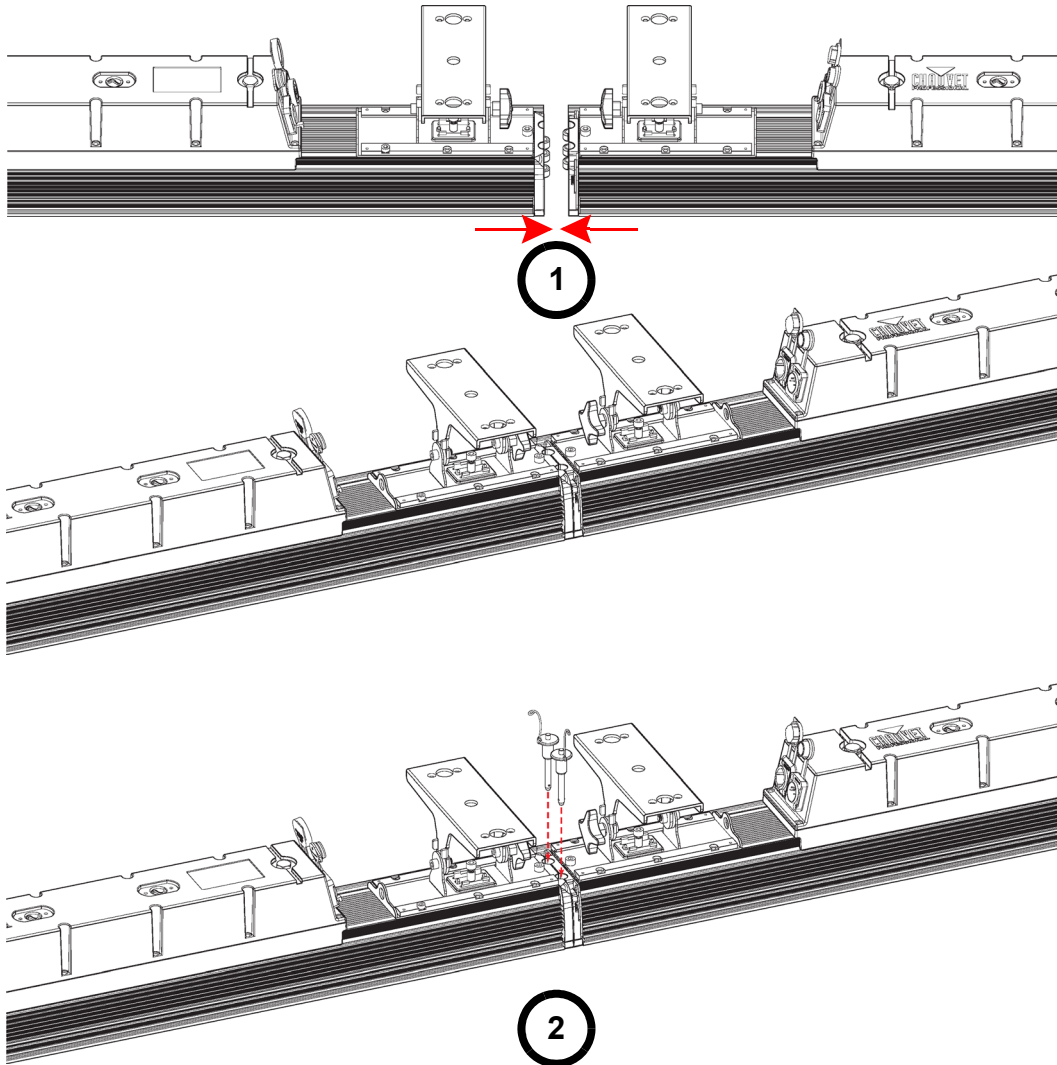

Install the safety cables last when attaching COLORado Batten Q15 products in series.

Mounting Products Attached in Series

1. Attach the base plate to the first product in the series. (See [Attaching the Base Plate](#))
2. Attach an omega bracket to the base plate, and a clamp to the omega bracket.
3. Attach the clamp to the desired structure or surface.
4. Attach a safety cable to the product's safety loop.

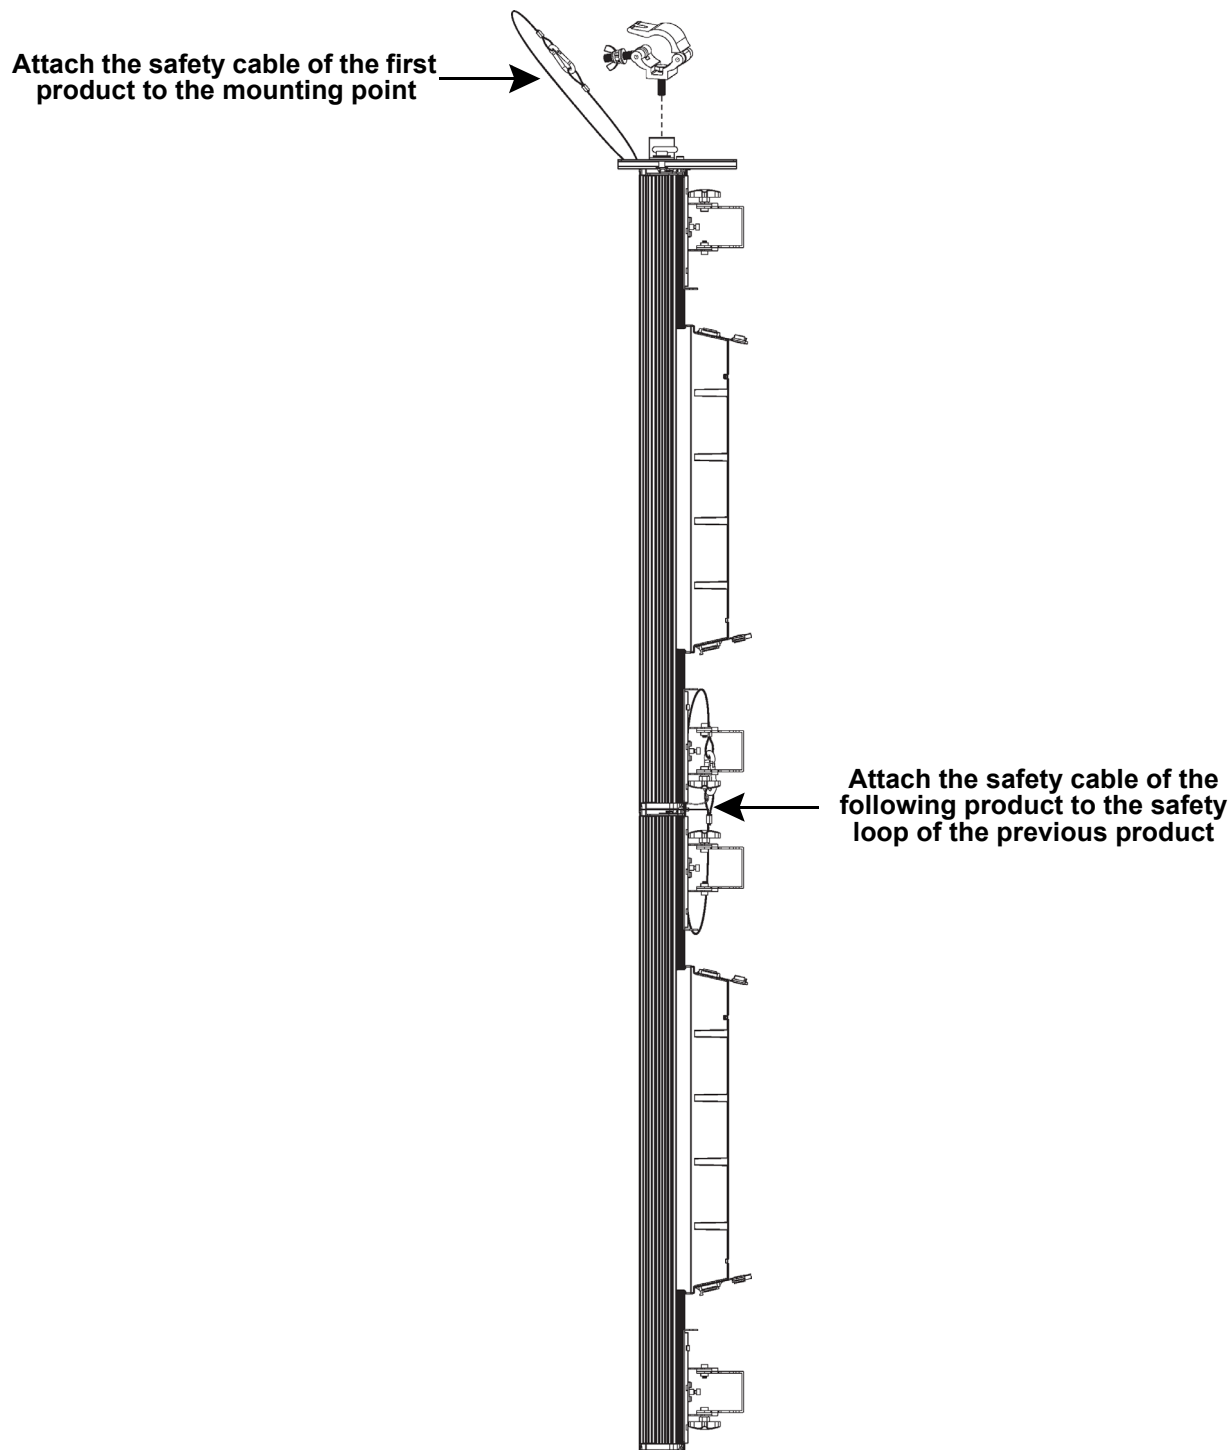

Never attach more than 2 products together when hanging vertically from a single mounting point.

4. Operation

Control Panel Description

Button	Function
<MENU>	Exits from the current menu or function
<ENTER>	Enables the currently displayed menu or sets the selected value into the selected function
<UP>	Navigates upwards through the menu list or increases the numeric value when in a function
<DOWN>	Navigates downwards through the menu list or decreases the value when in a function

Control Options

Set the COLORado Batten Q15 starting address in the 001–509 DMX range. This enables control of up to 6 products in the 76-channel **15 HSIC** personality, or up to 128 products in the 4-channel **1 Simple** personality.

Programming

Refer to the menu map to understand the menu options. The menu map shows the main menu and a variable number of programming levels for each option.

- To navigate to the desired option in the main menu, press <MENU> repeatedly until the option is indicated, or use <UP> or <DOWN> to navigate directly.
- Press <ENTER> to select the indicated option.
- Use <UP> or <DOWN> to navigate within a programming level until the desired option is indicated.
- To return to the main menu, press <MENU> repeatedly until it shows on the display.

Passcode

When prompted, enter the following passcode: <UP>, <DOWN>, <UP>, <DOWN>, <ENTER>. It is not possible to change this passcode.

Menu Map

Refer to the COLORado Batten Q15 product page on www.chauvetprofessional.com for the latest menu map.

Main Level	Programming Levels	Description
Start Address	1–509*	Selects DMX address (*highest channel restricted to personality chosen)
	1 Simple	4-channel: RGBW
	1 Basic	8-channel: 16-bit dimmer, RGBW, color macros, strobe
	1 Advanced	10-channel: 16-bit dimmer, RGBW, color macros, color temperature, strobe, dimmer speed
	1 HSIC	6-channel: dimmer, 16-bit hue, saturation, strobe, dimmer speed
	15 Pixel	45-channel (15-cell): RGB (per cell)
	15 Simple	60-channel (15-cell): RGBW (per cell)
	15 Basic	64-channel (15-cell): 16-bit dimmer, RGBW (per cell), color macros, strobe
	15 Advanced	66-channel (15-cell): 16-bit dimmer, RGBW (per cell), color macros, color temperature, strobe, dimmer speed
Personality	15 HSIC	76-channel (15-cell): dimmer (per cell), 16-bit hue (per cell), saturation (per cell), strobe (per cell), dimmer speed
Output Setting	Power Mode	Avoids going over the maximum temperature by adjusting output intensity
	Steady Mode	Uses lower output intensity at a constant rate to avoid going over the maximum temperature

Main Level	Programming Levels				Description
Static Colors	Preset Colors	Color 1–14	0–100%		Preset static colors
	CCT Temper	White 1–14			Preset color temperatures
	RGBW	Red	0–255		Combine red, green, blue, and white to make a custom color
		Green			
		Blue			
White					
Auto Programs	Run	AUTO.1–10		SPEED 0–100%	Selects automatic programs and program speed
		Program 1–10			
	Edit	Program 1–10	Scene-01–30	Red 0–255	Selects and edits a custom program
				Green 0–255	
				Blue 0–255	
White 0–255					
Master/ Slave	Master				DMX mode (Master)
	Slave				Slave mode
Dimmer Mode	OFF				Linear dimmer
	DIM1–4				Dimming curves DIM1 (fast) to DIM4 (slow)
LED Frequency	1200Hz				Sets the PWM frequency
	2000Hz				
	2400Hz				
	4000Hz				
	6000Hz				
	25000Hz				
Cell Order	1 - 15(Left to Right)				Sets order of cells
	15 - 1(Right to Left)				
Settings	**** (Enter Passcode)	DMX Error/ Loss	Hold Last		Continues last command upon loss of DMX
			Blackout		Blacks out product upon loss of DMX
		Disp TimeOut	On		Display backlight always on
			10s		Turns off display backlight after 10 seconds of inactivity
			20s		Turns off display backlight after 20 seconds of inactivity
			30s		Turns off display backlight after 30 seconds of inactivity
		Disp Passcode	On		Locks display (passcode is <UP> , <DOWN> , <UP> , <DOWN> , <ENTER>)
			Off		
Information	Fixture Hours		_ _ _ Hours		Shows total number of hours the product has been powered on
	Firmware Version		V _ . _		Shows current firmware version
	RDM	UID	_ _ _ _ _		Shows product UID
		Label	Batten Q15		Shows RDM label
Factory Reset	No		(Enter _ _ _ Passcode)		Resets the product to factory default settings
	Yes				

Operation

DMX Configuration

Use control configurations to operate the product with a DMX controller.

DMX Personalities

To set the DMX personality:

1. Go to the **Personality** main level.
2. Select the desired personality, from **1 Simple**, **1 Basic**, **1 Advanced**, **1 HSIC**, **15 Pixel**, **15 Simple**, **15 Basic**, **15 Advanced**, or **15 HSIC**.



- See the [Starting Address](#) section for the highest selectable starting address for each personality.
- Make sure that the starting addresses on the various products do not overlap due to the new personality setting.

Starting Address

Each product will respond to a unique starting address from the controller. All products with the same starting address will respond in unison. To set the starting address in DMX mode:

1. Go to the **Start Address** main level.
2. Select the starting address (**001–512**).

Cells	Personality	Channels	Highest Address	Products per Universe
1	1 Simple	4	509	128
	1 Basic	8	505	64
	1 Advanced	10	503	51
	1 HSIC	6	507	85
2	15 Pixel	45	465	11
	15 Simple	60	453	8
	15 Basic	64	449	8
	15 Advanced	66	447	7
	15 HSIC	76	437	6

DMX Channel Assignments and Values

15 HSIC

Channel	Function	Value	Percent/Setting
1	Dimmer 1	000 ⇄ 255	0–100%
2	Hue 1	000 ⇄ 255	0–100%
3	Fine hue 1	000 ⇄ 255	0–100%
4	Saturation 1	000 ⇄ 255	0–100%
5	Strobe 1	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Lightning effect, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
6	Dimmer 2	000 ⇄ 255	0–100%
7	Hue 2	000 ⇄ 255	0–100%
8	Fine hue 2	000 ⇄ 255	0–100%
9	Saturation 2	000 ⇄ 255	0–100%

Channel	Function	Value	Percent/Setting
10	Strobe 2	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Lightning effect, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
11	Dimmer 3	000 ⇄ 255	0–100%
12	Hue 3	000 ⇄ 255	0–100%
13	Fine hue 3	000 ⇄ 255	0–100%
14	Saturation 3	000 ⇄ 255	0–100%
15	Strobe 3	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Lightning effect, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
16	Dimmer 4	000 ⇄ 255	0–100%
17	Hue 4	000 ⇄ 255	0–100%
18	Fine hue 4	000 ⇄ 255	0–100%
19	Saturation 4	000 ⇄ 255	0–100%
20	Strobe 4	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Lightning effect, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
21	Dimmer 5	000 ⇄ 255	0–100%
22	Hue 5	000 ⇄ 255	0–100%
23	Fine hue 5	000 ⇄ 255	0–100%
24	Saturation 5	000 ⇄ 255	0–100%
25	Strobe 5	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Lightning effect, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
26	Dimmer 6	000 ⇄ 255	0–100%
27	Hue 6	000 ⇄ 255	0–100%
28	Fine hue 6	000 ⇄ 255	0–100%
29	Saturation 6	000 ⇄ 255	0–100%
30	Strobe 6	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Lightning effect, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
31	Dimmer 7	000 ⇄ 255	0–100%

Channel	Function	Value	Percent/Setting
32	Hue 7	000 ⇄ 255	0–100%
33	Fine hue 7	000 ⇄ 255	0–100%
34	Saturation 7	000 ⇄ 255	0–100%
35	Strobe 7	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Lightning effect, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
36	Dimmer 8	000 ⇄ 255	0–100%
37	Hue 8	000 ⇄ 255	0–100%
38	Fine hue 8	000 ⇄ 255	0–100%
39	Saturation 8	000 ⇄ 255	0–100%
40	Strobe 8	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Lightning effect, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
41	Dimmer 9	000 ⇄ 255	0–100%
42	Hue 9	000 ⇄ 255	0–100%
43	Fine hue 9	000 ⇄ 255	0–100%
44	Saturation 9	000 ⇄ 255	0–100%
45	Strobe 9	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Lightning effect, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
46	Dimmer 10	000 ⇄ 255	0–100%
47	Hue 10	000 ⇄ 255	0–100%
48	Fine hue 10	000 ⇄ 255	0–100%
49	Saturation 10	000 ⇄ 255	0–100%
50	Strobe 10	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Lightning effect, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
51	Dimmer 11	000 ⇄ 255	0–100%
52	Hue 11	000 ⇄ 255	0–100%
53	Fine hue 11	000 ⇄ 255	0–100%
54	Saturation 11	000 ⇄ 255	0–100%

Channel	Function	Value	Percent/Setting
55	Strobe 11	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Lightning effect, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
56	Dimmer 12	000 ⇄ 255	0–100%
57	Hue 12	000 ⇄ 255	0–100%
58	Fine hue 12	000 ⇄ 255	0–100%
59	Saturation 12	000 ⇄ 255	0–100%
60	Strobe 12	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Lightning effect, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
61	Dimmer 13	000 ⇄ 255	0–100%
62	Hue 13	000 ⇄ 255	0–100%
63	Fine hue 13	000 ⇄ 255	0–100%
64	Saturation 13	000 ⇄ 255	0–100%
65	Strobe 13	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Lightning effect, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
66	Dimmer 14	000 ⇄ 255	0–100%
67	Hue 14	000 ⇄ 255	0–100%
68	Fine hue 14	000 ⇄ 255	0–100%
69	Saturation 14	000 ⇄ 255	0–100%
70	Strobe 14	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Lightning effect, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
71	Dimmer 15	000 ⇄ 255	0–100%
72	Hue 15	000 ⇄ 255	0–100%
73	Fine hue 15	000 ⇄ 255	0–100%
74	Saturation 15	000 ⇄ 255	0–100%
75	Strobe 15	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Lightning effect, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast

Channel	Function	Value	Percent/Setting
76	Dimmer speed	000 ⇄ 009	Dimmer speed set through display menu
		010 ⇄ 029	Dimmer speed mode off
		030 ⇄ 069	Dimmer speed mode 1 (fastest)
		070 ⇄ 129	Dimmer speed mode 2
		130 ⇄ 189	Dimmer speed mode 3
		190 ⇄ 255	Dimmer speed mode 4 (slowest)

15 Advanced / 15 Basic / 15 Simple / 15 Pixel

P	S	B	A	Function	Value	Percent/Setting
–	–	1	1	Dimmer	000 ⇄ 255	0–100%
–	–	2	2	Fine dimmer	000 ⇄ 255	0–100%
1	1	3	3	Red 1	000 ⇄ 255	0–100%
2	2	4	4	Green 1	000 ⇄ 255	0–100%
3	3	5	5	Blue 1	000 ⇄ 255	0–100%
–	4	6	6	White 1	000 ⇄ 255	0–100%
4	5	7	7	Red 2	000 ⇄ 255	0–100%
5	6	8	8	Green 2	000 ⇄ 255	0–100%
6	7	9	9	Blue 2	000 ⇄ 255	0–100%
–	8	10	10	White 2	000 ⇄ 255	0–100%
7	9	11	11	Red 3	000 ⇄ 255	0–100%
8	10	12	12	Green 3	000 ⇄ 255	0–100%
9	11	13	13	Blue 3	000 ⇄ 255	0–100%
–	12	14	14	White 3	000 ⇄ 255	0–100%
10	13	15	15	Red 4	000 ⇄ 255	0–100%
11	14	16	16	Green 4	000 ⇄ 255	0–100%
12	15	17	17	Blue 4	000 ⇄ 255	0–100%
–	16	18	18	White 4	000 ⇄ 255	0–100%
13	17	19	19	Red 5	000 ⇄ 255	0–100%
14	18	20	20	Green 5	000 ⇄ 255	0–100%
15	19	21	21	Blue 5	000 ⇄ 255	0–100%
–	20	22	22	White 5	000 ⇄ 255	0–100%
16	21	23	23	Red 6	000 ⇄ 255	0–100%
17	22	24	24	Green 6	000 ⇄ 255	0–100%
18	23	25	25	Blue 6	000 ⇄ 255	0–100%
–	24	26	26	White 6	000 ⇄ 255	0–100%
19	25	27	27	Red 7	000 ⇄ 255	0–100%
20	26	28	28	Green 7	000 ⇄ 255	0–100%
21	27	29	29	Blue 7	000 ⇄ 255	0–100%
–	28	30	30	White 7	000 ⇄ 255	0–100%
22	29	31	31	Red 8	000 ⇄ 255	0–100%
23	30	32	32	Green 8	000 ⇄ 255	0–100%
24	31	33	33	Blue 8	000 ⇄ 255	0–100%
–	32	34	34	White 8	000 ⇄ 255	0–100%
25	33	35	35	Red 9	000 ⇄ 255	0–100%
26	34	36	36	Green 9	000 ⇄ 255	0–100%
27	35	37	37	Blue 9	000 ⇄ 255	0–100%
–	36	38	38	White 9	000 ⇄ 255	0–100%

P	S	B	A	Function	Value	Percent/Setting
28	37	39	39	Red 10	000 ⇄ 255	0–100%
29	38	40	40	Green 10	000 ⇄ 255	0–100%
30	39	41	41	Blue 10	000 ⇄ 255	0–100%
–	40	42	42	White 10	000 ⇄ 255	0–100%
31	41	43	43	Red 11	000 ⇄ 255	0–100%
32	42	44	44	Green 11	000 ⇄ 255	0–100%
33	43	45	45	Blue 11	000 ⇄ 255	0–100%
–	44	46	46	White 11	000 ⇄ 255	0–100%
34	45	47	47	Red 12	000 ⇄ 255	0–100%
35	46	48	48	Green 12	000 ⇄ 255	0–100%
36	47	49	49	Blue 12	000 ⇄ 255	0–100%
–	48	50	50	White 12	000 ⇄ 255	0–100%
37	49	51	51	Red 13	000 ⇄ 255	0–100%
38	50	52	52	Green 13	000 ⇄ 255	0–100%
39	51	53	53	Blue 13	000 ⇄ 255	0–100%
–	52	54	54	White 13	000 ⇄ 255	0–100%
40	53	55	55	Red 14	000 ⇄ 255	0–100%
41	54	56	56	Green 14	000 ⇄ 255	0–100%
42	55	57	57	Blue 14	000 ⇄ 255	0–100%
–	56	58	58	White 14	000 ⇄ 255	0–100%
43	57	59	59	Red 15	000 ⇄ 255	0–100%
44	58	60	60	Green 15	000 ⇄ 255	0–100%
45	59	61	61	Blue 15	000 ⇄ 255	0–100%
–	60	62	62	White 15	000 ⇄ 255	0–100%
–	–	63	63	Color Macros	000 ⇄ 010 No function 011 ⇄ 034 Red full, green increases 035 ⇄ 059 Red decreases, green full 060 ⇄ 084 Green full, blue increases 085 ⇄ 109 Green decreases, Blue full 110 ⇄ 134 Red increases, blue full 135 ⇄ 159 Red full, blue decreases 160 ⇄ 184 Red full, green and blue increase 185 ⇄ 209 Red and green decrease, blue full 210 ⇄ 255 Red, green, blue, and white full	

P	S	B	A	Function	Value	Percent/Setting
-	-	-	64	Color Temperature	000 ⇄ 010	No function
					011 ⇄ 028	1800K
					029 ⇄ 046	2200K
					047 ⇄ 064	2700K
					065 ⇄ 082	3000K
					083 ⇄ 100	3200K
					101 ⇄ 118	3500K
					119 ⇄ 136	4000K
					137 ⇄ 154	4200K
					155 ⇄ 172	4500K
					173 ⇄ 190	5600K
					191 ⇄ 208	6000K
					209 ⇄ 226	6500K
					227 ⇄ 244	7200K
					245 ⇄ 255	8000K
-	-	64	65	Strobe	000 ⇄ 009	No function
					010 ⇄ 099	Strobe, slow to fast
					100 ⇄ 109	No function
					110 ⇄ 179	Lightning effect, slow to fast
					180 ⇄ 189	No function
					190 ⇄ 255	Random strobe, slow to fast
-	-	-	66	Dimmer speed	000 ⇄ 009	Dimmer speed set through display menu
					010 ⇄ 029	Dimmer speed mode off
					030 ⇄ 069	Dimmer speed mode 1 (fastest)
					070 ⇄ 129	Dimmer speed mode 2
					130 ⇄ 189	Dimmer speed mode 3
					190 ⇄ 255	Dimmer speed mode 4 (slowest)

1 HSIC

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇄ 255	0–100%
2	Hue	000 ⇄ 255	0–100%
3	Fine hue	000 ⇄ 255	0–100%
4	Saturation	000 ⇄ 255	0–100%
5	Strobe	000 ⇄ 009	No function
		010 ⇄ 099	Strobe, slow to fast
		100 ⇄ 109	No function
		110 ⇄ 179	Lightning effect, slow to fast
		180 ⇄ 189	No function
		190 ⇄ 255	Random strobe, slow to fast
6	Dimmer speed	000 ⇄ 009	Dimmer speed set through display menu
		010 ⇄ 029	Dimmer speed mode off
		030 ⇄ 069	Dimmer speed mode 1 (fastest)
		070 ⇄ 129	Dimmer speed mode 2
		130 ⇄ 189	Dimmer speed mode 3
		190 ⇄ 255	Dimmer speed mode 4 (slowest)

1 Advanced / 1 Basic / 1 Simple

S	B	A	Function	Value	Percent/Setting
–	1	1	Dimmer	000 ⇔ 255	0–100%
–	2	2	Fine dimmer	000 ⇔ 255	0–100%
1	3	3	Red	000 ⇔ 255	0–100%
2	4	4	Green	000 ⇔ 255	0–100%
3	5	5	Blue	000 ⇔ 255	0–100%
4	6	6	White	000 ⇔ 255	0–100%
–	7	7	Color Macros	000 ⇔ 010 011 ⇔ 034 035 ⇔ 059 060 ⇔ 084 085 ⇔ 109 110 ⇔ 134 135 ⇔ 159 160 ⇔ 184 185 ⇔ 209 210 ⇔ 255	No function Red full, green increases Red decreases, green full Green full, blue increases Green decreases, Blue full Red increases, blue full Red full, blue decreases Red full, green and blue increase Red and green decrease, blue full Red, green, blue, and white full
–	–	8	Color Temperature	000 ⇔ 010 011 ⇔ 028 029 ⇔ 046 047 ⇔ 064 065 ⇔ 082 083 ⇔ 100 101 ⇔ 118 119 ⇔ 136 137 ⇔ 154 155 ⇔ 172 173 ⇔ 190 191 ⇔ 208 209 ⇔ 226 227 ⇔ 244 245 ⇔ 255	No function 1800K 2200K 2700K 3000K 3200K 3500K 4000K 4200K 4500K 5600K 6000K 6500K 7200K 8000K
–	8	9	Strobe	000 ⇔ 009 010 ⇔ 099 100 ⇔ 109 110 ⇔ 179 180 ⇔ 189 190 ⇔ 255	No function Strobe, slow to fast No function Lightning effect, slow to fast No function Random strobe, slow to fast
–	–	10	Dimmer speed	000 ⇔ 009 010 ⇔ 029 030 ⇔ 069 070 ⇔ 129 130 ⇔ 189 190 ⇔ 255	Dimmer speed set through display menu Dimmer speed mode off Dimmer speed mode 1 (fastest) Dimmer speed mode 2 Dimmer speed mode 3 Dimmer speed mode 4 (slowest)

Operation

Standalone Configuration

Static Colors

The static color modes allows for an unchanging color without a DMX controller.

Preset Colors

1. Go to the **Static Colors** main level.
2. Select the **Preset Colors** option.
3. Select from **Color 1–14**.
4. Increase or decrease the dimmer value from **0–100%**.

Preset Color Temperatures

1. Go to the **Static Colors** main level.
2. Select the **CCT Temper** option.
3. Select from **White 1–14**.
4. Increase or decrease the dimmer value from **0–100%**.

Custom Color Mixing

1. Go to the **Static Colors** main level.
2. Select the **RGBW** option.
3. Select which color value to edit, from **Red, Green, Blue, or White**.
4. Increase or decrease the value of the selected color from **0–255**.

Automatic Programs

The COLORado Batten Q15 has preset automatic programs and customizable programs.

Run Program

1. Go to the **Auto Programs** main level.
2. Select the **Run** option.
3. Select from **AUTO.1–10** (preset programs) or **Program 1–10** (customizable programs).
4. Increase or decrease the **SPEED** from **0–100%**.

Customize Program

1. Go to the **Auto Programs** main level.
2. Select the **Edit** option.
3. Select from **Program 1–10**.
4. Select from **Scene 01–30**.
5. Select which color value to edit, from **Red, Green, Blue, or White**.
6. Increase or decrease the value of the selected color from **0–255**.

Settings Configuration

Output Setting

To select how the product keeps from going over the maximum temperature:

1. Go to the **Output Setting** main level.
2. Select from **Power Mode** (adjusts output as temperature increases) or **Steady Mode** (maintains a lower output to keep temperature steady).

Master/Slave

To set the COLORado Batten Q15 product to master or slave mode:

1. Go to the **Master/Slave** main level.
2. Select from **Master** (sends control signal) or **Slave** (receives control signal).



- **Configure all the slave products before connecting the master to the daisy chain.**
- **Never connect a DMX controller to a DMX string configured for Master/Slave operation because the controller may interfere with the signals from the master.**
- **Do not connect more than 31 slaves to the master.**

Dimmer Mode

This setting determines how fast the output of the COLORado Batten Q15 changes when you modify the output value. This setting provides four different options to simulate the dimming curve of an incandescent lighting product.

1. Go to the **Dimmer Mode** main level.
2. Select a dimmer curve (**OFF**, **DIM1**, **DIM2**, **DIM3**, or **DIM4**).



OFF: The output is proportional (linear) to the dimmer channel value.

DIM1-4: The output follows the dimmer value based on the corresponding dimmer curve, DIM1 being the fastest.

Pulse Width Modulation

To set the PWM frequency:

1. Go to the **LED Frequency** main level.
2. Select the frequency, from **1200Hz**, **2000Hz**, **2400Hz**, **4000Hz**, **6000Hz**, or **25000Hz**.

Cell Order

To set the cell order:

1. Go to the **Cell Order** main level.
2. Select the direction from **1 - 15(Left to Right)** or **15 - 1(Right to Left)**.

DMX Error/Loss

To select what happens when a DMX signal is lost:

1. Go to the **Settings** main level.
2. Enter the passcode (<UP>, <DOWN>, <UP>, <DOWN>, <ENTER>).
3. Select the **DMX Error/Loss** option.
4. Select from **Hold Last** (continues last command) or **Blackout** (blacks out).

Display Timeout

To set the duration of inactivity before the display turns off:

1. Go to the **Settings** main level.
2. Enter the passcode (<UP>, <DOWN>, <UP>, <DOWN>, <ENTER>).
3. Select the **Disp TimeOut** option.
4. Select from **On** (display always on), **10s** (10 seconds), **20s** (20 seconds), or **30s** (30 seconds).

Display Passcode

To enable or disable to passcode lock:

1. Go to the **Settings** main level.
2. Enter the passcode (<UP>, <DOWN>, <UP>, <DOWN>, <ENTER>).
3. Select the **Disp Passcode** option.
4. Select from **On** (display locked) or **Off** (display unlocked).

Product Information

To view the product information:

1. Go to the **Information** main level.
2. Select from **Fixture Hours**, **Firmware Version**, or **RDM**.

Factory Reset

To reset the product to factory default settings:

1. Go to the **Factory Reset** main level.
2. Select from **No** (do not reset) or **Yes** (reset the product).
3. Enter the passcode (<UP>, <DOWN>, <UP>, <DOWN>, <ENTER>).

5. Maintenance

Product Maintenance

Dust build-up reduces light output performance and can cause overheating. This can lead to reduction of the light source's life and/or mechanical wear. To maintain optimum performance and minimize wear, clean each lighting product at least twice a month. However, be aware that usage and environmental conditions could be contributing factors to increase the cleaning frequency.

To clean the product, follow the instructions below:

1. Unplug the product from power.
2. Wait until the product is at room temperature.
3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external surface/vents.
4. Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
5. Apply the solution directly to a soft, lint free cotton cloth or a lens cleaning tissue.
6. Softly drag any dirt or grime to the outside of the transparent surface.
7. Gently polish the transparent surfaces until they are free of haze and lint.



Always dry the transparent surfaces carefully after cleaning them.

Torque Measurements

To maintain the IP rating when reassembling the product, use the given torque measurements for each of the following screws and bolts:

Fixture Parts	Torque Rating (Kgf.cm)	Torque Rating (lbf.in)
All screws	30.5	26.47278

Vacuum Test Measurements

Use the IP Tester from Chauvet Professional to ensure the product has been reassembled correctly by following the information below:

Parameters	Values
Method	Positive
Test pressure	1.31 kPa
Test duration	10 seconds
PASS state leak pressure	<0.1 kPa

6. Technical Specifications

Dimensions and Weight

Length	Width	Height	Weight
41.22 in (1,047 mm)	7.28 in (185 mm)	6.55 in (166.4 mm)	28.8 lb (13 kg)

Note: Dimensions in inches are rounded.

Power

Power Supply Type	Range	Voltage Selection
Switching (internal)	100 to 240 VAC, 50/60 Hz	Auto-ranging

Parameter	100 V, 60 Hz	120 V, 60 Hz	208 V, 60 Hz	230 V, 50 Hz	240 V, 50 Hz
Consumption	195 W	194 W	197 W	197 W	197 W
Operating Current	1.958 A	1.606 A	0.951 A	0.860 A	0.826 A
Resting Consumption	9 W	12 W	26 W	29 W	31 W
Resting Current	0.080 A	0.102 A	0.125 A	0.117 A	0.117 A
Power Linking Current	12 A	12 A	12 A	12 A	12 A

Power I/O	U.S./Worldwide	UK/Europe
Power Input Connector	Seetronic Powerkon IP65	Seetronic Powerkon IP65
Power Output Connector	Seetronic Powerkon IP65	Seetronic Powerkon IP65
Power Cable plug	Edison	Local plug

Light Source

Type	Color	Quantity	Power	Current	Lifespan
LED	Quad-color RGBW	15	20 W	800 mA	50,000 hours

Photometrics

Color Temperature Range	CRI	Installed Optics
3200 to 10000 K	41.9 at 3200 K	16°

Beam Angle (w/ Filter)	Beam Angle (w/o Filter)	Field Angle (w/ Filter)	Field Angle (w/o Filter)
15.5° x 14.7°	41.9° x 15.3°	28.6° x 28.1°	77.9° x 32.1°

Illuminance @ 5 m (w/ Filter)	Illuminance @ 5 m (w/o Filter)
653 lux	2,399 lux

Thermal

Maximum External Temperature	Cooling System
113 °F (45 °C)	Convection

Control

DMX I/O Connector	Channel Range
5-pin XLR	1 Cell: 4, 6, 8, 10; 15 Cell: 45, 60, 64, 66, 76

Ordering

Product Name	Item Name	Item Code	UPC Number
COLORado Batten Q15	COLORADOBATTENQ15	01031582	781462219307



Contact Us

General Information	Technical Support
Chauvet World Headquarters	
Address: 3360 Davie Rd., Suite 509 Davie, FL 33314 Voice: (954) 577-4455 Fax: (954) 929-5560 Toll Free: (800) 762-1084	Voice: (844) 393-7575 Fax: (954) 756-8015 Email: chauvetcs@chauvetlighting.com Website: www.chauvetprofessional.com
Chauvet U.K.	
Address: Pod 1 EVO Park Little Oak Drive, Sherwood Park Nottinghamshire, NG15 0EB UK Voice: +44 (0) 1773 511115 Fax: +44 (0) 1773 511110	Email: UKtech@chauvetlighting.eu Website: www.chauvetprofessional.eu
Chauvet Benelux	
Address: Vaartlaan 9 9800 Deinze Belgium Voice: +32 9 388 93 97	Email: BNLtech@chauvetlighting.eu Website: www.chauvetprofessional.eu
Chauvet France	
Address: 3, Rue Ampère 91380 Chilly-Mazarin France Voice: +33 1 78 85 33 59	Email: FRtech@chauvetlighting.fr Website: www.chauvetprofessional.eu
Chauvet Germany	
Address: Bruno-Bürgel-Str. 11 28759 Bremen Germany Voice: +49 421 62 60 20	Email: DEtech@chauvetlighting.de Website: www.chauvetprofessional.eu
Chauvet Mexico	
Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2) Zona Industrial Lerma Lerma, Edo. de México, CP 52000 Voice: +52 (728) 690-2010	Email: servicio@chauvet.com.mx Website: www.chauvetprofessional.mx

Warranty & Returns

For warranty terms and conditions and return information, please visit our website.

For customers in the United States and Mexico: www.chauvetlighting.com/warranty-registration.

For customers in the United Kingdom, Republic of Ireland, Belgium, the Netherlands, Luxembourg, France, and Germany: www.chauvetlighting.eu/warranty-registration.