

MX20

LED Display Controller



Specifications

DISTRIBUTED BY

CHAUVET
PROFESSIONAL

Change History

| Document Version | Release Date | Description |
|------------------|--------------|---------------|
| V1.0.0 | 2023-04-11 | First release |

Introduction

The MX20 is an all-in-one LED display controller in the brand-new control system COEX series of Xi'an NovaStar Tech Co., Ltd. (hereinafter referred to as NovaStar). This controller integrates video processing and video control into one box and offers 2x HDMI 1.3, 1x 3G-SDI input connectors, 6x Ethernet output ports, and 2x 10G optical ports. It can also work with the brand-new software VMP (Vision Management Platform) to provide a better operation and control experience.

Certifications

CE/FCC/IC

If the product does not have the relevant certifications required by the countries or regions where it is to be sold, please contact NovaStar to confirm or address the problem. Otherwise, the customer shall be responsible for the legal risks caused or NovaStar has the right to claim compensation.

Features

Inputs and Outputs

- 2 types of inputs
 - 2x HDMI 1.3 (with loop through)
 - 1x 3G-SDI (with loop through)
- 10-bit and 8-bit video inputs
- 3 types of outputs
 - 6x Gigabit Ethernet ports, load capacity up to 3.9 million pixels
 - 2x 10G optical ports
 - 1x SPDIF digital audio port
- 3 types of controls
 - 1x Genlock signal input (with loop through)
 - 2x Ethernet control ports
 - 1x Auxiliary port

Advanced Features

- 3 independent layers
Support up to 3 layers and layer priority adjustment in Z order.
- Image scaling
Support 4 image scaling modes: custom, pixel to pixel, snap to canvas and fill screen.
- 14Ch Color Correction
Support precise adjustment to hue, saturation and brightness of black, white and the 12 derived standard colors of the red, green and blue primary colors.
- Full-Grayscale Calibration
Work with NovaStar's high-precision calibration system and the C3200 scientific grade camera to generate unique calibration coefficients for each grayscale, ensuring uniformity of each grayscale and dramatically improving the image quality.
- Latency
 - Support low latency and the controller load capacity is not reduced. The latency at the controller is 0 frame (less than 1 ms) in Send-Only Controller working mode and 1 frame in All-In-One Controller working mode.
 - Support additional latency. Zero to two frames of latency can be added at the controller.
- No rectangle restriction
No rectangle restriction for irregular screens. This means when calculating resolutions, blank pixels do not count towards the total capacity. The used load capacity of Ethernet ports is the sum of the resolutions of all cabinets.
- Frame Rate Adaptive
The controller can be adaptive to various video input frame rates, including decimal frame rates. Custom frame rates are also supported and the step size of fine tuning frame rate is as small as 0.01 Hz.

- Two working modes
Support the All-In-One Controller and Send-Only Controller working modes.
 - In the Send-Only Controller mode, the latency can be reduced by one frame.
- In the All-In-One Controller mode, the layer and scaling functions are available.
- Display system monitoring
Support monitoring of the device status and screen status. Any fault and alarm information can be reported actively.

Device Controls


- VMP software control
The device can be connected to the VMP software to provide easy and convenient operations and smart device management.
- SNMP and Art-Net protocols supported
- Cascading control via Ethernet
The Gigabit Ethernet control ports support TCP/IP protocol and star topology. No switch or router is needed to deploy multiple devices on the same LAN via device cascading as the network switching function is already built in.

Function Limitations

- The Frame Rate Adaptive function can be achieved when the MX20 works with the A10s Pro receiving card. Currently supported driver ICs include ICND2055, ICND2065, MBI5253A, MBI5253B, MBI5754B, MBI5264, and CFD555. In addition, the .ncp file generated by the Cabinet Tool from NovaStar must be used.
- The Full Grayscale Calibration function can be achieved when the MX20 works with the A10s Pro receiving card.
- The low latency and the Genlock are mutually exclusive. To enable low latency, please make sure all Ethernet ports load the cabinets vertically and share the same Y coordinate.

Appearance


Front Panel

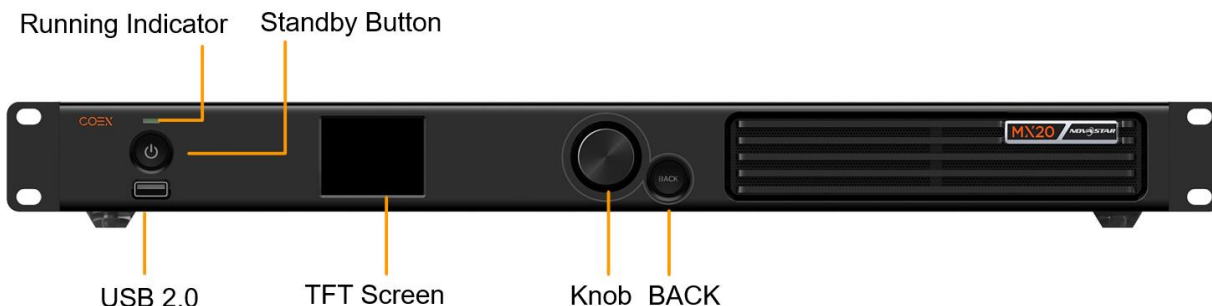

| Name | Description |
|-------------------|---|
| Running Indicator | <ul style="list-style-type: none"> • Solid red: Standby • Solid blue: The device is being started. • Solid green: The device is running normally. • Flashing red: The device is running abnormally. |
| Standby Button | <ul style="list-style-type: none"> • Press the button to power on or power off the device. • Hold down the button for 5s or longer to restart the device. |
| USB 2.0 | <ul style="list-style-type: none"> • Connect to a USB drive only to export the device diagnostic result. • Only the NTFS and FAT32 file systems are supported. Others are not supported. |
| LCT Screen | A 2-inch screen that displays the device status, menus, submenus and messages for parameter settings |

| Name | Description |
|------|---|
| Knob | <ul style="list-style-type: none"> On the home screen, press the knob to enter the main menu screen. On the main menu screen, rotate the knob to select a menu item or adjust the parameter value. Press the knob to confirm the operation. Hold down the knob and BACK button simultaneously for 5s or longer to lock or unlock the buttons. |
| BACK | Go back to the previous menu or cancel the current operation. |


Rear Panel

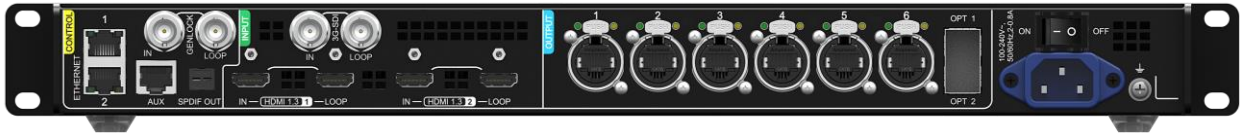

| Inputs | | | |
|-------------|-----|--------------------------|---|
| Type | Qty | Description | |
| HDMI 1.3 IN | 2 | Resolution | Max resolution: 1920×1200@60Hz Min resolution: 800×600@60Hz |
| | | Max width/height | Max width: 3840 pixels (3840×600@50Hz) Max height: 2560 pixels (800×2560@50Hz) |
| | | Frame Rate | 23.98 / 24 / 25 / 29.97 / 30 / 47.95 / 48 / 50 / 59.94 / 60 / 72 / 75 / 85 / 100 / 119.88 / 120 / 143.86 / 144 Hz |
| | | EDID management | Support standard resolutions, up to 1920×1080@60Hz. Support custom input resolutions. |
| | | HDCP | Support HDCP 1.4. |
| | | Interlaced signal inputs | Not supported |
| 3G-SDI IN | 1 | Standards | Support ST-424 (3G), ST-292 (HD) and ST-259 (SD) standard video inputs. Support 3G-Level A/Level B (DS mode). |
| | | Resolution | Max resolution: 1920×1080@60Hz |
| | | Frame Rates | 23.98 Hz to 60.00 Hz |
| | | Interlaced signal inputs | Support MQ level deinterlacing. The interlaced signals will be automatically detected and converted to progressive signals. |

| Outputs | | |
|-----------------------------|-----|---|
| Type | Qty | Description |
| 1-6 | 6 | <p>Gigabit Ethernet output ports. Support hot backup between Ethernet ports.</p> <ul style="list-style-type: none"> • Max device load capacity: 3.9 million pixels • The maximum load capacity per Ethernet port is as follows. For details, see the Ethernet Port Load Capacity section. <ul style="list-style-type: none"> - 8bit@60Hz: 659,722 pixels - 10bit@60Hz: 329,861 pixels. When the controller works with the A10s Pro receiving card, the capacity can be up to 494,791 pixels. |
| OPT 1-2 | 2 | <p>10G optical output ports</p> <ul style="list-style-type: none"> • OPT 1 transmits the data of Ethernet ports 1 to 6. • OPT 2 is the copy channel of OPT 1. |
| HDMI 1.3 LOOP | 2 | HDMI loop through. Up to 8 devices can be cabled in one loop. |
| 3G-SDI LOOP | 1 | SDI loop through. Up to 8 devices can be cabled in one loop. |
| SPDIF OUT | 1 | A digital audio output (Reserved) |
| Controls | | |
| Type | Qty | Description |
| ETHERNET | 2 | <p>Gigabit Ethernet control ports. Support TCP/IP protocol and star topology.</p> <p>They have the same functions without priority and order, and can be connected to VMP software. No switch or router is needed to deploy multiple devices on the same LAN via device cascading as the network switching function is already built in. Up to 20 MX20 devices can be cascaded.</p> |
| GENLOCK | 1 | <p>A pair of Genlock signal connectors. Support Bi-Level and Tri-Level.</p> <ul style="list-style-type: none"> • IN: Accept the sync signal. • LOOP: Loop the sync signal. <p>For standard Genlock signal generators, up to 20 MX20 devices can be cascaded.</p> |
| AUX | 1 | An auxiliary port that connects to the central control device (RS232) (Reserved) |
| Power | | |
| 100-240V~, 50/60Hz, 2- 0.8A | 1 | An AC power input connector and switch. |

Dimensions

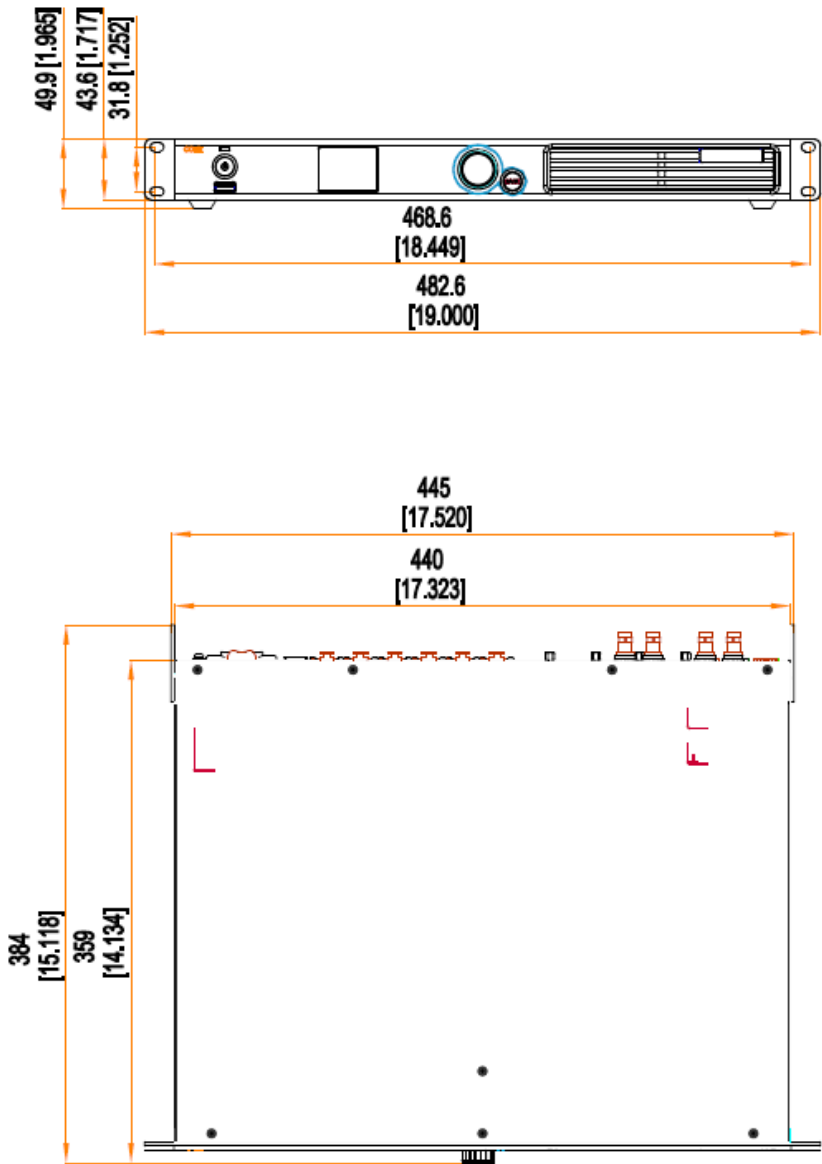

Tolerance: ±0.3 [±0.012] Unit: mm [inch]

Product Specifications

| | | |
|---------------------------|---------------------------|---------------------------------|
| Electrical Specifications | Power input | 100-240V~, 50/60Hz, 2- 0.8A |
| | Maximum power consumption | TBD W |
| Operating Environment | Temperature | -20°C to +50°C |
| | Humidity | 0% RH to 80% RH, non-condensing |
| Storage Environment | Temperature | -30°C to +80°C |
| | Humidity | 0% RH to 95% RH, non-condensing |

| | | |
|-------------------------|---|---|
| Physical Specifications | Dimensions | 482.6 mm × 49.9 mm × 384.0 mm |
| | Net weight | 4.5 kg |
| | Gross weight | 8.1 kg Note: It is the total weight of the product, accessories, and packing materials packed according to the packing specifications. |
| Packing Information | Packing box | 612.0 mm × 220.0 mm × 600.0 mm, kraft paper box |
| | Accessory box | 408.0 mm × 294.0 mm × 51.0 mm, white cardboard box |
| | Accessories | <ul style="list-style-type: none"> • 1x Power cord • 1x Ethernet cable • 1x HDMI cable • 1x Certificate of Approval |
| IP Rating | IP20 Please prevent the product from water intrusion and do not wet or wash the product. | |

The amount of power consumption may vary depending on various factors such as product settings, usage, and environment.

Video Source Specifications

| Input | Bit Depth | Sampling Format | Max Input Resolution |
|----------|------------|-----------------|----------------------|
| HDMI 1.3 | 8bit/10bit | RGB 4:4:4 | 1920×1200@60Hz |
| | | YCbCr 4:4:4 | |
| | | YCbCr 4:2:2 | |
| 3G-SDI | 10bit | YCbCr 4:2:2 | 1920×1080@60Hz |

Ethernet Port Load Capacity

When Working with A10s Pro Receiving Card

The formula of calculating the load capacity per Ethernet port and the detailed parameters are as follows.

- 8bit: Load capacity $\times 24 \times$ Frame rate $< 1000 \times 1000 \times 1000 \times 0.95$
- 10bit: Load capacity $\times 32 \times$ Frame rate $< 1000 \times 1000 \times 1000 \times 0.95$

| Max Load Capacity per Ethernet Port (Pixels) | | |
|--|---------------|-----------|
| Frame Rate / Bit Depth | 8bit | 10bit |
| 24 Hz | 1,649,305.556 | 1,236,979 |
| 25 Hz | 1,583,333 | 1,187,500 |
| 30 Hz | 1,319,444 | 989,583 |
| 50 Hz | 791,667 | 593,750 |
| 60 Hz | 659,722 | 494,792 |
| 120 Hz | 329,861 | 247,396 |
| 144 Hz | 274,884 | 206,163 |
| 240 Hz | 164,931 | 123,698 |

When Working with Other Armor Series Receiving Cards

The formula of calculating the load capacity per Ethernet port and the detailed parameters are as follows.

- 8bit: Load capacity $\times 24 \times$ Frame rate $< 1000 \times 1000 \times 1000 \times 0.95$
- 10bit: Load capacity $\times 48 \times$ Frame rate $< 1000 \times 1000 \times 1000 \times 0.95$

| Max Load Capacity per Ethernet Port (Pixels) | | |
|--|---------------|---------|
| Frame Rate / Bit Depth | 8bit | 10bit |
| 24 Hz | 1,649,305.556 | 824,653 |
| 25 Hz | 1,583,333 | 791,667 |
| 30 Hz | 1,319,444 | 659,722 |
| 50 Hz | 791,667 | 395,833 |
| 60 Hz | 659,722 | 329,861 |
| 120 Hz | 329,861 | 164,931 |
| 144 Hz | 274,884 | 137,442 |
| 240 Hz | 164,931 | 82,465 |

Notes and Cautions

Notes for Battery


- The battery is not intended to be replaced.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or the

leakage of flammable liquid or gas.

- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

Notes for Installation

When the product needs to be installed on the rack, 4 screws at least M5*12 should be used to fix it. The rack for installation shall bear at least 18 kg weight.

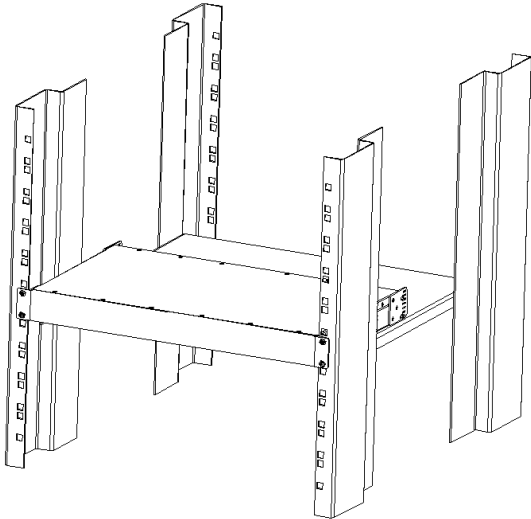

- Elevated Operating Ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (T_{ma}) specified by the manufacturer.
- Reduced Air Flow – Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
- Mechanical Loading – Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
- Circuit Overloading – Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.
- Reliable Earthing – Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g. use of power strips).

Others

This product can only be placed horizontally. Do not mount vertically or upside-down.

This is Class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Copyright © 2023 Xi'an NovaStar Tech Co., Ltd. All Rights Reserved.

No part of this document may be copied, reproduced, extracted or transmitted in any form or by any means without the prior written consent of Xi'an NovaStar Tech Co., Ltd.

Trademark

 is a trademark of Xi'an NovaStar Tech Co., Ltd.

Statement

Thank you for choosing NovaStar's product. This document is intended to help you understand and use the product. For accuracy and reliability, NovaStar may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact information given in this document. We will do our best to solve any issues, as well as evaluate and implement any suggestions.

| [Official website](http://www.novastar.tech)
| www.novastar.tech

| [Technical support](mailto:support@novastar.tech)
| support@novastar.tech