

MAVERICK STORM LT

DMX Chart

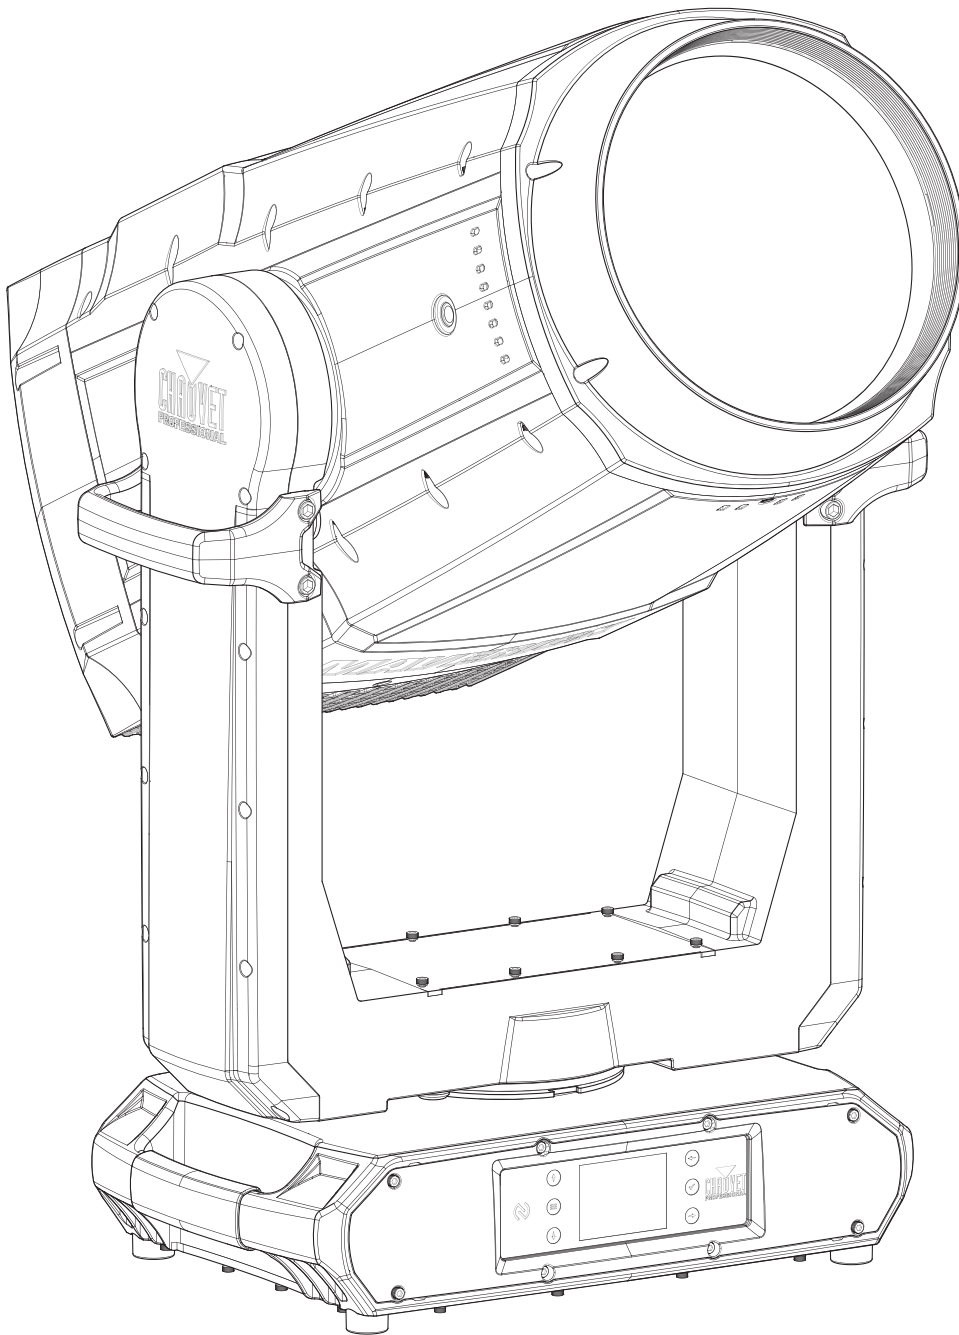


TABLE OF CONTENTS

DMX Chart	1
Control Chart	1
DMX Mode 53 CH	1
DMX Mode 37 CH	5
Contact Us	8

Control Chart

Value	Percent/Setting	Value	Percent/Setting	Value	Percent/Setting
000 ⇔ 007	No function	066	Inverse square dimmer curve	160 ⇔ 167	Reset iris
008 ⇔ 015	Blackout on pan/tilt	067	S-curve dimmer curve	168 ⇔ 175	Reset frost/animation
016 ⇔ 023	Blackout on color wheel	068 ⇔ 075	No function	176 ⇔ 183	Reset zoom
024 ⇔ 031	Blackout on gobo wheel	076 ⇔ 080	Sunshield on	184 ⇔ 191	Reset CMY+CTO
032 ⇔ 039	Blackout on pan/tilt/color	081 ⇔ 084	Sunshield off	192 ⇔ 199	Fan mode Silent/ECO
040 ⇔ 047	Blackout on pan/tilt/gobo	085 ⇔ 095	No function	200 ⇔ 207	Fan mode Full
048 ⇔ 055	Blackout on p/t/c/g	096 ⇔ 103	Reset pan	208 ⇔ 215	Fan mode Auto
056	No function	104 ⇔ 111	Reset tilt	216 ⇔ 220	Fan mode Studio/TV25
057	PWM 600 Hz	112 ⇔ 119	Reset color wheel	221 ⇔ 225	Fan mode Studio/TV35
058	PWM 2000 Hz	120 ⇔ 127	Reset gobo wheels	226 ⇔ 230	No function
059	PWM 15000 Hz	128 ⇔ 131	Auto CTB when gobo on	231 ⇔ 235	Pan/tilt swap on
060	PWM 65000 Hz	132 ⇔ 135	Auto CTB when gobo off	236 ⇔ 240	Pan/tilt swap off
061 ⇔ 063	No function	136 ⇔ 143	Reset prisms	241 ⇔ 245	Minimum Zoom Focus off
064	Linear dimmer curve	144 ⇔ 151	Reset frames	246 ⇔ 250	Minimum Zoom Focus on
065	Square dimmer curve	152 ⇔ 159	Reset all	251 ⇔ 255	No function

DMX Mode 53 CH

53 CH	Function	Value	Percent/Setting
1	Pan	000 ⇔ 255	0–100%
2	Fine pan	000 ⇔ 255	16-bit, 0–100%
3	Tilt	000 ⇔ 255	0–100%
4	Fine tilt	000 ⇔ 255	16-bit, 0–100%
5	Pan/tilt speed	000 ⇔ 255	Fast to slow
6	Dimmer	000 ⇔ 255	0–100%
7	Fine dimmer	000 ⇔ 255	16-bit, 0–100%
8	Strobe	000 ⇔ 003	Off
		000 ⇔ 007	On
		000 ⇔ 076	Strobe, slow to fast
		077 ⇔ 145	Pulse strobe, slow to fast
		146 ⇔ 215	Random strobe, slow to fast
9	Virtual strobe	216 ⇔ 255	On
		000 ⇔ 001	No function
		002 ⇔ 128	Shake, slow to fast
10	Cyan	129 ⇔ 255	Fade, slow to fast
		000 ⇔ 255	0–100%
11	Magenta	000 ⇔ 255	0–100%
12	Yellow	000 ⇔ 255	0–100%
13	CTO	000 ⇔ 255	0–100%

DMX CHART



V1.26

53 CH	Function	Value	Percent/Setting
14	Color wheel	000 ⇔ 009	Open
		010 ⇔ 019	Color 1
		020 ⇔ 029	Color 2
		030 ⇔ 039	Color 3
		040 ⇔ 049	Color 4
		050 ⇔ 059	Color 5
		060 ⇔ 187	Color wheel indexing
		188 ⇔ 219	Color scroll, fast to slow
		220 ⇔ 223	Stop
		224 ⇔ 255	Reverse color scroll, slow to fast
15	Rotating gobo wheel	000 ⇔ 007	Open
		008 ⇔ 015	Gobo 1
		016 ⇔ 023	Gobo 2
		024 ⇔ 031	Gobo 3
		032 ⇔ 039	Gobo 4
		040 ⇔ 047	Gobo 5
		048 ⇔ 055	Gobo 6
		056 ⇔ 063	Gobo 7
		064 ⇔ 071	Gobo 7 shaking
		072 ⇔ 079	Gobo 6 shaking
		080 ⇔ 087	Gobo 5 shaking
		088 ⇔ 095	Gobo 4 shaking
		096 ⇔ 103	Gobo 3 shaking
		104 ⇔ 111	Gobo 2 shaking
		112 ⇔ 119	Gobo 1 shaking
		120 ⇔ 135	Open
		236 ⇔ 199	Gobo scroll, slow to fast
		300 ⇔ 255	Reverse gobo scroll, slow to fast
16	Gobo rotate	000 ⇔ 063	Gobo indexing
		064 ⇔ 145	Gobo rotate, fast to slow
		146 ⇔ 149	Stop
		150 ⇔ 231	Reverse gobo rotate, slow to fast
		232 ⇔ 255	Gobo bounce, long to short
17	Fine gobo rotate	000 ⇔ 255	16-bit gobo indexing

53 CH	Function	Value	Percent/Setting
18	Static gobo wheel	000 ⇄ 005	Open
		006 ⇄ 011	Gobo 1
		012 ⇄ 017	Gobo 2
		018 ⇄ 023	Gobo 3
		024 ⇄ 029	Gobo 4
		030 ⇄ 035	Gobo 5
		036 ⇄ 041	Gobo 6
		042 ⇄ 047	Gobo 7
		048 ⇄ 053	Gobo 8
		054 ⇄ 063	Gobo 9
		064 ⇄ 069	Gobo 9 shaking
		070 ⇄ 075	Gobo 8 shaking
		076 ⇄ 081	Gobo 7 shaking
		082 ⇄ 087	Gobo 6 shaking
		088 ⇄ 093	Gobo 5 shaking
		094 ⇄ 099	Gobo 4 shaking
		100 ⇄ 105	Gobo 3 shaking
		106 ⇄ 111	Gobo 2 shaking
		112 ⇄ 117	Gobo 1 shaking
19	Animation	118 ⇄ 127	Open
		128 ⇄ 191	Gobo scroll, slow to fast
		192 ⇄ 255	Reverse gobo scroll, slow to fast
20	Animation rotate	000 ⇄ 124	Animation rotate, fast to slow
		125 ⇄ 130	Stop
		131 ⇄ 255	Reverse animation rotate, slow to fast
21	Frame 1-1	000 ⇄ 255	
22	Fine frame 1-1	000 ⇄ 255	
23	Frame 1-2	000 ⇄ 255	
24	Fine frame 1-2	000 ⇄ 255	
25	Frame 2-1	000 ⇄ 255	
26	Fine frame 2-1	000 ⇄ 255	
27	Frame 2-2	000 ⇄ 255	
28	Fine frame 2-2	000 ⇄ 255	
29	Frame 3-1	000 ⇄ 255	
30	Fine frame 3-1	000 ⇄ 255	
31	Frame 3-2	000 ⇄ 255	
32	Fine frame 3-2	000 ⇄ 255	
33	Frame 4-1	000 ⇄ 255	
34	Fine frame 4-1	000 ⇄ 255	
35	Frame 4-2	000 ⇄ 255	
36	Fine frame 4-2	000 ⇄ 255	
37	Frame rotate	000 ⇄ 255	
38	Fine frame rotate	000 ⇄ 255	
39	Focus	000 ⇄ 255	0–100%
40	Fine focus	000 ⇄ 255	16-bit, 0–100%

DMX CHART



V1.26

53 CH	Function	Value	Percent/Setting
41	Auto focus	000 ⇔ 010	No function
		011 ⇔ 030	0–5 meters, gobo 1
		031	6 meters, gobo 1
		032	7 meters, gobo 1
		033	8 meters, gobo 1
		034	9 meters, gobo 1
		035	10 meters, gobo 1
		036	12.5 meters, gobo 1
		037	15 meters, gobo 1
		038	17.5 meters, gobo 1
		039	20–60 meters, gobo 1
		040	Auto detect distance
		041 ⇔ 255	No function
42	Zoom	000 ⇔ 255	Wide to narrow
43	Fine zoom	000 ⇔ 255	16-bit, wide to narrow
44	Prism 1	000 ⇔ 004	No function
		005 ⇔ 255	Prism effect
45	Prism 1 rotate	000 ⇔ 127	Prism indexing
		128 ⇔ 189	Prism rotate, fast to slow
		190 ⇔ 193	Stop
		194 ⇔ 255	Prism rotate, slow to fast
46	Prism 2	000 ⇔ 004	No function
		005 ⇔ 255	Prism effect
47	Prism 2 rotate	000 ⇔ 127	Prism indexing
		128 ⇔ 189	Prism rotate, fast to slow
		190 ⇔ 193	Stop
		194 ⇔ 255	Prism rotate, slow to fast
48	Iris	000 ⇔ 063	Open to close
		064 ⇔ 127	Auto open–close–open, slow to fast
		128 ⇔ 191	Auto close–open, slow to fast
		192 ⇔ 255	Auto open–close, slow to fast
49	Frost 1	000 ⇔ 255	0–100%
50	Frost 2	000 ⇔ 255	0–100%
51	CMY macro	000 ⇔ 009	No function
		010 ⇔ 255	CMY macro
52	CMY macro speed	000 ⇔ 255	Fast to slow
53	Control	000 ⇔ 255	See the Control Chart

DMX Mode 37 CH

37 CH	Function	Value	Percent/Setting
1	Pan	000 ⇄ 255	0–100%
2	Fine pan	000 ⇄ 255	16-bit, 0–100%
3	Tilt	000 ⇄ 255	0–100%
4	Fine tilt	000 ⇄ 255	16-bit, 0–100%
5	Pan/tilt speed	000 ⇄ 255	Fast to slow
6	Dimmer	000 ⇄ 255	0–100%
7	Strobe	000 ⇄ 003	Off
		000 ⇄ 007	On
		000 ⇄ 076	Strobe, slow to fast
		077 ⇄ 145	Pulse strobe, slow to fast
		146 ⇄ 215	Random strobe, slow to fast
		216 ⇄ 255	On
8	Virtual strobe	000 ⇄ 001	No function
		002 ⇄ 128	Shake, slow to fast
		129 ⇄ 255	Fade, slow to fast
9	Cyan	000 ⇄ 255	0–100%
10	Magenta	000 ⇄ 255	0–100%
11	Yellow	000 ⇄ 255	0–100%
12	CTO	000 ⇄ 255	0–100%
13	Color wheel	000 ⇄ 009	Open
		010 ⇄ 019	Color 1
		020 ⇄ 029	Color 2
		030 ⇄ 039	Color 3
		040 ⇄ 049	Color 4
		050 ⇄ 059	Color 5
		060 ⇄ 187	Color wheel indexing
		188 ⇄ 219	Color scroll, fast to slow
		220 ⇄ 223	Stop
14	Rotating gobo wheel	224 ⇄ 255	Reverse color scroll, slow to fast
		000 ⇄ 007	Open
		008 ⇄ 015	Gobo 1
		016 ⇄ 023	Gobo 2
		024 ⇄ 031	Gobo 3
		032 ⇄ 039	Gobo 4
		040 ⇄ 047	Gobo 5
		048 ⇄ 055	Gobo 6
		056 ⇄ 063	Gobo 7
		064 ⇄ 071	Gobo 7 shaking
		072 ⇄ 079	Gobo 6 shaking
		080 ⇄ 087	Gobo 5 shaking
		088 ⇄ 095	Gobo 4 shaking
		096 ⇄ 103	Gobo 3 shaking
		104 ⇄ 111	Gobo 2 shaking
		112 ⇄ 119	Gobo 1 shaking
		120 ⇄ 135	Open
		236 ⇄ 199	Gobo scroll, slow to fast
		300 ⇄ 255	Reverse gobo scroll, slow to fast

DMX CHART



V1.26

37 CH	Function	Value	Percent/Setting
15	Gobo rotate	000 ⇔ 063	Gobo indexing
		064 ⇔ 145	Gobo rotate, fast to slow
		146 ⇔ 149	Stop
		150 ⇔ 231	Reverse gobo rotate, slow to fast
		232 ⇔ 255	Gobo bounce, long to short
16	Static gobo wheel	000 ⇔ 005	Open
		006 ⇔ 011	Gobo 1
		012 ⇔ 017	Gobo 2
		018 ⇔ 023	Gobo 3
		024 ⇔ 029	Gobo 4
		030 ⇔ 035	Gobo 5
		036 ⇔ 041	Gobo 6
		042 ⇔ 047	Gobo 7
		048 ⇔ 053	Gobo 8
		054 ⇔ 063	Gobo 9
		064 ⇔ 069	Gobo 9 shaking
		070 ⇔ 075	Gobo 8 shaking
		076 ⇔ 081	Gobo 7 shaking
		082 ⇔ 087	Gobo 6 shaking
		088 ⇔ 093	Gobo 5 shaking
		094 ⇔ 099	Gobo 4 shaking
		100 ⇔ 105	Gobo 3 shaking
		106 ⇔ 111	Gobo 2 shaking
		112 ⇔ 117	Gobo 1 shaking
		118 ⇔ 127	Open
		128 ⇔ 191	Gobo scroll, slow to fast
		192 ⇔ 255	Reverse gobo scroll, slow to fast
17	Animation	000 ⇔ 255	Animation effect
18	Animation rotate	000 ⇔ 124	Animation rotate, fast to slow
		125 ⇔ 130	Stop
		131 ⇔ 255	Reverse animation rotate, slow to fast
19	Frame 1-1	000 ⇔ 255	
20	Frame 1-2	000 ⇔ 255	
21	Frame 2-1	000 ⇔ 255	
22	Frame 2-2	000 ⇔ 255	
23	Frame 3-1	000 ⇔ 255	
24	Frame 3-2	000 ⇔ 255	
25	Frame 4-1	000 ⇔ 255	
26	Frame 4-2	000 ⇔ 255	
27	Frame rotate	000 ⇔ 255	
28	Focus	000 ⇔ 255	0–100%
29	Zoom	000 ⇔ 255	Wide to narrow
30	Prism 1	000 ⇔ 004	No function
		005 ⇔ 255	Prism effect
31	Prism 1 rotate	000 ⇔ 127	Prism indexing
		128 ⇔ 189	Prism rotate, fast to slow
		190 ⇔ 193	Stop
		194 ⇔ 255	Prism rotate, slow to fast

37 CH	Function	Value	Percent/Setting
32	Prism 2	000 ⇔ 004 005 ⇔ 255	No function Prism effect
33	Prism 2 rotate	000 ⇔ 127 128 ⇔ 189 190 ⇔ 193 194 ⇔ 255	Prism indexing Prism rotate, fast to slow Stop Prism rotate, slow to fast
34	Iris	000 ⇔ 063 064 ⇔ 127 128 ⇔ 191 192 ⇔ 255	Open to close Auto open–close–open, slow to fast Auto close–open, slow to fast Auto open–close, slow to fast
35	Frost 1	000 ⇔ 255	0–100%
36	Frost 2	000 ⇔ 255	0–100%
37	Control	000 ⇔ 255	See the Control Chart

Contact Us

General Information	Technical Support
Chauvet World Headquarters	
Address: 3360 Davie Rd., Suite 509 Davie, FL 33314 Voice: (954) 577-4455 Fax: (954) 929-5560 Toll Free: (800) 762-1084	Voice: (844) 393-7575 Fax: (954) 756-8015 Email: chauvetcs@chauvetlighting.com Website: www.chauvetprofessional.com
Chauvet U.K.	
Address: Pod 1 EVO Park Little Oak Drive, Sherwood Park Nottinghamshire, NG15 0EB UK Voice: +44 (0) 1773 511115 Fax: +44 (0) 1773 511110	Email: UKtech@chauvetlighting.eu Website: www.chauvetprofessional.eu
Chauvet Benelux	
Address: Vaartlaan 9 9800 Deinze Belgium Voice: +32 9 388 93 97	Email: BNLtech@chauvetlighting.eu Website: www.chauvetprofessional.eu
Chauvet France	
Address: 3, Rue Ampère 91380 Chilly-Mazarin France Voice: +33 1 78 85 33 59	Email: FRtech@chauvetlighting.fr Website: www.chauvetprofessional.eu
Chauvet Germany	
Address: Bruno-Bürgel-Str. 11 28759 Bremen Germany Voice: +49 421 62 60 20	Email: DEtech@chauvetlighting.de Website: www.chauvetprofessional.eu
Chauvet Mexico	
Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2) Zona Industrial Lerma Lerma, Edo. de México, CP 52000 Voice: +52 (728) 690-2010	Email: servicio@chauvet.com.mx Website: www.chauvetprofessional.mx

Visit the applicable website above to verify our contact information and instructions to request support. Outside the U.S., U. K., Ireland, Mexico, France, Germany, or Benelux, contact the dealer of record.



UL 1573
CSA C22.2 No. 166
E113093



RoHS

