

MAVERICK STORM

1 FLEX

User Manual



Model ID: MAVERICKSTORM1FLEX

CHAUVET
PROFESSIONAL

Edition Notes

The Maverick Storm 1 Flex User Manual includes a description, safety precautions, installation, programming, operation, and maintenance instructions for the Maverick Storm 1 Flex as of the release date of this edition.

Trademarks

Chauvet, Chauvet Professional, the Chauvet logo, Maverick, and Maverick Storm are registered trademarks or trademarks of Chauvet & Sons, LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

Copyright Notice

The works of authorship contained in this manual, including, but not limited to, all designs, text, and images are owned by Chauvet.

© Copyright 2026 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

Manual Use

Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

Document Printing

For best results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If using A4 paper (210 x 297 mm), configure the printer to scale the content accordingly.

Intended Audience

Any person installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident, or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions.

Document Revision

Go to www.chauvetprofessional.com for the latest version.

Revision	Date	Description
8	09/2026	Updated technical specifications and USB update instructions

TABLE OF CONTENTS

1. Before You Begin	1
What Is Included	1
Claims	1
Text Conventions	1
Symbols	1
Safety Notes.....	2
FCC Statement of Compliance	3
RF Exposure Warning for North America and Australia.....	3
Expected LED Lifespan.....	3
2. Introduction	4
Features	4
Product Overview.....	4
Product Dimensions	5
3. Setup	6
AC Power.....	6
AC Plug	6
Fuse Replacement	6
Signal Connections	7
Control Personalities	7
DMX Linking.....	7
Remote Device Management.....	7
Art-Net™ Connection	7
sACN Connection.....	7
Connection Diagram	7
USB Software Update	8
Mounting	9
Orientation.....	9
Rigging	9
Procedure.....	9
Sky Tracker Mode	10
Sky Tracker Orientation	10
Color Wheel	11
Gobo Wheels	12
Gobo Dimensions.....	12
Gobo Replacement	13
Procedure	13
Gobo Replacement Diagrams.....	13
4. Operation	14
Control Panel Description	14
Battery-Powered Display.....	14
Home Screen	14
Control Panel Lock.....	14
Passcode	14
Technician Mode.....	14
Menu Map	15
DMX Configuration.....	20

Control Mode.....	20
Control Personalities	20
Starting Address.....	20
Network Setup.....	20
IP Mode.....	20
Universe.....	20
Manual IP Address.....	20
Subnet Mask	20
Ethernet to DMX	20
Control Channel Assignments and Values.....	21
Configuration Settings.....	25
Pan Reverse	25
Tilt Reverse	25
Screen Reverse	25
Pan Angle.....	25
Tilt Angle	25
Black out on Movement.....	25
Swap Pan and Tilt	25
CRM TM Reset.....	25
Display Backlight Timer.....	25
Loss of Data	26
Fan Mode	26
Dimmer Curve	26
Pulse Width Modulation	26
LED Power	26
Minimum Zoom Focus.....	26
Preset Selection	26
Preset Synchronization	27
SKY Tracker Mode.....	27
Reset Function	27
Factory Reset.....	27
Test Mode	27
Auto Test.....	27
Manual Test	27
System Information	27
Zero Adjust Mode.....	28
Web Server	28
Error Codes.....	29
5. Maintenance.....	32
Product Maintenance	32
Torque Measurements	32
Vacuum Test Measurements	32
Gobo Maintenance.....	33
Transporting on Truss or Racks.....	33
6. Technical Specifications	34
Contact Us	35
Warranty & Returns.....	35

Before You Begin

1. Before You Begin

What Is Included

- Maverick Storm 1 Flex
- 2x 140D Omega brackets with mounting hardware
- Seetronic Powerkon IP65 power cable
- Quick Reference Guide

Claims

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate a claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

Text Conventions

Convention	Meaning
1–512	A range of values
50/60	A set of values of which only one can be chosen
Settings	A menu option not to be modified
<ENTER>	A key to be pressed on the product's control panel

Symbols

Symbol	Meaning
	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.



Any reference to data or power connections in this manual assumes the use of Seetronic IP rated cables.

The term “DMX” used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.



Connection of the control signal: DMX line

- The product has XLR sockets for DMX input and output.
- Notice: This control circuit is isolated and belongs to the Class 2 data port. The control circuit has a cumulative leakage current of less than 3.5 mA.

Safety Notes

Read all the following safety notes before working with this product. These notes contain important information about the installation, usage, and maintenance of this product.



This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained, certified technicians. Do not open the housing or attempt any repairs.



All applicable local codes and regulations apply to proper installation of this product.

- The luminaire is intended for professional use only.
- The luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 32.81 ft (10 m) is not expected.
- If the external flexible cable or cord of this luminaire is damaged, it shall be replaced by a special cord or cord exclusively available from the manufacturer or its service agent.
- The light source contained in this luminaire shall only be replaced by the manufacturer or its service agent or a similar qualified person.
- **CAUTION:**
 - This product's housing may be hot when operating. Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
 - When transferring the product from extreme temperature environments, (e.g., cold truck to warm humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow the product to fully acclimate to the surrounding environment before connecting it to power.
 - Flashing light is known to trigger epileptic seizures. User must comply with local laws regarding notification of strobe use.
- **ALWAYS:**
 - Disconnect from power before cleaning the product or replacing the fuse.
 - When using an IP65-rated product in an outdoor environment, use IP65- (or higher) rated power and data cable.
 - Replace and secure IP-rated protective covers to all power, data, USB, or other ports when not in use.
 - Replace the fuse with the same type and rating.
 - Use a safety cable when mounting this product overhead.
 - Connect this product to a grounded and protected circuit.
- **DO NOT:**
 - Open this product. It contains no user-serviceable parts.
 - Look at the light source when the product is on.
 - Leave any flammable material within 20 cm of this product while operating or connected to power.
 - Connect this product to a dimmer or rheostat.
 - Operate this product if the housing, lenses, or cables appear damaged.
 - Submerge this product (adhere to standards for the published IP rating). Regular outdoor operation is fine.
 - Permanently install outdoors in locations with extreme environmental conditions. This includes, but is not limited to:
 - Exposure to a marine/saline environment (within 3 miles of a saltwater body of water).
 - Locations where normal temperatures exceed the temperature ranges in this manual.
 - Locations that are prone to flooding or being buried in snow.
 - Other areas where the product will be subject to extreme radiation or caustic substances.
- ONLY use the handles or the hanging/mounting brackets to carry this product.
- The maximum ambient temperature is 113 °F (45 °C). Do not operate this product at higher temperatures.
- The minimum startup temperature is -4°F (-20°C). Do not start the product at lower temperatures.
- The minimum ambient temperature is -22°F (-30°C). Do not operate the product at lower temperatures.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.
- In the event of a serious operating problem, stop using immediately.



If a Chauvet product requires service, contact Chauvet Technical Support.

Before You Begin

FCC Statement of Compliance

This device complies with Part 15 Part B of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Warning for North America and Australia

Warning! This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and the user. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Expected LED Lifespan


Over time, use and heat will gradually reduce LED brightness. Clustered LEDs produce more heat than single LEDs, contributing to shorter lifespans if always used at full intensity. The average LED lifespan is 40,000 to 50,000 hours. To extend LED lifespan, maintain proper ventilation around the product, and limit the overall intensity.

2. Introduction

Features


- Fully featured, IP65-rated, high-powered Spot/Beam/Wash combination fixture with a 520W LED source, CMY+CTO color mixing, an animation wheel, 2 gobo wheels, 2 layerable prisms, large zoom range, and lightweight aluminum/magnesium housing
- 16-bit dimming of master dimmer for smooth control of fades
- Variable CMY + CTO color mixing system to create a wide pallet of colors
- CRI and CTB filters on color wheel for added flexibility
- 7 rotating and 10 static gobos for massive visual effect
- An animation wheel for kinetic textured effects
- Tight 2.4° narrow beam angle for focused air effects
- (1) 7-position rotating and (1) 10 static position gobo wheels for massive visual effect
- DMX, CRMX, sACN, and Art-Net for full flexibility of control options
- RDM control over DMX for fixture reporting
- TRUE1-compatible power input
- Integrated sun shield for protecting the optical path from sunlight when the fixture is off
- Three setup menu presets and preset sync for cross loading to multiple like fixtures for easy shop setup
- USB-C slot for software uploads
- Battery backup display with auto-rotate depending on fixture orientation
- Failsafe Ethernet connectivity allows for data to pass even if fixture power is lost
- Built-in Sky Tracker mode allows for up to 4 fixtures to work together to create sky tracker effects

Product Overview

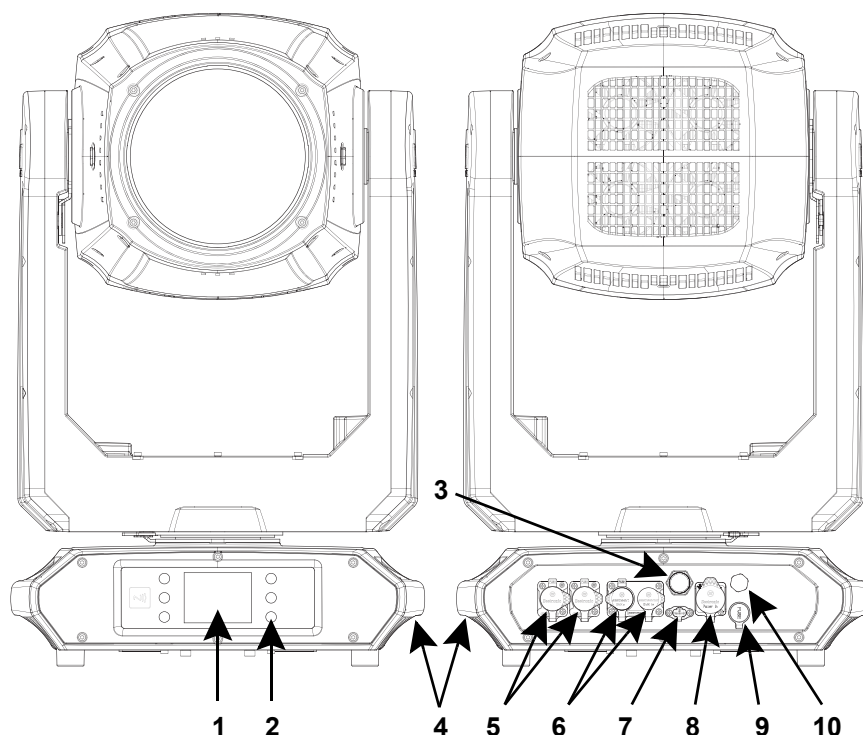

#	Name
1	LCD display
2	Menu buttons
3	Antenna
4	Carry handles
5	Ethernet ports
6	DMX in/out
7	USB-C port
8	Power in
9	Fuse holder
10	Condensation valve

Product Dimensions

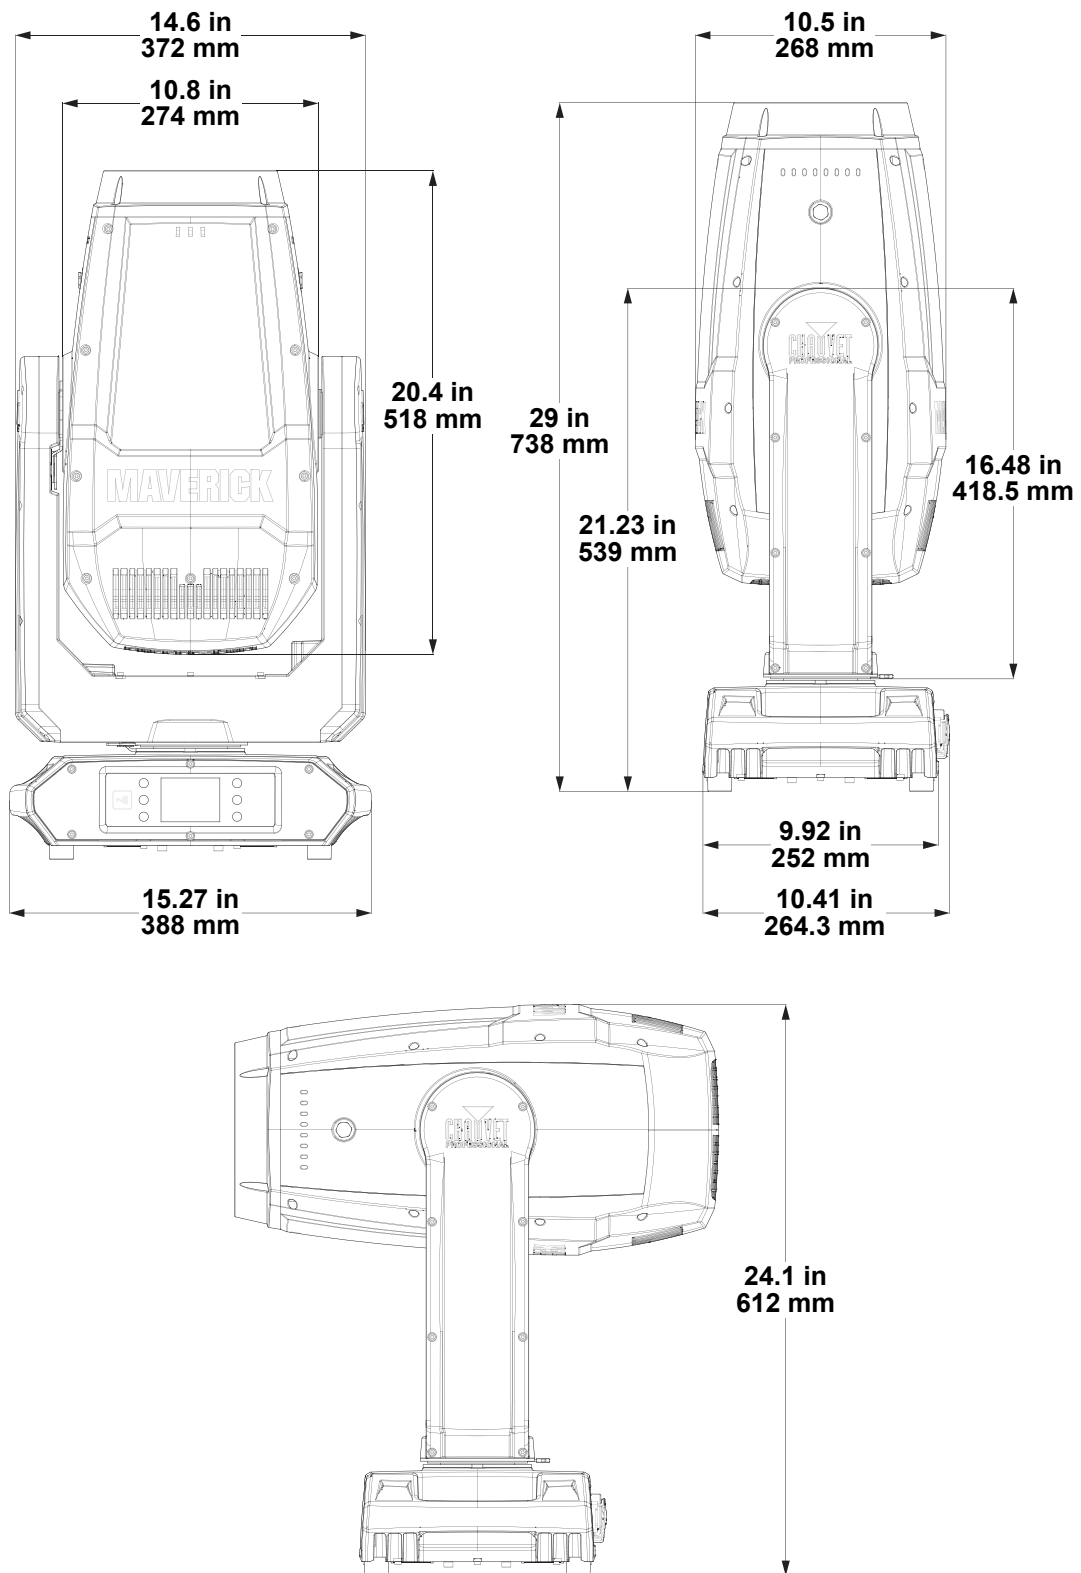

3. Setup

AC Power

The Maverick Storm 1 Flex has an auto-ranging power supply and it can work with an input voltage range of 100 to 240 VAC, 50/60 Hz.

To determine the product's power requirements (circuit breaker, power outlet, and wiring), use the current value listed on the label affixed to the product's back panel, or refer to the product's specifications chart.

The listed current rating indicates the product's average current draw under normal conditions.



- **Always connect the product to a protected circuit (a circuit breaker or fuse). Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.**
- **To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.**



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

AC Plug

The Maverick Storm 1 Flex comes with a power input cable terminated with a Seetronic Powerkon A connector on one end and an Edison plug on the other end (U.S. market). If the cable has no plug or it is necessary to change the plug, use the table below to wire a plug.

Connection	Wire (U.S.)	Wire (Europe)	Screw Color
AC Live	Black	Brown	Yellow or Brass
AC Neutral	White	Blue	Silver
AC Ground	Green/Yellow	Green/Yellow	Green

Fuse Replacement

1. Disconnect this product from the power outlet.
2. Using a flat-head screwdriver, unscrew the fuse holder cap from the housing.
3. Remove the blown fuse and replace with another fuse of the same type and rating (T20 A, 250 V).
4. Screw the fuse holder cap back in place and reconnect power.

Signal Connections

The Maverick Storm 1 Flex can receive a DMX, Art-Net™, or sACN, signal. The Maverick Storm 1 Flex has two Amphenol XLRnet through ports, and 5-pin DMX in and out ports. If using other compatible products with this product, it is possible to control each individually with a single controller.

Control Personalities

The Maverick Storm 1 Flex uses a 5-pin DMX data connection, Lumenradio CRMX™, Art-Net™, or sACN for its two control personalities: **DMX Mode 26 CH** and **DMX Mode 33 CH**.

- Refer to the [Operation](#) chapter to learn how to configure the Maverick Storm 1 Flex to work in these personalities.
- The [Control Channel Assignments and Values](#) section provides detailed information regarding the control personalities.



For more information about DMX standards or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: www.chauvetprofessional.com.

DMX Linking

The Maverick Storm 1 Flex can link to a DMX controller using a 5-pin DMX connection or a wireless Lumenradio CRMX™ connection. For more information about DMX, read the DMX primer at: https://www.chauvetprofessional.com/wp-content/uploads/2016/06/DMX_Primer.pdf.

Remote Device Management

Remote Device Management, or RDM, is a standard for allowing DMX-enabled devices to communicate bi-directionally along existing DMX cabling. Check the DMX controller's User Manual or with the manufacturer as not all DMX controllers have this capability. The Maverick Storm 1 Flex supports RDM protocol that allows feedback to make changes to menu map options.

Art-Net™ Connection


Art-Net™ is an Ethernet protocol that uses TCP/IP that transfers a large amount of DMX512 data using an Amphenol XLRnet RJ45 connection over a large network. An Art-Net™ protocol document is available from www.chauvetprofessional.com.

Art-Net™ designed by and copyright Artistic Licence Holdings Ltd.

sACN Connection

Streaming ACN (Architecture for Control Networks), also known as ANSI E1.31, is an Ethernet protocol that uses the layering and formatting of ACN to transport DMX512 data over IP or any other ACN-compatible network.

Connection Diagram

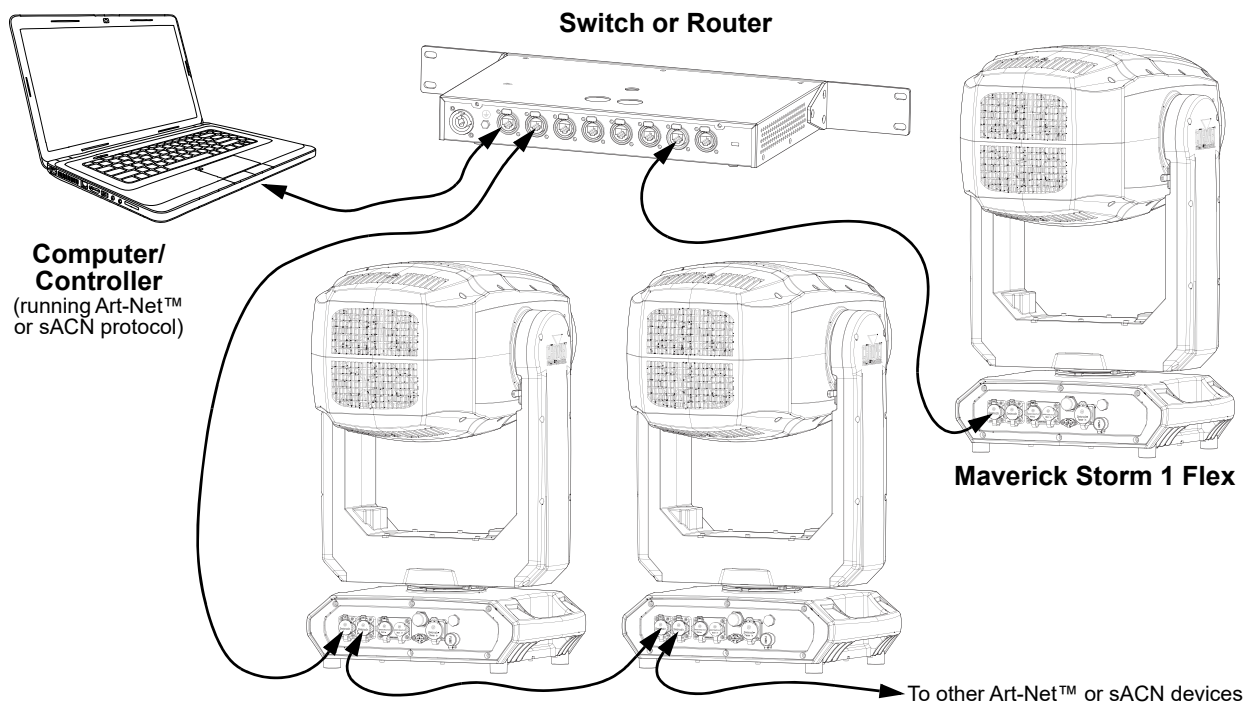

USB Software Update

The Maverick Storm 1 Flex allows for software updates with a USB device using the built-in USB port. To update the software using a USB flash drive, do the following:

1. Power on the product, and plug the flash drive into the USB port.
2. Go to the **Settings** main level.
3. Select the **USB Update** option.
4. Select from **Update Me** (to update this product) or **Update Other** (to update a product with an item code that starts with 08 which is daisy chained via DMX).



It is possible to update multiple units with the USB if they are daisy chained via DMX.

5. The next screen will show the software versions available for this fixture on the USB drive. For multiple versions of the software for the same fixture, use **<UP>** or **<DOWN>** to select the desired version.
6. Press **<ENTER>**.
7. The selected software version will show on the display and ask for confirmation. Select **YES**.
8. The update will start. **DO NOT** turn off the power or disconnect the USB while the USB LED is still blinking during the process. The screen display will read: **"USB Update Wait"**. The update can take several minutes to complete.
 - When the USB firmware is done uploading, in some fixtures, the display will change to: **"DO NOT UNPLUG, UPDATING"**.
9. When the update is completed, the fixture will automatically reboot.
10. Go to Fixture Information on the product's menu map and confirm the firmware revision.
11. When the boot-up process is finished, restart the product.



- Place the **.chl** file in the root directory of the USB drive.
- The product's USB port supports up to 32GB capacity and only works with FAT32 file format.
- Update times vary depending on the product and size of the software file. Most products complete within a few minutes; some can take up to 20 minutes. For example, the COLORado PXL Curve 12 can take up to 15.5 minutes.
- Allow the full update time to elapse before assuming the update has failed.
- Turning off the power or removing the USB while the USB LED is still blinking during the update will cause partial or total firmware failure in the targeted fixture(s). If this occurs, the user will need the UPLOAD 08 device to fix this. Please contact Chauvet regarding this device.
- During the update, the head of a moving fixture may drop or swing freely. Ensure the fixture is clear of personnel and obstructions and be aware of the head position before starting an update.



Mounting

Before mounting the product, read and follow the safety recommendations indicated in the [Safety Notes](#). For the Chauvet Professional line of mounting clamps, go to <http://trusst.com/products/>.

Orientation

Always mount this product in a safe position, making sure there is adequate room for ventilation, configuration, and maintenance.

Rigging


Chauvet recommends using the following general guidelines when mounting this product.

- Before deciding on a location for the product, make sure there is easy access to the product for maintenance and programming purposes.
- Make sure that the structure and attachment points can support the weight before hanging the product (see the [Technical Specifications](#) for weight information).
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity.

Procedure

The Maverick Storm 1 Flex comes with 2 Omega brackets to which the user can directly attach mounting clamps (sold separately). Make sure the clamps are capable of supporting the weight of this product. Use at least two mounting points per product. For the Chauvet Professional line of mounting clamps, go to <http://www.trusst.com/products>.

Mounting Diagram

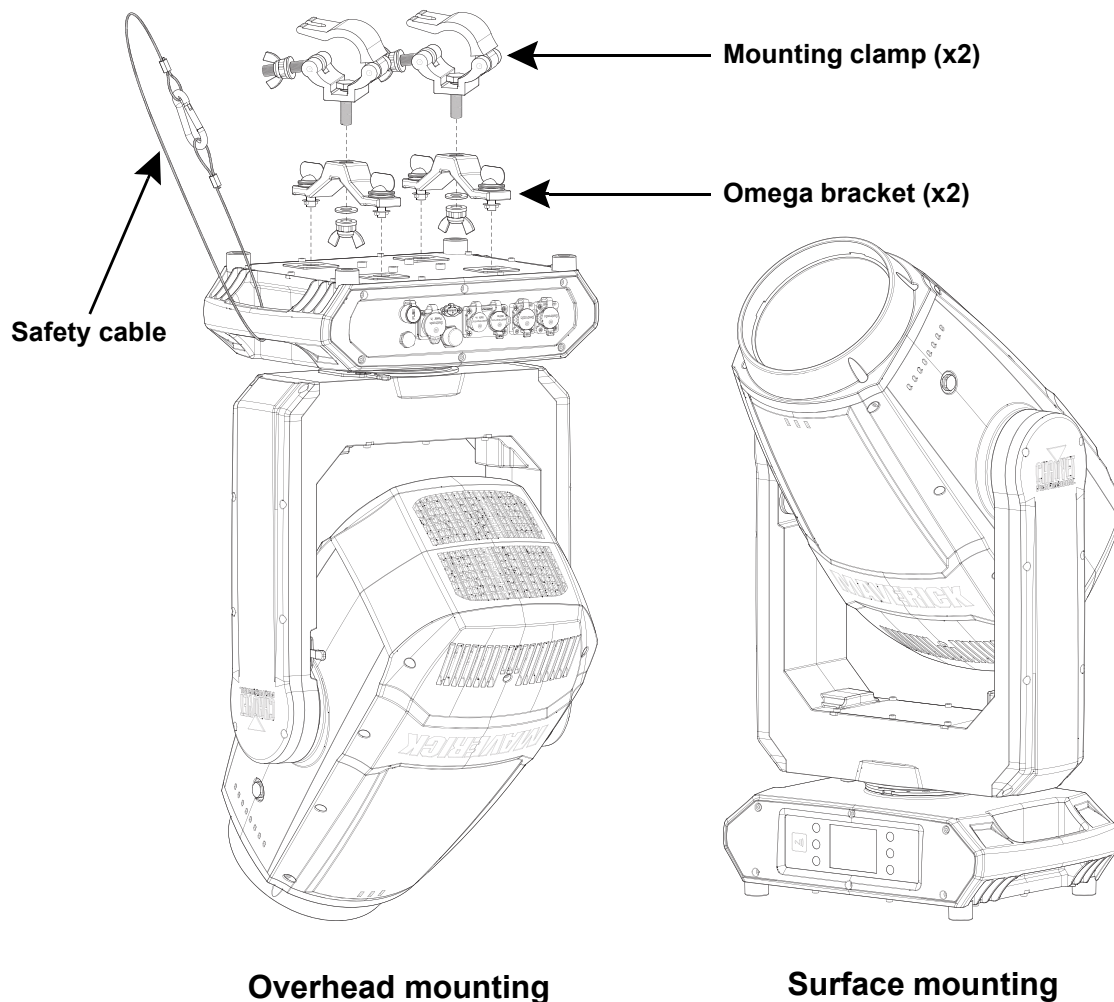

Sky Tracker Mode

Allows up to four Maverick Storm 1 Flex fixtures to work together to create standalone air effects:

1. Connect all fixtures together with DMX cables
2. Make sure all fixtures are in DMX control protocol.
3. Go to **Personality Menu**, select **Sky Tracker** on all fixtures that will be used in this mode.
4. Go to **Settings** menu, arrow down to select **Sky Tracker Mode**, and press **<ENTER>**.
5. Arrow down to the **FIXTURE ID** setting. On each fixture, choose the **FIXTURE ID** (1 - 4).




Note that the fixture 1 is the master fixture and 2-4 will follow the direction of fixture 1

6. Once each fixture is set up, go back to fixture 1 to set up the show. Please refer to **Menu Map** to set each parameter as needed. Fixture 1 will hold these settings even if the power is turned off or the fixture modes are changed.




- **Fixture movement size and speed are at 0 default. These setting values MUST be increased to see movement in the fixtures.**
- **Fixture dimmer is at 0 default. This setting value must be increased to see output in the fixtures.**

Sky Tracker Orientation

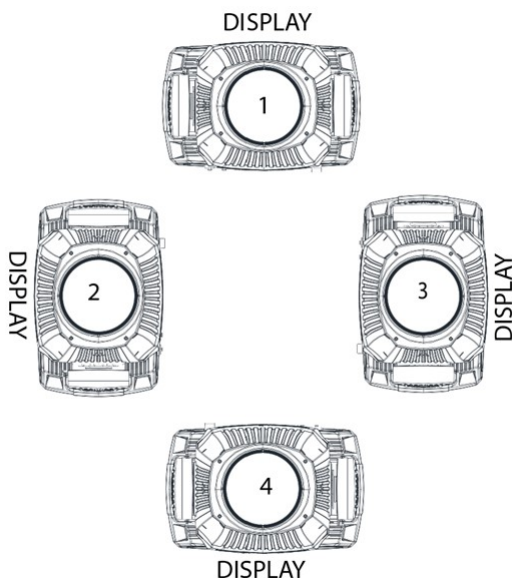

Display always faces out


Color Wheel

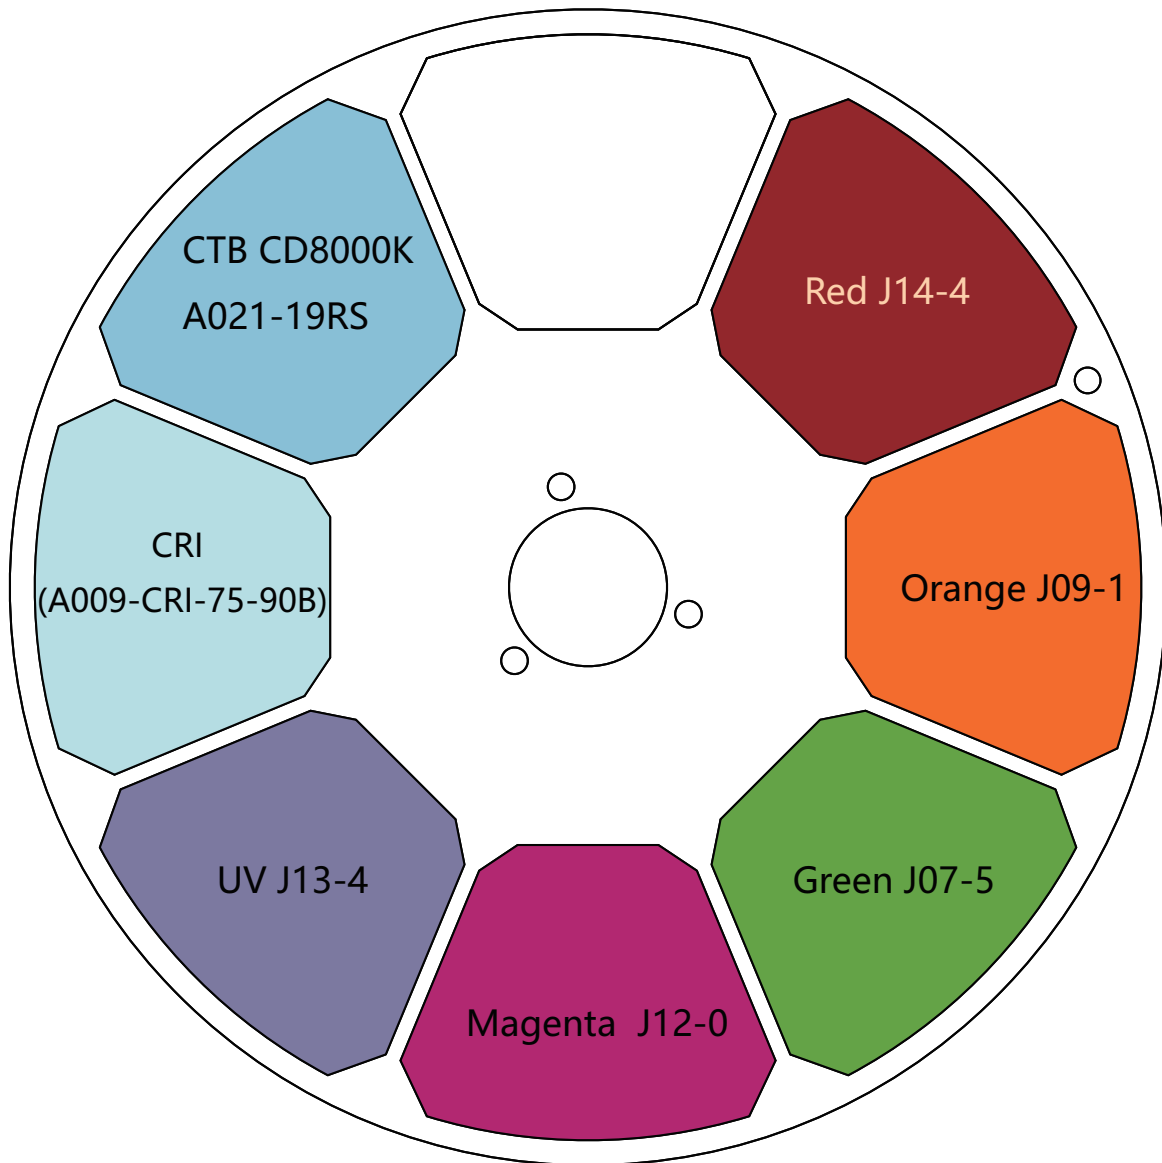

Gobo Wheels




Gobo 1
(Rotating)

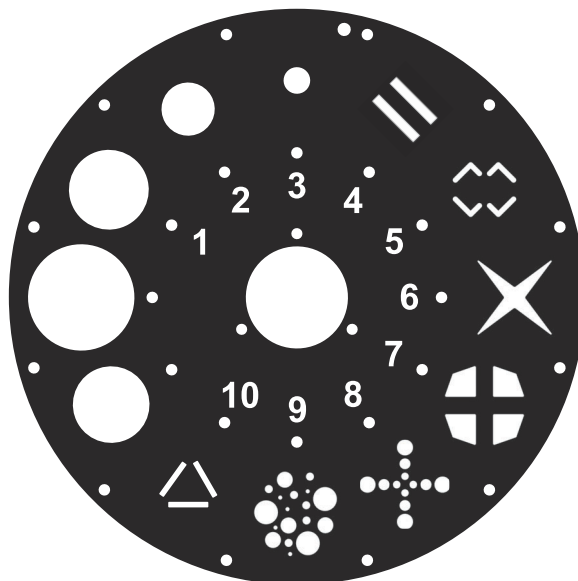

Gobo 2
(Static)

Gobo Dimensions

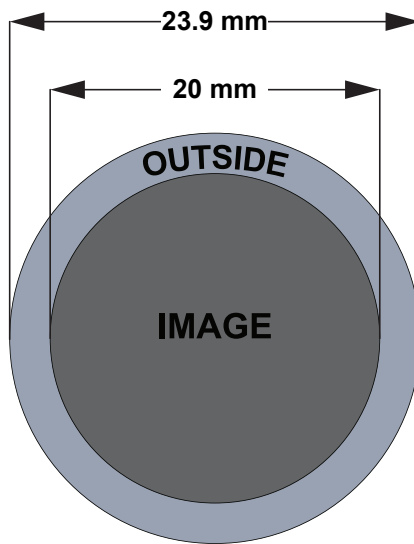

Gobo 1
(Rotating)

Gobo Replacement

The gobos in the Maverick Storm 1 Flex are removable from their gobo holders.




- **Make sure to disconnect the product's power cable before replacing a gobo.**
- **Always replace a gobo with a gobo of the same dimensions.**
- **When inserting a glass gobo, always make sure that the shiny side of the gobo (glass base) faces the lamp. This provides a layer of protection against the high temperature from the lamp.**
- **All custom gobos in the Maverick Storm 1 Flex gobo wheel must be aluminum or glass.**

Procedure

Follow the recommended procedure below to remove or replace the gobos:

1. Turn the product off and disconnect it from the power outlet.
2. Open the head cover by loosening the 7 hex screws on the sides of the top cover.
3. Separate the gobo holder away from the gobo wheel by pushing it toward the front of the moving head (see direction 1 in the diagram).
4. Extract the gobo holder by pulling it outward (see direction 2 in the diagram).
5. On a flat surface, remove the expansion ring that holds the gobo in place and remove the gobo from the gobo holder.
6. Insert a new gobo and hold it in place with the expansion ring.
7. Slide the tip of the gobo holder under the pressure plate near the center of the gobo wheel.
8. Push the gobo holder inwards. **DO NOT** force the gobo holder into the gobo wheel slot. If correctly installed, the gobo plate should easily slide itself into the gobo wheel slot.

Gobo Replacement Diagrams

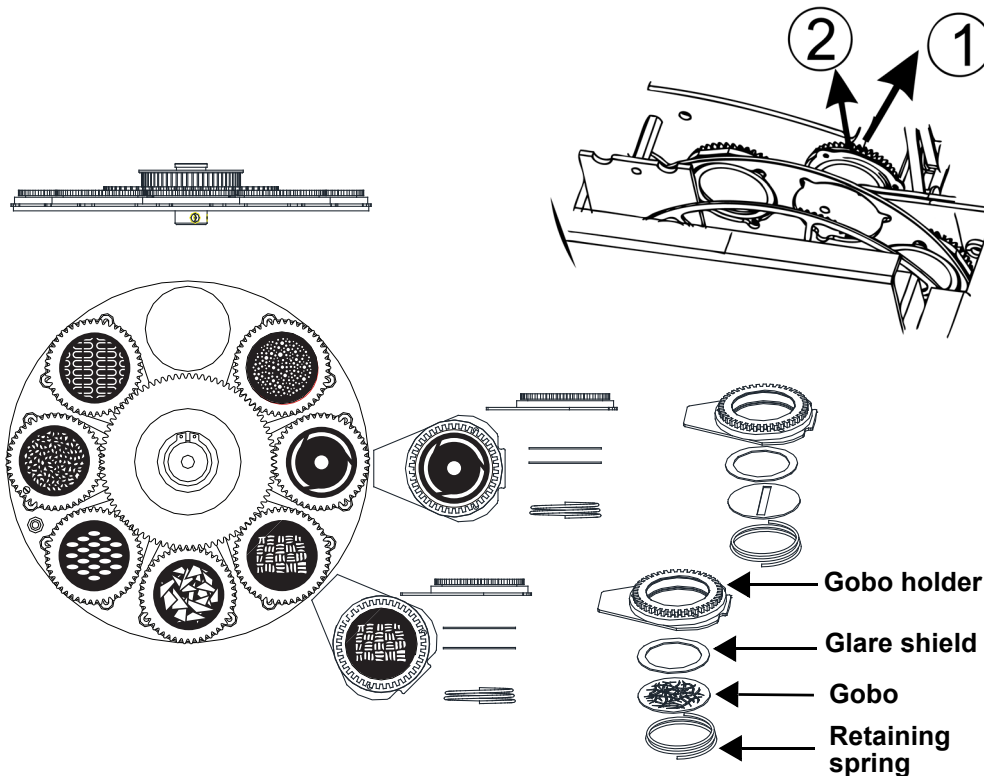

- Gobo illustrations are for reference purposes only. Gobo designs may differ from those installed in the product.
- See [Gobo Maintenance](#) for instructions on how to clean the gobos and gobo holder.


4. Operation

Control Panel Description

Button	Name	Function
	<Up>	Navigates upwards through the menu or increases the numeric value of a function
	<Menu>	Exits the current menu or function
	<Down>	Navigates downwards through the menu or decreases the numeric value of a function
	<Left>	Navigates leftwards through the menu
	<Enter>	Enables the currently displayed menu or sets a selected value into a function
	<Right>	Navigates rightwards through the menu

Battery-Powered Display

The Maverick Storm 1 Flex has a battery-powered display that enables access to the menu when the product is powered off. Press and hold **<MENU>** until the display activates (approximately 15 seconds).

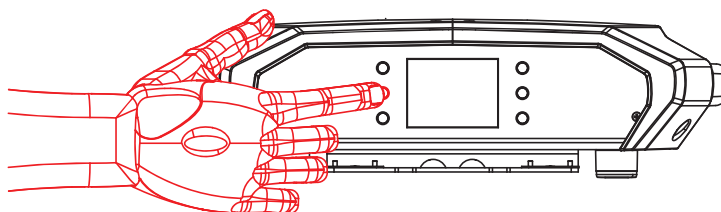

Home Screen

The Maverick Storm 1 Flex has a home screen that shows the current control protocols, personalities, starting addresses, IP addresses, and universes. To see the home screen, press **<MENU>** repeatedly until it shows on the display. From the home screen, press **<ENTER>** or one of the direction buttons to reach the main menu.

Control Panel Lock

The setting locks or unlocks the control panel.

1. Go to the **Settings** main level.
2. Select the **Lock Screen** option.
3. Select **NO** (control panel stays unlocked) or **YES** (locks control panel).




When the control panel lock is activated, the product will prompt for the passcode in order to access the menu. Enter the passcode as described below.

Passcode

After being prompted to enter the passcode, enter the numbers **0920** (use **<DOWN>** to cycle digits and **<UP>** to increase the number value) and press **<ENTER>**.

Technician Mode

The technician mode disables the pan/tilt motors, allowing the output of the product to be aimed by hand. To enable the technician mode of the Maverick Storm 1 Flex, hold **<UP>** and **<LEFT>** while the product is powering on. When the product is turned off and back on, the pan and tilt will return to normal function.

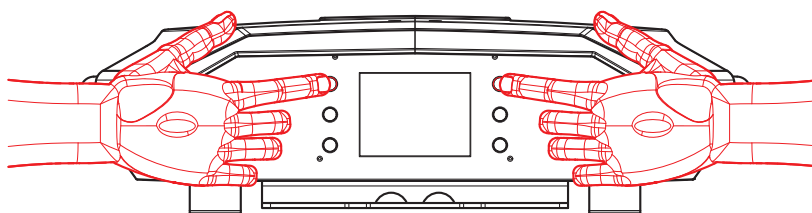

Menu Map

Refer to the Maverick Storm 1 Flex product page on www.chauvetprofessional.com for the latest menu map and software.

Main Level	Programming Levels		Description	
Address	001–512		Sets the starting address	
Network Setup	IP Mode	Manual	Manually set IP address	
		DHCP	Network sets IP address	
		Static	Product sets IP address	
	Universe	000–255 (Art-Net™) 001–256 (sACN)	Sets the universe	
	Ip	_____._____._____._____._____._____._____._____. (000–255)	Sets the IP address in Manual mode	
	SubMask	_____._____._____._____._____._____._____._____. (000–255)	Sets the Subnet Mask in Manual mode	
	Ethernet to DMX	NO	Product outputs DMX signal when in Art-Net or sACN protocol	
		YES		
Personality	Dmx Mode 26 CH		NO YES	Selects the 26-channel mode
	Dmx Mode 33 CH			Selects the 33-channel mode
	SKY Tracker Mode			Enable/disable SKY Tracker mode
Settings	Control Mode	DMX		Selects the DMX control protocol
		CRMX		Selects Lumenradio CRMX™
		ArtNet		Selects the Art-Net* control protocol
		sACN		Selects the sACN control protocol
	Pan Reverse	NO		Normal pan
		YES		Reversed pan
	Tilt Reverse	NO		Normal tilt
		YES		Reversed tilt
	Screen Reverse	NO		Normal screen display
		YES		Inverted screen display
		AUTO		Automatic display orientation
	Pan Angle	540		540° pan range
		360		360° pan range
		180		180° pan range
	Tilt Angle	270		270° tilt range
		180		180° tilt range
		90		90° tilt range
	BL. O. P/T Move	NO		Enable/disable blackout while panning/tilting
		YES		
	BL. O. Color Move	NO		Enable/disable blackout while color wheel is moving
		YES		
	BL. O. Gobo Move	NO		Enable/disable blackout while gobo wheels are moving
		YES		
	Lock Screen	NO		Lock the buttons Passcode: 0920
		YES		
	Swap XY	NO		Do not swap pan and tilt
		YES		Pan controls tilt, tilt controls pan
	CRMX Reset	NO		Do not reset Lumenradio CRMX™
		YES		Reset Lumenradio CRMX™

Main Level	Programming Levels		Description
Settings (cont.)	Backlight Timer	30S	Display turns off after 30 seconds
		1M	Display turns off after 1 minute
		5M	Display turns off after 5 minutes
		ON	Display stays on
	Loss of Data	Hold	Holds last signal received
		Close	Blacks out fixture
	Fans	Auto	Fan speed according to product temperature
		Full	Fan speed set on high
		ECO	Quiet mode
		TV25	Maintains LED output up to an ambient temperature of 77 °F (25 °C) (TV25) or 95 °F (35 °C) (TV35).
		TV35	When using these fan modes, please set the PWM Option to 6000Hz or 15000Hz to prevent any possible harmonization noise.
	Dimmer Curve	Linear	Set the dimmer curve
		Square	
		I Squa	
		SCurve	
		LampCur	
	PWM Option	600Hz	Sets the Pulse Width Modulation frequency
		1200Hz	
		2000Hz	
		4000Hz	
		6000Hz	
		15000Hz	
	LED POWER	64–255	Sets the maximum LED output
	Min Zoom Focus	NO	Enables/disables minimum zoom focus
		YES	
	Preset Select	PRESET A	Recorded preset menu options
		PRESET B	
		PRESET C	
	Preset Sync	NO	Allows recorded preset menu options to be transferred to other Maverick Storm 1 Flex fixtures in the DMX daisy chain
		YES	
	USB Update	Update Me	Update firmware via USB C
		Update Other	

Main Level	Programming Levels			Description
Settings (cont.)	SKY Tracker Mode	Dimmer	0–255	Manually control settings through the control panel while in SKY Tracker Mode
		Strobe		
		Cyan		
		Magenta		
		Yellow		
		Color Wheel		
		Gobo		
		Gobo2		
		Prism1		
		Prism2		
		Focus		
		Zoom		
		Shape		
		Pan Offset		
		Tilt Offset		
		Size		
		Speed		
		Fixture Offset		
		Fixture ID		
	Reset Function	Pan/Tilt	NO YES	Reset individual functions or all functions from start-up
		Shutter/Prism		
		Color/CMY		
		Gobo/Gobo Rotate		
		Frost/Animation		
	Factory Settings	NO		Reset to factory default settings
		YES		

Main Level	Programming Levels			Description
Test	Manual Test	Auto Test		Auto test all functions
		Pan	0–255	Manually control and test all settings through the control panel
		Pan Fine		
		Tilt		
		Tilt Fine		
		P/T Speed		
		Dimmer		
		Dimmer Fine		
		Shutter		
		Virtual Shaking		
		Cyan		
		Magenta		
		Yellow		
		CTO		
		Color		
		Gobo		
		Gobo Rotate		
		Gobo Index		
		Gobo2		
		Animation		
		Animation Rotate		
		Focus		
		Focus Fine		
		Focus Auto		
		Zoom		
		Zoom Fine		
		Prism1		
		Prism1 Rotate		
		Prism2		
		Prism2 Rotate		
		Frost		
		CMY Macro		
		CMY Macro Speed		
		Control		
Information	Fixture Information	Ver	V1.250331	Shows firmware version
		Running Mode	----	Shows current running mode
		DMX Address	---	Shows current starting address
		Temperature	---	Shows current product temperature
		Fixture Hours	-----	Shows hours product has been on
		LED Hours	-----	Shows hours LED has been on
		Ip	-----	Shows current IP address
		SubMask	-----	Shows current Subnet Mask
		MAC	-----	Shows MAC address
		UID	-----	Shows product UID

Main Level	Programming Levels		Description
Information (cont.)	Fan Information	MH410 ZFAN1-7 Sp _ _ _	Shows speed of each fan in rpm
		MH411 MFAN1-2 Sp _ _ _	
		MH250 AFAN1 Sp _ _ _	
		MH421 DFAN1-2 Sp _ _ _	
	Error Information	-----	Shows any errors, or No Error!
	Channel Information	Frequency	000-255 Shows all current values from input signals
		Pan	
		Pan Fine	
		Tilt	
		Tilt Fine	
		P/T Speed	
		Dimmer	
		Dimmer Fine	
		Shutter	
		Virtual Shaking	
		Cyan	
		Magenta	
		Yellow	
		CTO	
		Color	
		Gobo	
		Gobo Rotate	
		Gobo Index	
		Gobo2	
		Animation	
		Animation Rotate	
		Focus	
		Focus Fine	
		Focus Auto	
		Zoom	
		Zoom Fine	
		Prism1	
		Prism1 Rotate	
		Prism2	
		Prism2 Rotate	
		Frost	
		CMY Macro	
		CMY Macro Speed Control	

DMX Configuration

Use control configurations to operate the product with a DMX, Art-Net™, or sACN controller.

Control Mode

The Maverick Storm 1 Flex works with wired DMX, Lumenradio CRMX™, Art-Net™, and sACN control signals. To select which protocol to use:

1. Go to the **Settings** main level.
2. Select the **Control Mode** option.
3. Select the desired protocol, from **DMX**, **CRMX** (for Lumenradio CRMX™), **ArtNet**, or **sACN**.

Control Personalities

To set the control personality:

1. Go to the **Personality** main level.
2. Select the desired personality, from **DMX Mode 26 CH**, **DMX Mode 33 CH**, or **SKY Tracker Mode**.



- See the [Starting Address](#) section for the highest selectable starting address for each personality.
- Make sure that the starting addresses on the various products do not overlap due to the new personality setting.

Starting Address

Each product will respond to a unique starting address from the controller. All products with the same starting address will respond in unison. To set the starting address:

1. Go to the **Address** main level.
2. Select the starting address (**001–512**).
 - The highest configurable starting address for **DMX Mode 26 CH** is **487**.
 - The highest configurable starting address for **DMX Mode 33 CH** is **480**.

Network Setup

The Network Setup settings control the IP address, subnet mask, and universe of the product.

IP Mode

To choose how the IP address is set:

1. Go to the **Network Setup** main level.
2. Select the **IP Mode** option.
3. Select the desired IP mode, from **Manual** (to set a custom IP address), **DHCP** (the IP address is assigned by the connected network), or **Static** (the product uses a default, preset IP address).

Universe

To assign an Art-Net™ or sACN universe to the Maverick Storm 1 Flex:

1. Go to the **Network Setup** main level.
2. Select the **Universe** option.
3. Set the universe, from **000–255** (for Art-Net™) or from **001–256** (for sACN).

Manual IP Address

To set the IP address when the **IP Mode** is set to **Manual**:

1. Go to the **Network Setup** main level.
2. Select the **Ip** option.
3. Set the 4 values of the IP address from **000–255**.

Subnet Mask

To set the subnet mask:

1. Go to the **Network Setup** main level.
2. Select the **SubMask** option.
3. Set the 4 values of the subnet mask from **000–255**.

Ethernet to DMX

To allow for DMX output while the product is operated with Art-Net or sACN protocol:

1. Go to the **Network Setup** main level.
2. Select the **Ethernet to DMX** option.
3. Select **NO** (to disable) or **YES** (to enable DMX output).

Control Channel Assignments and Values

26 CH	33 CH	Function	Value	Percent/Setting
1	1	Pan	000 ⇔ 255	0–100%
2	2	Fine pan	000 ⇔ 255	0–100%
3	3	Tilt	000 ⇔ 255	0–100%
4	4	Fine tilt	000 ⇔ 255	0–100%
5	5	Pan/tilt speed	000 ⇔ 255	0–100%
6	6	Dimmer	000 ⇔ 255	0–100%
–	7	Fine dimmer	000 ⇔ 255	0–100%
7	8	Strobe	000 ⇔ 003 Off 004 ⇔ 007 On 008 ⇔ 076 Synchronized strobe, slow to fast 077 ⇔ 145 Pulse strobe, slow to fast 146 ⇔ 215 Random strobe, slow to fast 216 ⇔ 255 On	
8	9	Virtual strobe	000 ⇔ 001 No function 002 ⇔ 128 Shaking, slow to fast 129 ⇔ 255 Fade, slow to fast	
9	10	Cyan	000 ⇔ 255	0–100%
10	11	Magenta	000 ⇔ 255	0–100%
11	12	Yellow	000 ⇔ 255	0–100%
12	13	CTO	000 ⇔ 255	0–100%
13	14	Color wheel (see Color Wheel)	000 ⇔ 006 White 007 ⇔ 013 Red 014 ⇔ 020 Orange 021 ⇔ 027 Green 028 ⇔ 034 Magenta 035 ⇔ 041 UV 042 ⇔ 048 CRI 049 ⇔ 055 CTB 056 ⇔ 060 White 061 ⇔ 187 Split color 188 ⇔ 219 Color scroll, fast to slow 220 ⇔ 223 Stop 224 ⇔ 255 Reverse color scroll, clockwise, slow to fast	

26 CH	33 CH	Function	Value	Percent/Setting
14	15	Rotating gobo wheel (See Sky Tracker Mode)	000 ⇔ 007	Open
			008 ⇔ 015	Gobo 1
			016 ⇔ 023	Gobo 2
			024 ⇔ 031	Gobo 3
			032 ⇔ 039	Gobo 4
			040 ⇔ 047	Gobo 5
			048 ⇔ 055	Gobo 6
			056 ⇔ 063	Gobo 7
			064 ⇔ 071	Gobo 7 shaking, slow to fast
			072 ⇔ 079	Gobo 6 shaking, slow to fast
			080 ⇔ 087	Gobo 5 shaking, slow to fast
			088 ⇔ 095	Gobo 4 shaking, slow to fast
			096 ⇔ 103	Gobo 3 shaking, slow to fast
			104 ⇔ 111	Gobo 2 shaking, slow to fast
			112 ⇔ 119	Gobo 1 shaking, slow to fast
			120 ⇔ 127	Open
			128 ⇔ 191	Gobo scroll, slow to fast
			192 ⇔ 255	Reverse gobo scroll, slow to fast
15	16	Gobo rotation	000 ⇔ 063	Gobo index
			064 ⇔ 145	Gobo rotation, fast to slow
			146 ⇔ 149	Stop
			150 ⇔ 231	Reverse gobo rotation, slow to fast
			232 ⇔ 255	Gobo bounce, short to long
–	17	Fine gobo rotation	000 ⇔ 255	0–100%
16	18	Static gobo wheel (See Sky Tracker Mode)	000 ⇔ 004	Open
			005 ⇔ 009	Gobo 1
			010 ⇔ 014	Gobo 2
			015 ⇔ 019	Gobo 3
			020 ⇔ 024	Gobo 4
			025 ⇔ 029	Gobo 5
			030 ⇔ 034	Gobo 6
			035 ⇔ 039	Gobo 7
			040 ⇔ 044	Gobo 8
			045 ⇔ 049	Gobo 9
			050 ⇔ 063	Gobo 10
			064 ⇔ 068	Gobo 10 shaking, slow to fast
			069 ⇔ 073	Gobo 9 shaking, slow to fast
			074 ⇔ 078	Gobo 8 shaking, slow to fast
			079 ⇔ 083	Gobo 7 shaking, slow to fast
			084 ⇔ 088	Gobo 6 shaking, slow to fast
			089 ⇔ 093	Gobo 5 shaking, slow to fast
			094 ⇔ 098	Gobo 4 shaking, slow to fast
			099 ⇔ 103	Gobo 3 shaking, slow to fast
			104 ⇔ 108	Gobo 2 shaking, slow to fast
			109 ⇔ 113	Gobo 1 shaking, slow to fast
			114 ⇔ 127	Open
			128 ⇔ 191	Gobo scroll, slow to fast
			192 ⇔ 255	Reverse gobo scroll, slow to fast
17	19	Animation	000 ⇔ 255	Animation effect

26 CH	33 CH	Function	Value	Percent/Setting
18	20	Animation rotation	000 ⇔ 124 125 ⇔ 130 131 ⇔ 255	Animation rotation, fast to slow Stop Reverse animation rotation, slow to fast
19	21	Focus	000 ⇔ 255	0–100%
–	22	Fine focus	000 ⇔ 255	0–100%
–	23	Auto focus	000 ⇔ 010 011 ⇔ 030 031 ⇔ 050 051 ⇔ 070 071 ⇔ 090 091 ⇔ 110 111 ⇔ 130 131 ⇔ 150 151 ⇔ 170 171 ⇔ 190 191 ⇔ 210 211 ⇔ 255	No function 0–5 meters 6 meters 7 meters 8 meters 9 meters 10 meters 12.5 meters 15 meters 17.5 meters 20–60 meters auto detect distance
20	24	Zoom	000 ⇔ 255	0–100%
–	25	Fine zoom	000 ⇔ 255	0–100%
21	26	Prism 1	000 ⇔ 004 005 ⇔ 255	No function Prism effect
22	27	Prism 1 rotation	000 ⇔ 127 128 ⇔ 189 190 ⇔ 193 194 ⇔ 255	Prism index Prism rotation, fast to slow Stop Reverse prism rotation, slow to fast
23	28	Prism 2	000 ⇔ 004 005 ⇔ 255	No function Prism effect
24	29	Prism 2 rotation	000 ⇔ 127 128 ⇔ 189 190 ⇔ 193 194 ⇔ 255	Prism index Prism rotation, fast to slow Stop Reverse prism rotation, slow to fast
25	30	Frost	000 ⇔ 255	Frost effect
–	31	CMY macro	000 ⇔ 009 010 ⇔ 255	No function CMY macro
–	32	CMY macro speed	000 ⇔ 255	CMY macro speed, fast to slow

26 CH	33 CH	Function	Value	Percent/Setting
26	33	Control (3 second hold)	000 ⇔ 007	No function
			008 ⇔ 015	Blackout on pan/tilt
			016 ⇔ 023	Blackout on color
			024 ⇔ 031	Blackout on gobo
			032 ⇔ 039	Blackout on pan/tilt/color
			040 ⇔ 047	Blackout on pan/tilt/gobo
			048 ⇔ 055	Blackout on pan/tilt/color/gobo
			056 ⇔ 056	No function
			057 ⇔ 057	600 Hz PWM frequency
			058 ⇔ 058	1200 Hz PWM frequency
			059 ⇔ 059	2000 Hz PWM frequency
			060 ⇔ 060	4000 H PWM frequency
			061 ⇔ 061	6000 Hz PWM frequency
			062 ⇔ 062	15000 Hz PWM frequency
			063 ⇔ 063	No function
			064 ⇔ 064	Linear dimmer curve
			065 ⇔ 065	Square dimmer curve
			066 ⇔ 066	I-Square dimmer curve
			067 ⇔ 067	S-Curve dimmer curve
			068 ⇔ 068	Lamp curve dimmer curve
			069 ⇔ 075	No function
			076 ⇔ 079	Sun shield on
			080 ⇔ 084	Sun shield off
			085 ⇔ 095	No function
			096 ⇔ 103	Reset pan
			104 ⇔ 111	Reset tilt
			112 ⇔ 119	Reset color
			120 ⇔ 127	Reset gobo and gobo rotation
			128 ⇔ 131	Auto CTB for gobo on
			132 ⇔ 135	Auto CTB for gobo off
			136 ⇔ 143	Reset prism
			144 ⇔ 151	No function
			152 ⇔ 159	Reset all
			160 ⇔ 167	No function
			168 ⇔ 175	Reset frost
			176 ⇔ 183	Reset zoom
			184 ⇔ 191	Reset CMY+CTO
			192 ⇔ 199	Fan mode ECO
			200 ⇔ 207	Fan mode Full
			208 ⇔ 215	Fan mode Auto
			216 ⇔ 220	Fan mode TV25
			221 ⇔ 225	Fan mode TV35
			226 ⇔ 230	No function
			231 ⇔ 235	Pan/tilt swap on
			236 ⇔ 240	Pan/tilt swap off
			241 ⇔ 245	Minimum Zoom Focus off
			246 ⇔ 250	Minimum Zoom Focus on
			251 ⇔ 255	No function

Operation

Configuration Settings

Pan Reverse

To set the orientation of the pan:

1. Go to the **Settings** main level.
2. Select the **Pan Reverse** option.
3. Select from **NO** (normal pan motion), or **YES** (reversed pan motion).

Tilt Reverse

To set the orientation of the tilt:

1. Go to the **Settings** main level.
2. Select the **Tilt Reverse** option.
3. Select from **NO** (normal tilt motion), or **YES** (reversed tilt motion).

Screen Reverse

To set the orientation of the display:

1. Go to the **Settings** main level.
2. Select the **Screen Reverse** option.
3. Select from **NO** (right-side up), **YES** (upside-down), or **AUTO** (automatic orientation).

Pan Angle

To set the maximum angle of the pan:

1. Go to the **Settings** main level.
2. Select the **Pan Angle** option.
3. Select from **540** (540°), **360** (360°), or **180** (180°).

Tilt Angle

To set the maximum angle of the tilt:

1. Go to the **Settings** main level.
2. Select the **Tilt Angle** option.
3. Select from **270** (260°), **180** (180°), or **090** (90°).

Black out on Movement

To set the product to black out while the pan/tilt, color wheel, or gobo wheels are moving:

1. Go to the **Settings** main level.
2. Select from the **BL. O. P/T Move** (black out on pan/tilt movement), **BL. O. Color Move** (black out on color wheel movement), or **BL. O. Gobo Move** (black out on gobo wheel movement) options.
3. Select from **NO** or **YES**.

Swap Pan and Tilt

To swap the controls for the pan and tilt:

1. Go to the **Settings** main level.
2. Select the **Swap XY** option.
3. Select from **NO** (pan controls pan, tilt controls tilt) or **YES** (pan controls tilt, tilt controls pan).

CRMX™ Reset

To reset the wireless Lumenradio CRMX™ connection:

1. Go to the **Settings** main level.
2. Select the **WDMX Reset** option.
3. Select from **NO** or **YES**.

Display Backlight Timer

To set how long before an inactive display will turn off:

1. Go to the **Settings** main level.
2. Select the **Backlight Timer** option.
3. Select the length of the backlight timer, from **30S** (30 seconds), **1M** (1 minute), **5M** (5 minutes), or **ON** (always on).

Loss of Data

To select how the product will respond to a loss of the control signal:

1. Go to the **Settings** main level.
2. Select the **Loss of Data** option.
3. Select from **Hold** (holds last signal received) or **Close** (blacks out fixture).

Fan Mode

To set the fan speed mode:

1. Go to the **Settings** main level.
2. Select the **Fans** option.
3. Select the fan mode, from **Auto** (fan speed adjusts to product temperature), **Full** (fan speed at maximum), **ECO** (quiet mode), **TV25** (maintains a consistent LED output up to an ambient temperature of 77 °F [25 °C]), or **TV35** (maintains a consistent LED output up to an ambient temperature of 95 °F [35 °C]).



When using the fan modes TV25 or TV35, please set the PWM Option to 6000Hz or 15000Hz to prevent any possible harmonization noise.

Dimmer Curve

To set the dimmer curve:

1. Go to the **Settings** main level.
2. Select the **Dimmer Curve** option.
3. Select the dimmer curve, from **Linear**, **Square**, **I Squa**, **SCurve** or **LampCur**.

Pulse Width Modulation

To adjust the frequency of the pulse width modulation:

1. Go to the **Settings** main level.
2. Select the **PWM Option** option.
3. Select the frequency, from **600Hz**, **1200Hz**, **2000Hz**, **4000Hz**, **6000Hz**, or **15000Hz**.

LED Power

To set the maximum power of the LED output:

1. Go to the **Settings** main level.
2. Select the **LED POWER** option.
3. Set the power from **064–255**.

Minimum Zoom Focus

To enable or disable the minimum zoom focus function:

1. Go to the **Settings** main level.
2. Select the **Min Zoom Focus** option.
3. Select from **NO** (disable), or **YES** (enable).

Preset Selection

To select a preset configuration of menu options:

1. Go to the **Settings** main level.
2. Select the **Preset Select** option.
3. Select from **PRESET A** (default), **PRESET B**, or **PRESET C**.



- **Changes to settings automatically save to the currently selected Preset.**
- **If no Preset has been selected, changes to settings save to PRESET A.**
- **After selecting a Preset, the product will restart.**

Preset Synchronization

To transfer saved Presets from one Maverick Storm 1 Flex to another:

1. Connect the Maverick Storm 1 Flex products to receive the Presets by a DMX daisy chain.
2. Make the Maverick Storm 1 Flex with the Presets to transfer the first in the DMX daisy chain.
3. Power on all of the products.
4. Set all of the products to a [Control Mode](#) other than **WDMX** (**DMX**, **ArtNet**, or **sACN**).
5. On the Maverick Storm 1 Flex with the Presets, go to the **Settings** main level.
6. Select the **Preset Sync** option.
7. Select **NO** (to cancel) or **YES** (to transfer the Presets to the connected products).



- All menu configurations are transferred except for the IP address.
- **ONLY** connect Maverick Storm 1 Flex products for this function!

SKY Tracker Mode

To manually control an individual function while in SKY Tracker Mode:

1. Go to the **Settings** main level.
2. Select the **SKY Tracker Mode** option.
3. Select a function to test, from **Dimmer**, **Strobe**, **Cyan**, **Magenta**, **Yellow**, **Color Wheel**, **Gobo**, **Gobo2**, **Prism1**, **Prism2**, **Focus**, **Zoom**, **Shape**, **Pan Offset**, **Tilt Offset**, **Size**, **Speed**, **Fixture Offset**, or **Fixture ID**.
4. Increase or decrease the value of the selected function from **0–255**.

Reset Function

To reset specific functions or the entire product:

1. Go to the **Settings** main level.
2. Select the **Reset Function** option.
3. Select the functions to reset, from **Pan/Tilt**, **Shutter/Prism**, **Color/CMY**, **Gobo/Gobo Rotate**, **Frost/Animation**, or **All**.
4. Select **NO** (to cancel) or **YES** (to reset the selected functions).

Factory Reset

To reset the product to factory settings:

1. Go to the **Settings** main level.
2. Select the **Factory Reset** option.
3. Select **NO** (to cancel) or **YES** (to reset the product configuration).

Test Mode

Auto Test

To have the Maverick Storm 1 Flex automatically test all functions one after the other:

1. Go to the **Test** main level.
2. Select the **Auto Test** option.

Manual Test

To manually test an individual function of the Maverick Storm 1 Flex:

1. Go to the **Test** main level.
2. Select the **Manual Test** option.
3. Select a function to test, from **Dimmer**, **Pan Fine**, **Tilt**, **Tilt Fine**, **P/T Speed**, **Dimmer Fine**, **Shutter**, **Virtual Shaking**, **Cyan**, **Magenta**, **Yellow**, **CTO**, **Color**, **Gobo**, **Gobo Rotate**, **Gobo Index**, **Gobo2**, **Animation**, **Animation Rotate**, **Focus**, **Focus Fine**, **Focus Auto**, **Zoom**, **Zoom Fine**, **Prism1 Rotate**, **Prism2 Rotate**, **Frost**, **CMY Macro**, **CMY Macro Speed**, or **Control**.
4. Increase or decrease the value of the selected function from **0–255** to test it.

System Information

The information section of the menu displays statistics and the current status of the product's various functions. To view this information:

1. Go to the **Information** main level.
2. Select from the **Fixture Information**, **Fan Information**, **Error Information**, or **Channel Information** options.
3. Use **<UP>** and **<DOWN>** to view all information.

Zero Adjust Mode

The Offset mode provides fine adjustments for the home position of every moving part in the optical path as well as the pan and tilt movements. To adjust these options and prevent borders showing or reduction of the light output:

1. From the main level screen, press and hold **<MENU>** until the passcode screen appears.
2. Enter the passcode: **0920** (use **<DOWN>** to cycle digits and **<UP>** to increase the number value) and press **<ENTER>**.
3. Select the “zero” position to adjust, from **PAN, TILT, COLOR, GOBO, GOBO ROTATE, GOBO2, ANIMATION, FOCUS-GOBO, FOCUS-GOBO2, ZOOM, PRISM1, PRISM2, PRISM2 ROT, FROST, Light Block, CYAN, MAGENTA, YELLOW, CTO, DIMMER1, DIMMER2, DIMMER3, DIMMER4, MAC4, MAC5, MAC6, RDM ID4, RDM ID5, or RDM ID6.**
4. Adjust the “zero” position for the selected function from **000–255.**

Web Server

The Maverick Storm 1 Flex Web Server can be accessed by any computer on the same network as the product. It allows network access to system information, settings such as control setup, manual testing of all functions, firmware updates, and the ability to change the Web Server password.

1. Connect the product to power, and set the [Control Mode](#) to **ArtNet** and the [IP Mode](#) to **Static**.
2. Connect the product to a Windows computer with a network cable.
3. On the computer, set the first value of the IP address of the new network to match the first value of the IP address of the product. The IP address of the product is displayed on the [Home Screen](#).
4. Enter the IP address of the product into the URL bar of a web browser on the computer.
5. Enter both the User Name and Password as **admin** to log in.

Information

The Information page on the Web Server displays the current settings and the system information of the Maverick Storm 1 Flex.

Setup

The Setup page on the Web Server provides options for control, similar to the **Setup** menu on the product. Click **Save Settings** to send the new configuration to the product.

Manual Test

The Manual Test page on the Web Server allows all output functions of the product to be controlled through the browser. To set all functions back to default, click **Reset**.

Firmware Update

The Upgrade page on the Web Server allows the product to be updated with the latest firmware. Go to <https://www.chauvetprofessional.com> to download firmware updates.

Security

The Security page on the Web Server gives the option to change the password to the connected product's web server. Enter the old password (**admin**, by default) and the new password twice, then click **Save Settings** to change the password.

Error Codes

See the table below for error codes and recommended solutions:

Error Code	Possible Reason	Potential Solution
AFAN1	A Fan 1 is damaged	Replace A fan 1
	Fan wires have poor connection	Check fan wire connection
Base Fan1	Base Fan 1 is damaged	Replace base fan 1
	Fan wires have poor connection	Check fan wire connection
Base Fan2	Base Fan 2 is damaged	Replace base fan 2
	Fan wires have poor connection	Check fan wire connection
Color	Sensor board is damaged	Replace the color sensor board
	The magnetic rod of the color sensor board is dropped or installed upside down	Check the magnetic rod
CPU-A	The display PCB is damaged	Replace the display board
	CPU-A software upload failed	Re-upload the CPU-A software
CPU-B	The pan/tilt driver PCB is damaged	Replace the pan/tilt driver board
	CPU-B software upload failed	Re-upload the CPU-B software
CPU-C	The gobo/color motor driver PCB is damaged	Replace the gobo/color motor driver PCB
	CPU-C software upload failed	Re-upload the CPU-C software
CPU-D	The zoom/focus motor driver PCB is damaged	Replace the zoom/focus motor driver PCB
	CPU-D software upload failed	Re-upload the CPU-D software
CTO	CTO error	Check module connection
		Ensure nothing is blocking movement
		Do a factory reset
		Update software
CYAN	Sensor board is damaged	Replace the cyan sensor board
	The magnetic rod of the cyan sensor board is dropped or installed upside down	Check the magnetic rod
Focus	Sensor board is damaged	Replace the focus sensor board
	The magnetic rod of the focus sensor board is dropped or installed upside down	Check the magnetic rod
Gobo	Sensor board is damaged	Replace the gobo sensor board
	The magnetic rod of the gobo sensor board is dropped or installed upside down	Check the magnetic rod
Gobo.R	Sensor board is damaged	Replace the gobo rotation sensor board
	The magnetic rod of the gobo rotation sensor board is dropped or installed upside down	Check the magnetic rod
Gobo2	Sensor board is damaged	Replace the gobo2 sensor board
	The magnetic rod of the gobo2 sensor board is dropped or installed upside down	Check the magnetic rod
Light Block	Sunshield error	Check module connection
		Ensure nothing is blocking movement
		Check sensors for +/- 5V when opened and closed
		Do a factory reset
		Update software

Error Code	Possible Reason	Potential Solution
LED_Hot	LED overheated	Do a factory reset
		Update software
		Check connections
		Check fan functions
MAGENTA	Sensor board is damaged	Replace the magenta sensor board
	The magnetic rod of the magenta sensor board is dropped or installed upside down	Check the magnetic rod
MFan1	Lamp M Fan 1 is damaged	Replace lamp M fan 1
	Fan wires have poor connection	Check fan wire connection
MFan2	Lamp M Fan 2 is damaged	Replace lamp M fan 2
	Fan wires have poor connection	Check fan wire connection
Prism1	Prism1 sensor board is damaged	Replace the prism 1 sensor board
	The magnetic rod of the prism 1 sensor board is dropped or installed upside down	Check the magnetic rod
Prism2	Prism 2 sensor board is damaged	Replace the prism 2 sensor board
	The magnetic rod of the prism 2 sensor board is dropped or installed upside down	Check the magnetic rod
Prism2.R	Prism 2 rotation sensor board is damaged	Replace the prism 2 rotation sensor board
	The magnetic rod of the prism 1 rotation sensor board is dropped or installed upside down	Check the magnetic rod
R-OPEN	Thermistor open	Do a factory reset
		Update software
		Check connections
		Replace thermistor
R-SHORT	Thermistor short	Do a factory reset
		Update software
		Check connections
		Replace thermistor
X_cm	Pan magnetic locating board is damaged	Replace the pan magnetic locating board
	Pan/tilt driver board is damaged	Replace the pan/tilt driver board
X_op	Pan optocoupler board is damaged	Replace the pan optocoupler board
	Pan/tilt driver board is damaged	Replace the pan/tilt driver board
Y_cm	Tilt magnetic locating board is damaged	Replace the tilt magnetic locating board
	Pan/tilt driver board is damaged	Replace the pan/tilt driver board
Y_op	Tilt optocoupler board is damaged	Replace the tilt optocoupler board
	Pan/tilt driver board is damaged	Replace the pan/tilt driver board
YELLOW	Sensor board is damaged	Replace the yellow sensor board
	The magnetic rod of the yellow sensor board is dropped or installed upside down	Check the magnetic rod
Zoom	Sensor board is damaged	Replace the zoom sensor board
	The magnetic rod of the zoom sensor board is dropped or installed upside down	Check the magnetic rod
ZFAN1	ZFan 1 is damaged	Replace Z fan 1
	Fan wires have poor connection	Check fan wire connection
ZFAN2	ZFan 2 is damaged	Replace Z fan 2
	Fan wires have poor connection	Check fan wire connection

Error Code	Possible Reason	Potential Solution
ZFAN3	ZFan 3 is damaged	Replace Z fan 3
	Fan wires have poor connection	Check fan wire connection
ZFAN4	ZFan 4 is damaged	Replace Z fan 4
	Fan wires have poor connection	Check fan wire connection
ZFAN5	ZFan 5 is damaged	Replace Z fan 5
	Fan wires have poor connection	Check fan wire connection
ZFAN6	ZFan 6 is damaged	Replace Z fan 6
	Fan wires have poor connection	Check fan wire connection

5. Maintenance

Product Maintenance

Dust build-up reduces light output performance and can cause overheating. This can lead to reduction of the light source's life and/or mechanical wear. To maintain optimum performance and minimize wear, clean each lighting product at least twice a month. However, be aware that usage and environmental conditions could be contributing factors to increase the cleaning frequency.

To clean the product, follow the instructions below:

1. Unplug the product from power.
2. Wait until the product is at room temperature.
3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external surface/vents.
4. Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
5. Apply the solution directly to a soft, lint free cotton cloth or a lens cleaning tissue.
6. Softly drag any dirt or grime to the outside of the transparent surface.
7. Gently polish the transparent surfaces until they are free of haze and lint.



- **Always dry the transparent surfaces carefully after cleaning them.**
- **Dry off this product before storing it in the case. Failure to do so may result in deterioration of the product's housing.**



Do not spin the cooling fans with compressed air. Damage may result.

Torque Measurements

To maintain the IP rating when reassembling the product, use the given torque measurements for each of the following screws and bolts:

Fixture Parts	Torque Rating (Kgf.cm)	Torque Rating (lbf.in)
Screws inside feet	10.1	8.7
Base screws around outside (not the feet)	16.3	14.1
Base screws in middle	35.6	30.8
Omega bracket holder	12.2	10.6
Front and rear base cover	20.3	17.6
Screws around power and data ports	3.5	3.0
Fuse and GORE™ valves	6.1	5.2
Center of yoke plate	15.2	13.1
Arm and head cover screws	25.4	22.0
Front lens cover	10.1	8.7

Vacuum Test Measurements

Use the IP Tester from Chauvet Professional to ensure the product has been reassembled correctly by following the information below:

Parameters	Values
Method	Positive
Test pressure	2.18 PSI
Test duration	60 seconds
PASS state leak pressure	<0.02 kPa

Gobo Maintenance

To ensure optimal operation, 1) inspect and 2) clean gobos every four months. More frequent maintenance may be necessary if usage is higher.


To inspect, remove each gobo holder and check if:

- The holders are clean (free of dirt, grime, or gunk).
- The gobos are properly installed in the holders.
- All the bearings are in place.
- The holders are rotating freely.

To clean the gobos and the gobo holder, follow the instructions below:

1. Remove the gobos from the holder.
2. Clean the gobos with a soft, lint-free cotton cloth. Use an ammonia-free glass cleaner sprayed to a piece of lint-free cotton cloth to clean glass gobos.
3. Submerge the gobo holder (without the gobo installed) in a container with a liquid lubricant (i.e., WD40) and let it rest for a couple of minutes.
4. Shake the container with the gobo holder inside to help release/loosen any gunk/grime/dirt.
5. Take the gobo holder out of the container and clean it using a small nylon brush.
6. Wipe off all the lubricant from the gobo holder using a piece of lint-free cotton cloth.
7. Apply a small coat of synthetic oil (i.e., Liquid Bearings) to the bearings and rotate it thoroughly in both directions (needle tip applicator recommended). Make sure the gobo holder is rotating freely and is not making any abnormal noise.
8. Reinstall the gobos in the gobo holder. Make sure the gobos are in the correct positions.
9. Reinstall the gobo holder in the unit.

Transporting on Truss or Racks

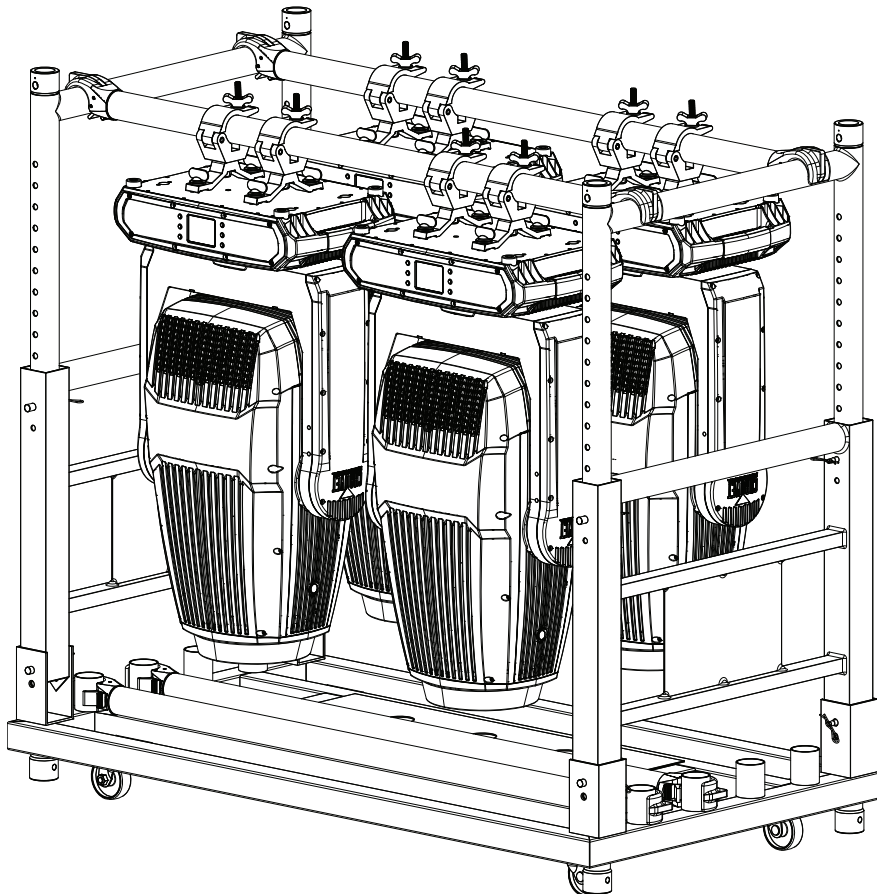

When transporting fixtures in pre-rigged truss and transportation racks, mount fixtures in the vertical position with the lenses facing down and the pan and tilt locks engaged. This is to prevent undue stress on the tilt locks and limit the amount of off-axis bounce on internal components.

6. Technical Specifications

Dimensions and Weight: Dimensions in inches are rounded.

Length	Width	Height	Weight
15.27 in (388 mm)	10.55 in (268 mm)	29 in (738 mm)	63.5 lb (28.8 kg)

Power

Power Supply Type	Range	Voltage Selection
Switching (internal)	100 to 240 VAC, 50/60 Hz	Auto-ranging

Parameter	100 V, 60 Hz	120 V, 60 Hz	208 V, 60 Hz	230 V, 50 Hz	240 V, 50 Hz
Consumption	766 W	754 W	734 W	738 W	730 W
Operating Current	7.67 A	6.25 A	3.60 A	3.30 A	3.11 A
Fuse	T20 A, 250 V	T20 A, 250 V	T20 A, 250 V	T20 A, 250 V	T20 A, 250 V

Power I/O	U.S./Worldwide	UK/Europe
Power Input Connector	Seetronic Powerkon IP65	Seetronic Powerkon IP65
Power Cable plug	Edison	Local plug

Light Source

Type	Color Temperature	Lifespan*	LM-80 Test Duration
1 LED	6595 K	22,938 hours (L70)	6,000 hours

*Test lab conditions. May vary depending on several factors including but not limited to: environmental conditions, power/voltage, usage patterns, (on/off power cycling), control, and dimming.

Photometrics

Color Temperature (at full)	Front Lens Diameter
6,746 K	165 mm

Mode	Beam Angle	Field Angle	Cutoff Angle	Zoom Range	Lumens
Beam	2.6° to 43°	3° to 47.3°	3.4° to 50.7°	2.6° to 50.7°	29,114
Spot	3.1° to 46.6°	4.1° to 57.9°	4.5° to 55.5°	3.1° to 55.5°	33,587
Wash	2.8° to 45.8°	3.7° to 53.1°	3.9° to 57°	2.8° to 57°	30,203

Illuminance (Beam Mode)	Illuminance (Spot Mode)	Illuminance (Wash Mode)
17,538 lux @ 15 m (2.6° zoom)	154,697 lux @ 5 m (3.1° zoom)	146,171 lux @ 5 m (2.8° zoom)
295 lux @ 15 m (50.7° zoom)	2,675 lux @ 5 m (55.5° zoom)	2,478 lux @ 5 m (57° zoom)

Acoustic

Parameter	Idle	Max	ECO	Auto	Full	TV25	TV35
Sound pressure level @1m	29.0 dBA	41.0 dBA	46.4 dBA	40.0 dBA	51.2 dBA	40.7 dBA	40.7 dBA

Thermal

Maximum External Temperature	Cooling System
113 °F (45 °C)	Fan-assisted Convection

Control

DMX I/O Connector	Ethernet I/O Connector	Channel Range
5-pin IP-rated XLR	Seetronic IP-rated RJ45	26 or 33

Ordering

Product Name	Item Name	Item Code	UPC Number
Maverick Storm 1 Flex	MAVERICKSTORM1FLEX	08102629	781462229771



UL 1573
CSA C22.2 No. 166
E113093



RoHS



Contact Us

General Information	Technical Support
Chauvet World Headquarters	
Address: 3360 Davie Rd., Suite 509 Davie, FL 33314 Voice: (954) 577-4455 Fax: (954) 929-5560 Toll Free: (800) 762-1084	Voice: (844) 393-7575 Fax: (954) 756-8015 Email: chauvetcs@chauvetlighting.com Website: www.chauvetprofessional.com
Chauvet U.K.	
Address: Pod 1 EVO Park Little Oak Drive, Sherwood Park Nottinghamshire, NG15 0EB UK Voice: +44 (0) 1773 511115 Fax: +44 (0) 1773 511110	Email: UKtech@chauvetlighting.eu Website: www.chauvetprofessional.eu
Chauvet Benelux	
Address: Vaartlaan 9 9800 Deinze Belgium Voice: +32 9 388 93 97	Email: BNLtech@chauvetlighting.eu Website: www.chauvetprofessional.eu
Chauvet France	
Address: 3, Rue Ampère 91380 Chilly-Mazarin France Voice: +33 1 78 85 33 59	Email: FRtech@chauvetlighting.fr Website: www.chauvetprofessional.eu
Chauvet Germany	
Address: Bruno-Bürgel-Str. 11 28759 Bremen Germany Voice: +49 421 62 60 20	Email: DEtech@chauvetlighting.de Website: www.chauvetprofessional.eu
Chauvet Mexico	
Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2) Zona Industrial Lerma Lerma, Edo. de México, CP 52000 Voice: +52 (728) 690-2010	Email: servicio@chauvet.com.mx Website: www.chauvetprofessional.mx

Warranty & Returns

For warranty terms and conditions and return information, please visit our website.

For customers in the United States and Mexico: www.chauvetlighting.com/warranty-registration.

For customers in the United Kingdom, Republic of Ireland, Belgium, the Netherlands, Luxembourg, France, and Germany: www.chauvetlighting.eu/warranty-registration.